



Installation and Maintenance Manual

## **BG 450 M**

LME22.233C2

Jumo dTRON 316

MB-VEF 412

**Translation of the original instructions.**

**Keep for future use.**

**Read carefully before use.**

178 077 76-9 CR00688 2024-11-05



**MADE IN SWEDEN**

**-sv****1. Manualer på övriga språk**

2. [www.bentone.com\nedladdning](http://www.bentone.com/nedladdning) eller scanna QR-koden.

3. Skriv in brännarens artikelnummer som finns på din typskylt (se bild) och välj ditt språk.


Detaljerad ecodesign information kan laddas ner på:  
[www.bentone.com/ecodesign](http://www.bentone.com/ecodesign).

**-fr****1. Manuels dans d'autres langues**

2. [www.bentone.com/download](http://www.bentone.com/download) ou scannez le code QR.

3. Saisir le numéro d'article du brûleur sur votre plaque signalétique (consultez l'illustration) et sélectionnez la langue.

Des informations détaillées sur l'ecodesign peuvent être téléchargées à l'adresse:  
[www.bentone.com/ecodesign](http://www.bentone.com/ecodesign).

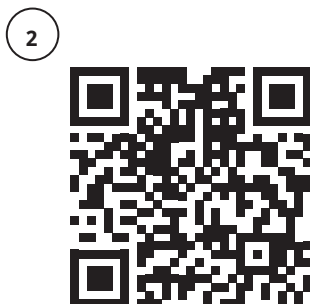**-en****1. Manuals in other languages**

2. [www.bentone.com/download](http://www.bentone.com/download) or scan QR-code.

3. Enter the burner's article number on your data plate (see picture) and select language.


Detailed ecodesign information can be downloaded at:  
[www.bentone.com/ecodesign](http://www.bentone.com/ecodesign).

**-de****1. Gebrauchsanweisungen in anderen Sprachen**

2. [www.bentone.com/download](http://www.bentone.com/download) oder scannen Sie den QR-Code.

3. Geben Sie die Artikelnummer des Brenners auf Ihrem Typenschild ein, (siehe Bild) und wählen Sie die Sprache aus.

Detaillierte Informationen zum Ecodesign können unter  
[www.bentone.com/ecodesign](http://www.bentone.com/ecodesign) heruntergeladen werden.

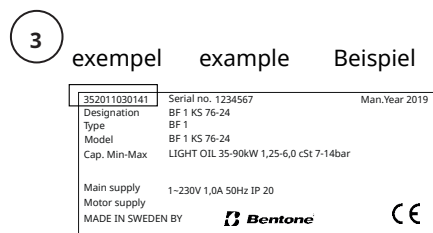

exempel example Beispiel

**-da****1. Manualer på andre sprog**

2. [www.bentone.com/download](http://www.bentone.com/download) eller scann QR-koden.

3. Indtast brænderens artikelnummer, der findes på typeskiltet (se billede), og vælg dit sprog.

Detaljerede oplysninger om ecodesign kan downloades på:  
[www.bentone.com/ecodesign](http://www.bentone.com/ecodesign).

# Table of contents

<b>1. General Information.....</b>	<b>5</b>	<b>6. Mounting .....</b>	<b>35</b>
1.1 Delivery inspection.....	5	6.1 Gas nozzle.....	36
1.2 Safety .....	5	6.2 De-aerating.....	37
1.3 What to do if you smell gas.....	6	6.3 Leakage control.....	37
<b>2. Technical data.....</b>	<b>7</b>	6.4 Calculation of gas flow .....	38
2.1 Dimensions BG 450 M .....	7	<b>7. Settings .....</b>	<b>39</b>
2.3 Gas categories, approved gases.....	8	7.1 Nozzle assembly adjustment.....	39
2.4 Technical specification .....	8	7.2 Startup.....	39
2.5 Working field .....	8	7.3 Control of combustion .....	39
2.2 Capacity range.....	8	7.4 Setting the air pressure switch .....	40
2.6 Components.....	9	7.5 Setting the gas pressure switch, min.....	41
2.7 Skeleton diagrams .....	10	7.6 Setting Damper motor, Modulating operation .....	42
<b>3. Electric equipment.....</b>	<b>11</b>	<b>8. Gas valve, MultiBloc MB-VEF 407-412 .....</b>	<b>43</b>
3.1 Safety system .....	11	<b>9. Service .....</b>	<b>46</b>
3.2 Wiring diagram.....	11	9.1 Burner Service Schedule, Gas .....	46
3.3 Function .....	12	9.2 Component replacement intervals.....	46
3.4 Control program at faults; fault mode indicator LME .....	13	9.3 Combustion device .....	47
<b>4. Controller JUMO dTRON 316.....</b>	<b>15</b>	9.4 Air damper .....	48
4.1 Preface.....	15	9.5 Replacement, Damper motor.....	49
4.2 Scope of delivery.....	15	9.6 Fan .....	50
4.3 Mounting .....	15	9.7 Vibrations.....	51
4.4 Electrical connection .....	16	9.8 Control of flame monitoring and ionization current .....	52
4.5 Displays and keys.....	17	9.9 Replacement of electrical components.....	54
4.6 Operation.....	18	<b>10. Handing over of the installation .....</b>	<b>55</b>
4.7 Parameter level „PArA“.....	21	<b>11. Troubleshooting.....</b>	<b>56</b>
4.8 Configuration level „ConF“.....	22	<b>12. Service- and inspection protocol .....</b>	<b>58</b>
4.9 Autotuning.....	25		
4.10 Alarms.....	25		
4.11 Factory settings Controller JUMO .....	26		
<b>5. Installation.....</b>	<b>33</b>		
5.1 General instructions .....	33		
5.2 Instructions .....	33		
5.3 Inspection and maintenance.....	33		
5.4 Preparation for assembly .....	33		
5.5 Gas supply .....	33		
5.6 Electric connection .....	33		
5.7 Handling and lifting instruction .....	34		



# 1. General Information

The burner may only be used for its intended purpose in accordance with the product's technical data.

We reserve the right to make design changes and cannot be held liable for any misprints or typographical errors.

Modifying the design or using accessories or components that have not been approved by CTC in writing is strictly prohibited.

This Installation and Maintenance manual:

- is to be regarded as part of the burner and must always be kept near the installation site.
- must be read prior to installation.
- is intended for use by authorised personnel.

## 1.1 Delivery inspection

- Make sure everything is delivered and the goods have not been damaged during transit. Transport damage should be reported to the shipping company.
- If something is wrong with a delivery, report it to the supplier.

## 1.2 Safety

### - before installation:

- Installation and work on the burner and associated system components may only be carried out by persons who have undergone relevant training.
- The product is packaged to prevent damage from occurring when handled – Handle the product with care! Lifting equipment must be used to lift larger packages.
- The products must be transported/stored on a level surface in a dry environment, max. 80% relative humidity, no condensation. Temperature -20 to +60 °C.



### - installation:

- The burner must be installed in accordance with local regulations for fire safety, electrical safety, and fuel distribution.
- The premises must comply with local regulations pertaining to use of the burner and must have adequate air supply.
- The installation site must be free of chemicals.
- Fire extinguisher with Class BE recommended.
- Make sure when installing the burner that there is enough space to service the burner.
- The electrical installation must be professionally carried out in accordance with current mains electricity regulations and in a professional manner.
- Make sure that the burner is suitable for the application (see Technical Data).
- All components must be installed without being bent, twisted or subjected to mechanical or thermal forces that affect components.

- Care must be taken by the installer to ensure that no electrical cables or fuel lines are pinched or otherwise damaged during installation or service.
- Sharp edges can occur on, for example: flame tube, fan wheel and air damper.
- The gas outlet from the pressure regulator must be configured in accordance with applicable regulations and lead to a safe area.

#### **- before first start:**

- The burner must not be put into operation without proper safety and protection devices.
- Permitted ambient temperature during operation -10 to +60 °C. Max. 80% relative humidity, no condensation.
- The surface temperature of the burner's components may exceed 60 °C.
- Handle with caution – the burner has moving parts, and there is risk of crushing injuries.
- Seal inspections must be performed during installation and servicing to prevent leakage.
- Fitting and installation work has been completed and approved.
- Electrical installation has been correctly performed.
- Flue gas ducts and combustion air ducts are not blocked.
- All actuators and control and safety devices are in working order and correctly set.
- If the boiler is equipped with an access hatch, this must be equipped with a hatch opening switch connected to the burner's safety system.
- When in operation, the burner's noise level can exceed 85 dBA – use hearing protection!

#### **- operation:**

- Carry out all stipulated settings, service and inspection work within the set time.

### **1.3 What to do if you smell gas**

- Turn off the fuel supply.
- Turn off the device and remove the boiler from operation.
- Open windows and doors.
- Prevent open flames or sparking, e.g. do not turn lights on or off, do not use any electrical appliances or mobile phones.
- Evacuate the building.
- Notify the installer or gas supplier of the problem so that it can be rectified.



## 2. Technical data



### The burner is intended for:

- Operation in installations according to EN 303 and EN 676.

### Fuels:

- Natural gas H, E, L, LL.
- LPG, Butane and Propane.

### 2.1 Dimensions BG 450 M

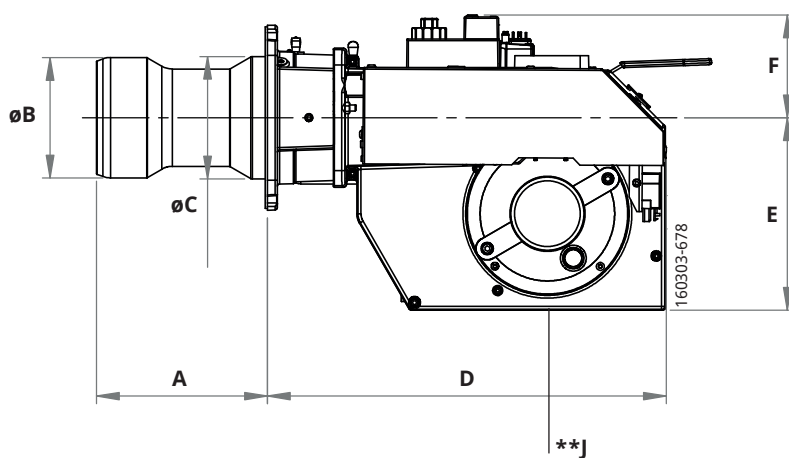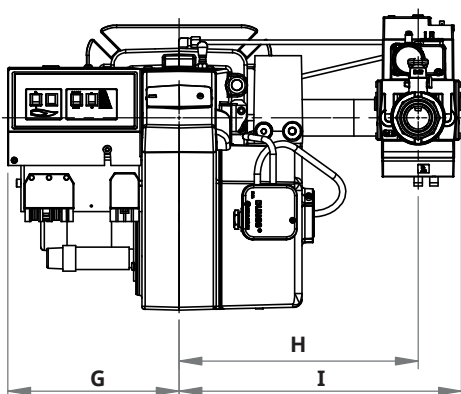

Length of flame tube	Flame tube measure A	Flame tube measure B	Flame tube measure C
256	226	ø159	ø162
356	326	ø159	ø162
456	426	ø159	ø162


D	E	*F	G	H	*I	**J
528	255	330	227	316	500	200

\* The above dimensions are max. measurements. Depending on the components used, the measurements may vary.

\*\* Min. recommended distance to floor.

#### 2.1.1 Measurements for connection to the boiler

K	L	M
14	(Ø 210) Ø 255-290	ø170

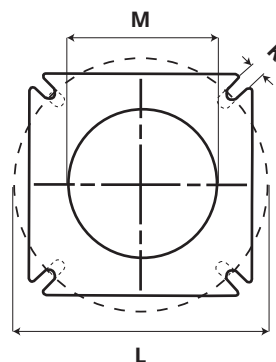

## 2.2 Capacity range

Capacity kW	Gas quantity at min. power Nm <sup>3</sup> /h	Gas quantity at max. power Nm <sup>3</sup> /h	Max. connection pressure mbar	Min connection pressure mbar
<b>450 / 450i</b>				See data plate.
G20 120 - 550	12.7	58.2	360	
G25 120 - 550	14.8	67.7	360	
G30 120 - 550	3.7	17.1	360	
G31 120 - 550	4.9	22.5	360	

160303-681-3

Gas quantity and capacity vary according to grade of gas and connection pressure.

## 2.3 Gas categories, approved gases

Only dry gas is permitted for use.

Category	Country of destination	Supply pressure
II <sub>2R3R</sub>	AT, BE, BG, CH, CY, CZ, DE, DK, EE, ES, FI, FR, GB, GR, HR, HU, IE, IS, IT, LT, LU, LV, MK, MT, NL, NO, PL, PT, RO, RS, SE, SI, SK, TR	20 mbar
II <sub>2H3B/P</sub>	AT, CH, CY, DK, FI, LT, RO, SE, SK	20 mbar
II <sub>2H3P</sub>	GB, IE	20 mbar
II <sub>2L3B/P</sub>	RO	20 mbar
II <sub>2E3B/P</sub>	PL	20 mbar
I <sub>2E(R)B</sub>	BE	20 mbar
I <sub>3P</sub>	BE	20 mbar
II <sub>2EK3B/P</sub>	NL	20 mbar

160302-239-4

## 2.4 Technical specification


BG 450 M	
Main supply	230V, 1~, 4.6A, 50Hz, IP20
Max fuse rating, Operation	6.3A
Max fuse rating, Motor	10A
NO <sub>x</sub> -class	3
Sound power (dBA) L <sub>WA</sub>	89dBA

Measurements according to EN 15036-1:2006

Alt.1 The noise level of the burner can be reduced by equipping the burner with silencer. Installation must be done so it does not prevent air supply to the burner.

Alt.2 The burner's noise level can be reduced by connecting the burner's air intake to the air duct that opens into an appropriate location. Installation must be done so it does not prevent air supply to the burner.

## 2.5 Working field

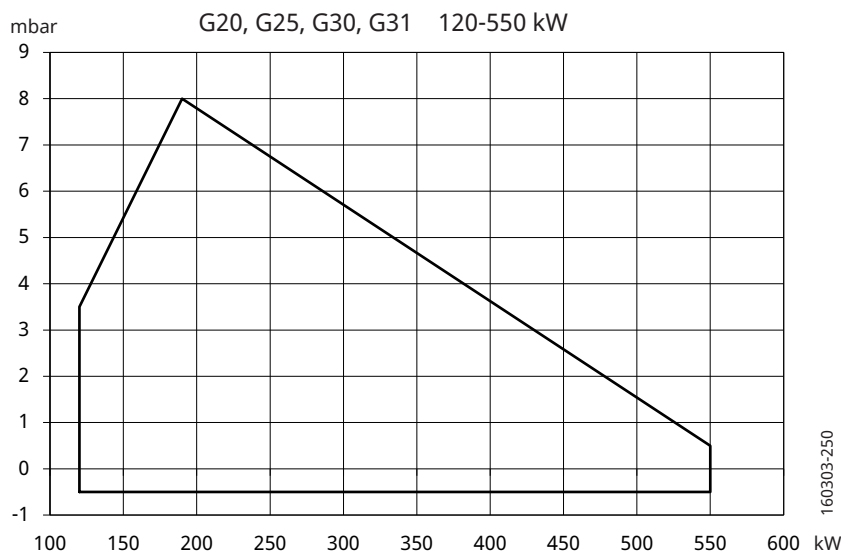


160303-250

**!** Do not exceed working field.




## 2.6 Components

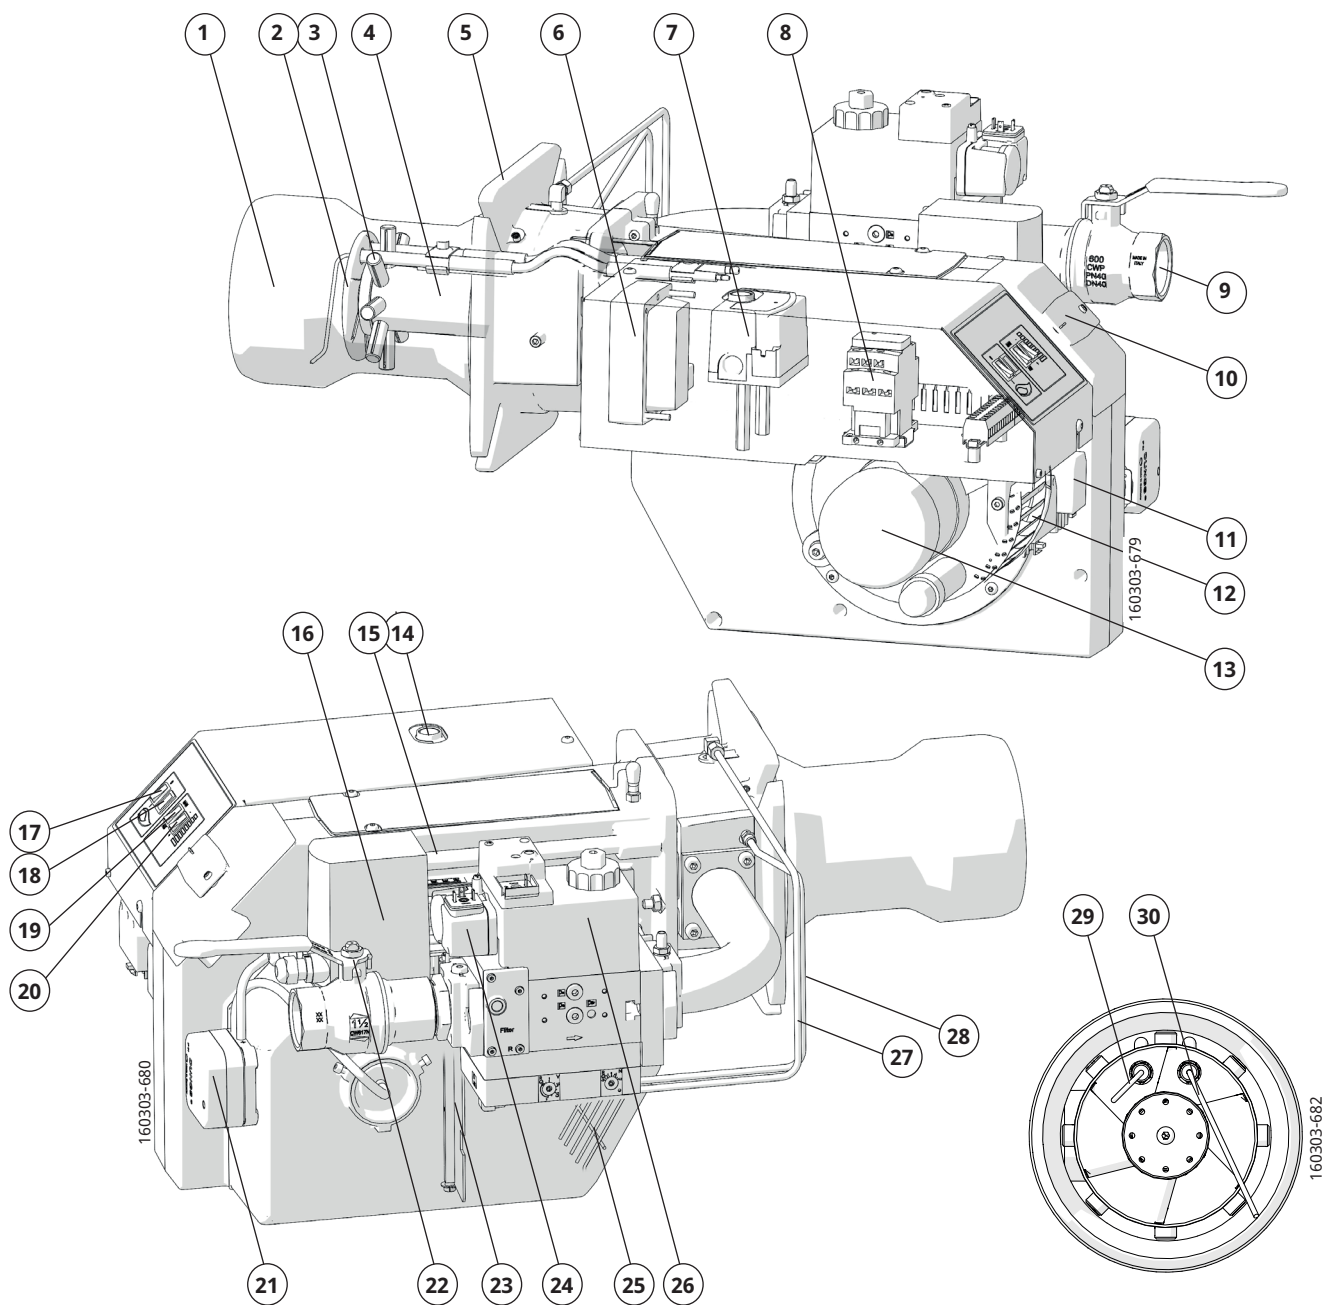

- |                             |  |                              |
|-----------------------------|--|------------------------------|
| 1. Flame tube               | 11. Electrical connection                | 21. Air pressure switch      |
| 2. Brake plate              | 12. Fan wheel                            | 22. Ball valve               |
| 3. Nozzle                   | 13. Motor                                | 23. Air damper               |
| 4. Nozzle assembly          | 14. Reset button                         | 24. Gas pressure switch, min |
| 5. Fixing flange            | 15. Nozzle assembly adjustment           | 25. Air intake               |
| 6. Transformer              | 16. Damper motor                         | 26. Gas valve (MultiBloc)    |
| 7. Burner control           | 17. Switch 0-I                           | 27. Impulse line $P_F$       |
| 8. Contactor                | 18. Indication lamp, operation           | 28. Impulse line $P_L$       |
| 9. Connection, gas          | 19. Changeover switch, man-auto          | 29. Ignition electrode       |
| 10. Cover, inspection glass | 20. Changeover switch, increase-decrease | 30. Ionization electrode     |

## 2.7 Skeleton diagrams

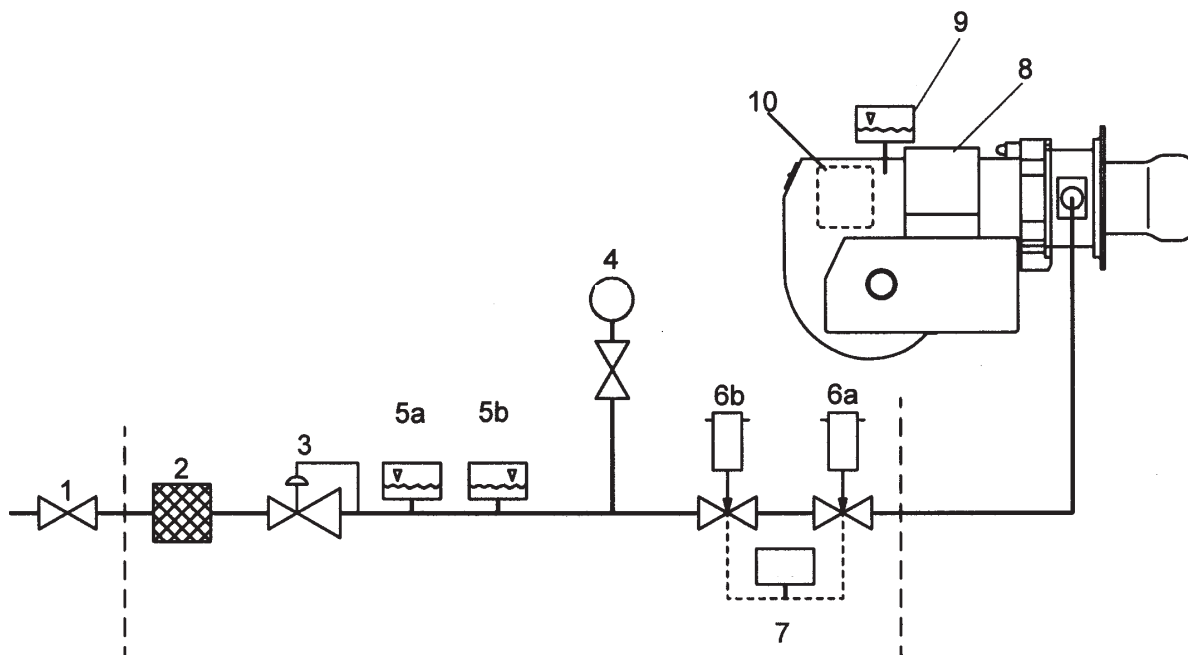

1. Ball valve
2. Filter
3. Pressure regulator
4. Pressure gauge with shut-off cock
- 5a. Gas pressure switch, min
- 5b. Gas pressure switch, max
- 6a. Main valve, 2-stage. In modulating operation, this valve is equipped with controls for variable opening.
- 6b. Safety valve
7. <sup>1)</sup> Leakage control
9. Air pressure switch
10. Burner control

Pos. 5b, 7: Components not required according to EN 676.

<sup>1)</sup> Required over 1200 kW according to EN 676.


### 3. Electric equipment

#### 3.1 Safety system

The safety system (safety switch for hatches, doors, water level, pressure, temperature and other safety devices) must be installed in the safety circuit in accordance with current regulations for the system.

The cables of the safety system must be separated so that the outgoing signal is not placed in the same cable as the incoming signal.

#### 3.2 Wiring diagram

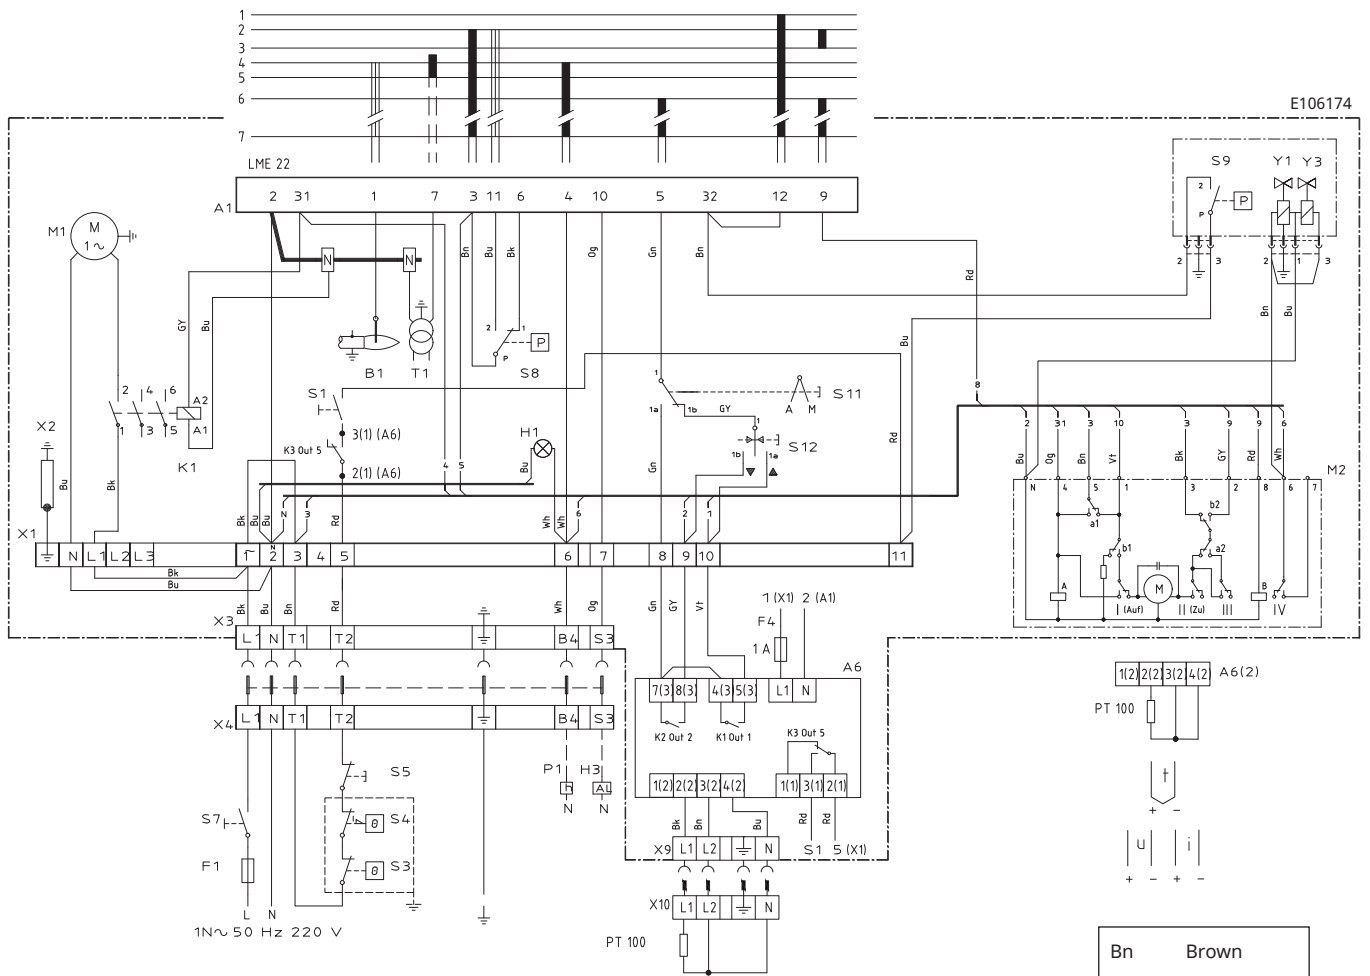


### 3.2.1 Components

A1	Burner control	P1	Time counter, total operating time	T1	Ignition transformer
A6	Power control R316	S1	Operating switch	X1	Connection terminal board
A6 (2)	PT 100-sensor, Thermocouple, current/voltage	S3	Control thermostat	X2	Earth terminal
B1	Ionization electrode	S4	Temperature limiter	X3	Plug-in contact, burner
F1	Operating fuse	S5	Safety switch for hinged door	X4	Plug-in contact, boiler
F4	Operating fuse 1A	S7	Main switch	X9	Plug-in contact, power controller R316, burner
H1	Operating lamp	S8	Air pressure switch	X10	Plug-in contact, power controller R316
H3	Alarm signal 230V	S9	Gas pressure switch, min	Y1	Solenoid valve 1
K1	Contacteur	S11	Change-over switch, Man-Auto	Y3	Safety solenoid valve
M1	Motor	S12	Change-over switch, Increase- Decrease		
M2	Damper motor				

### 3.3 Function

- Operating switch ON-Thermostat ON-Gas pressure switch ON-Air damper closed.**  
Check that the air pressure switch does not indicate fan pressure, then the motor starts.
- Damper motor opens.**  
The damper motor opens the damper to the maximum load position. Check that the air pressure switch indicates sufficient fan pressure.
- Damper motor closes.**  
The damper motor closes to the minimum load position, then the ignition spark is produced.
- Main and safety valves open.**  
The gas ignites and the ionisation electrode indicates flame.
- The safety time ends.**  
Ignition spark and safety time cease. If the spark is missing or it disappears after this time limit, the gas burner control is blocked.
- Operating position.**  
The burner is in operating mode and can now switch to the capacity controlled by the controller.
- Stop.**  
The burner operation can be stopped with the operating switch or the thermostat.

 Mains connection and fuse in accordance with local regulations.

#### If the gas burner control is blocked

The red light in the gas burner control comes on. The burner is restarted by pressing the reset button.

### 3.2.2 Technical data

	LME22.232C2E
Preignition time	3 s
Prepurge time	20 s
Postignition time	2.5 s
Safety lockout time	< 3 s
Reset time after lockout	< 1 s
Reaction time on flame failure	< 1 s
Min. ionisation current at flame	5 $\mu$ A
Max. ionisation current	20 $\mu$ A

160303-325

### 3.4 Control program at faults; fault mode indicator LME ....


#### 3.4.1 Colour codes

Table colour codes for multi-coloured signal light (LED)		
Status	Colour codes	Colours
Waiting period «tw», other waiting periods	○.....	Off
Ignition phase, ignition controlled	●○○●○○●○○●	Blinking yellow
Normal operation	□.....	Green
Operation, poor flame signal	□○□○□○□○□○	Blinking green
Illegal flame signal during start-up	□▲□▲□▲□▲□▲	Green-Red
Undervoltage	●▲●▲●▲●▲●▲	Yellow-Red
Fault, alarm	▲.....	Red
Blinking code for fault codes	▲○▲○▲○▲○	Blinking red
Interface diagnostics	▲▲▲▲▲▲▲▲	Red flicking

.....	Continuous
○	Off
▲	Red
●	Yellow
□	Green

#### 3.4.2 Diagnosing alarm causes

After alarm disconnection, the red alarm signal light is lit continuously.  
 The diagnosing of the alarm cause can be read according to the following sequence:

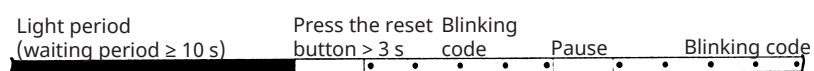

### 3.4.4 Alarm code table

Red blinking code on signal lamp (LED)	Possible causes
Blinking 2 x ..	No flame creation at End of "TSA" <ul style="list-style-type: none"> <li>- defective or fouled flame monitoring.</li> <li>- defective or fouled fuel valves.</li> <li>- poor burner setting.</li> <li>- defective firing device.</li> </ul>
Blinking 3 x ...	"LP" defective <ul style="list-style-type: none"> <li>- No air pressure switch signal after "t10".</li> <li>- "LP" is welded in open position.</li> </ul>
Blinking 4 x ....	Illegal flame signal during start-up.
Blinking 5 x .....	Time out "LP" <ul style="list-style-type: none"> <li>- "LP" is welded in open position.</li> </ul>
Blinking 6 x .....	Free
Blinking 7 x .....	Too many flame disappearances during operation. <ul style="list-style-type: none"> <li>- poor burner setting.</li> <li>- defective or fouled fuel valves.</li> <li>- defective or fouled flame monitoring.</li> </ul>
Blinking 8 x .....	Free
Blinking 9 x .....	Free
Blinking 10 x .....	Connection fault or internal fault, outgoing contacts or other faults.
Blinking 14 x .....	CPI contact not closed.

During the diagnosing of the alarm cause, the control outputs are voltage-free.

- The burner is disconnected.
- Exception, alarm signal «AL» at board 10.
- Reconnection of the burner happens after resetting only.
- Press the reset button 0.5...3 s.

### 3.4.3 Interface diagnostics

To change to interface mode, press and hold the reset button longer than 3 s. To go back to the normal position, press and hold the reset button longer than 3 s. If the gas burner control is in the alarm position, it is reset by pressing the reset button 0.5...3 s.

## 4. Controller JUMO dTRON 316



### 4.1 Preface

These brief operating instructions only cover those actions that are essential for starting up the controller.

The complete configuration options can be found in the comprehensive Operating Manual or can be downloaded from: <http://www.jumo.net>.

### 4.2 Scope of delivery


- Controller
- Seal
- Mounting brackets

### 4.3 Mounting

Type	dTRON	Panel cut-out
703041	316, in 48 mm x 48 mm format	45 +0,6mm x 45 +0,6mm


#### 4.3.1 Fitting in position

- Fit the seal that is supplied onto the instrument body.
- Insert the controller from the front into the panel cut-out.
- From the back of the panel, push the mounting frame onto the instrument body and press it against the back of the panel, compressing the springs, until the latches snap into the notches provided and it is firmly fixed in position.

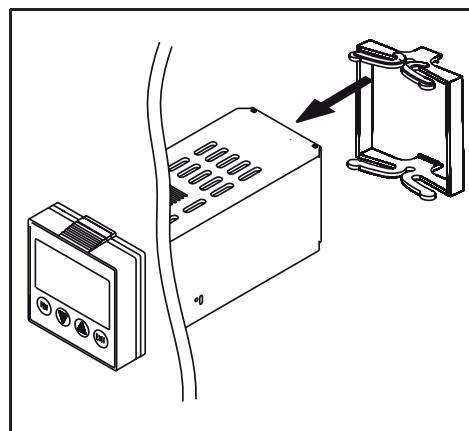


## 4.4 Electrical connection

### 4.4.1 Connection diagram

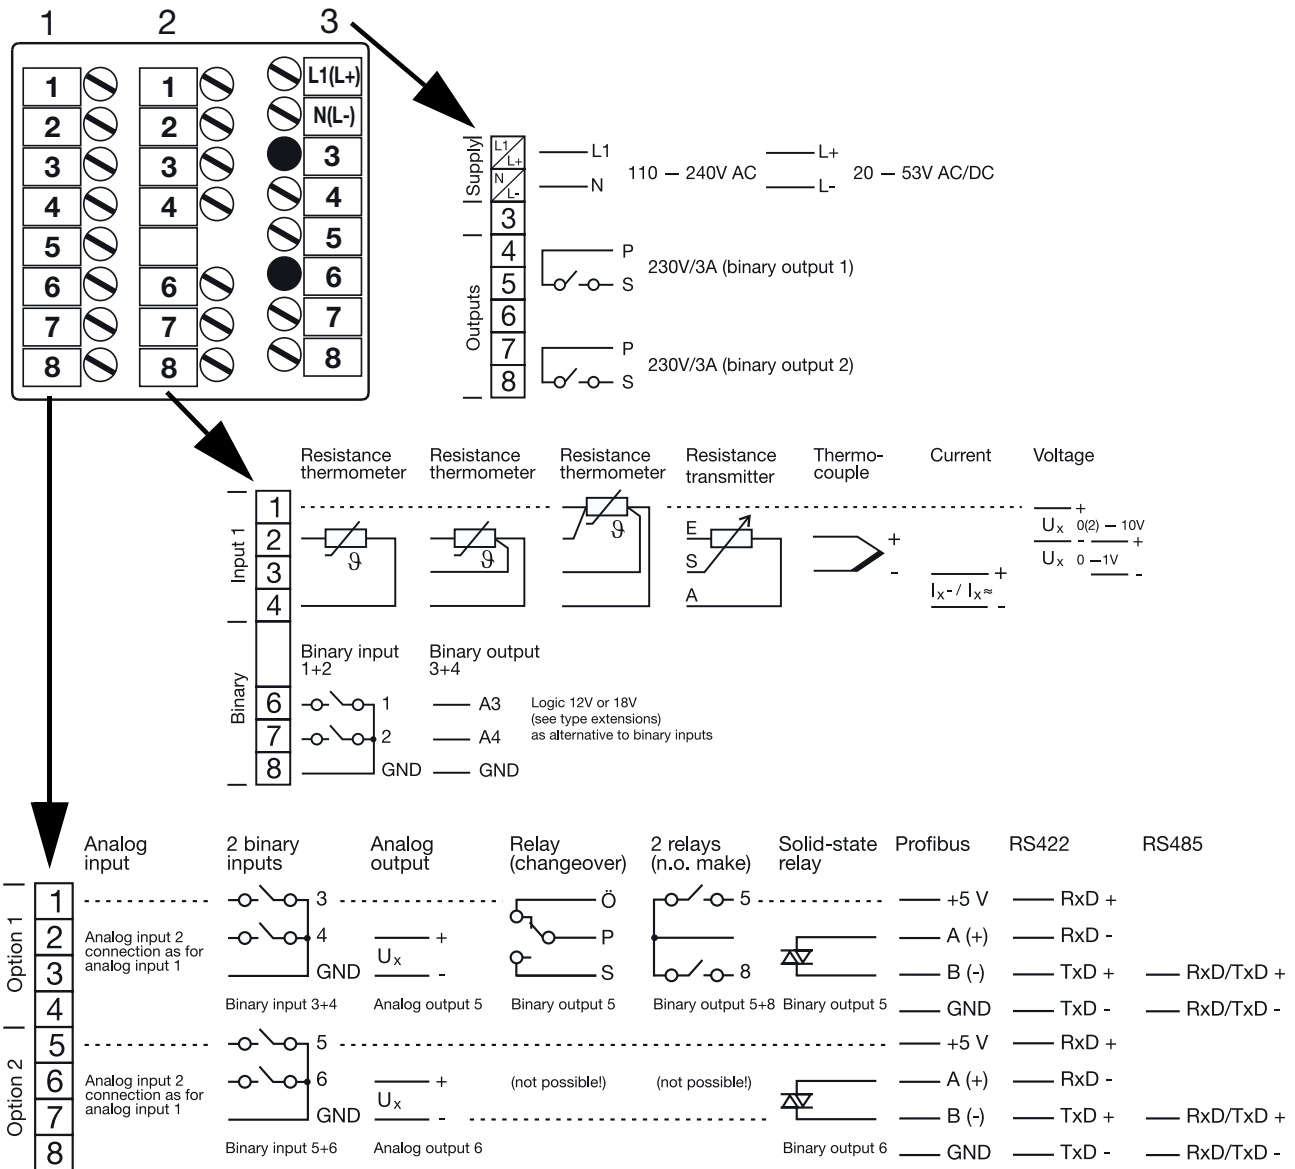



## 4.5 Displays and keys

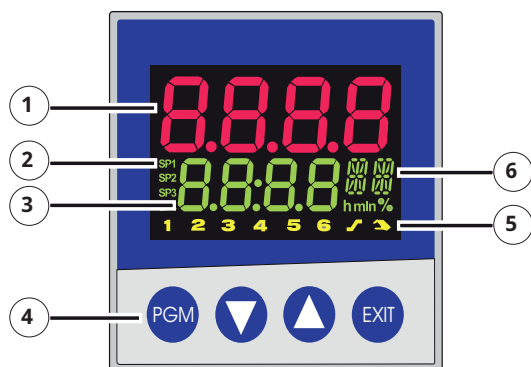


1	<b>7-segment display (factory setting: process value)</b> four-digit, red, decimal place is configurable (automatic adjustment on display overflow)
2	<b>Active setpoint (factory setting: SP1)</b> SP1, SP2, SP3, SP4 (SP=setpoint); green;
3	<b>7-segment display (factory setting: setpoint)</b> four-digit, green, decimal place is configurable; also used for operator prompting (display of parameter and level symbols)
4	<b>Keys</b>
5	<b>Indication</b> yellow, for - switch status of binary outputs 1—6 (display lights up = on) - ramp/program function is active - manual operation is active
6	<b>16-segment display + dim. units</b> two-digit, green; for the unit °C/°F and symbols for h, min, %.

Different values can also be visualized on the display, see the comprehensive operating manual.

## 4.6 Operation

### 4.6.1 Levels

The diagram below shows the three instrument levels.

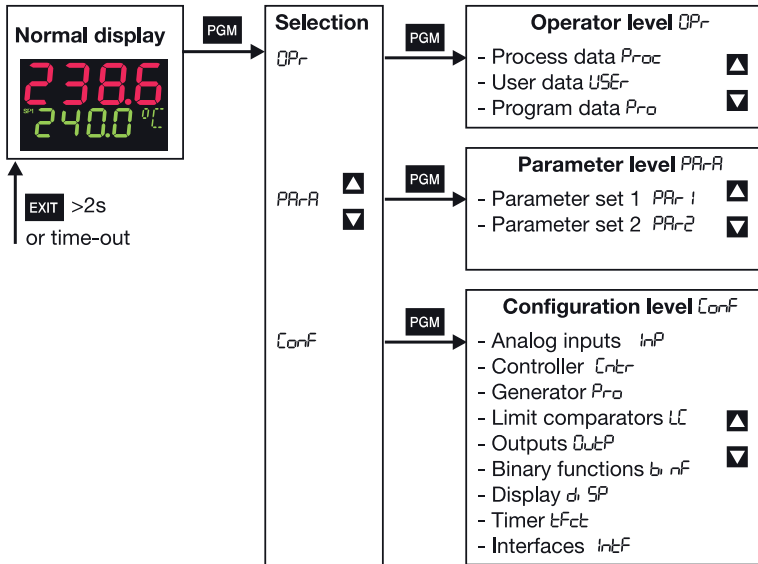

### 4.6.2 Level inhibit

The access to the individual levels can be inhibited by entering a code number.

\* Press **PGM** and **▼** simultaneously for >5sec to enter the code.

Code	Operator level	Parameter level	Configuration level
0	enabled	enabled	enabled
1	enabled	enabled	inhibited
2	enabled	inhibited	inhibited
3	inhibited	inhibited	inhibited


\* Alter code with **PGM** (display blinks)

\* Enter code with **▲** and **▼**

\* Return to normal display with **EXIT** or automatically after approx. 30sec

### 6.3 Entering values

When entries are made within the levels, the parameter symbol is shown in the lower display.

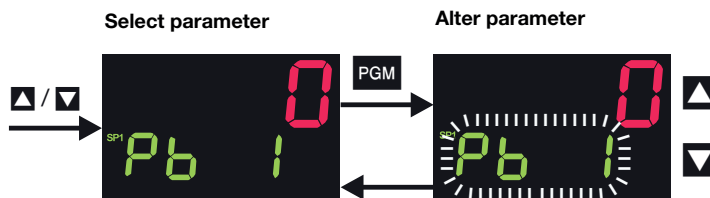

\* Select parameter with **▲** or **▼**

\* Change to the entry mode with **PGM** (lower display blinks)

\* Alter value with **▲** and **▼**

The value alters dynamically with the duration of the key stroke.

\* Accept the setting with **PGM** or automatically after 2sec


\* or

\* Cancel entry with **EXIT**.

The value is not accepted.

### 4.6.3 Entering times

When entering times (e.g. time of timer), the time unit is shown in addition.

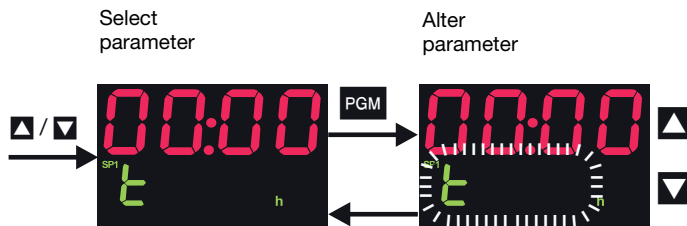


The highest time unit of the display is shown for the unit.  
For example, if "h" is shown for the hour, then the time format for the value is hh:mm.

- \* Select parameter with ▲ or ▼
  - \* Change to the entry mode with PGM (lower display blinks)
  - \* Alter value with ▲ and ▼  
The value alters dynamically with the duration of the key stroke.
  - \* Accept the setting with PGM or automatically after 2sec
- or
- \* Cancel entry with EXIT.  
The value is not accepted.

### 4.6.4 Operation of the fixed-setpoint controller

- ☞ **The fixed-setpoint controller will only function if**
- the fixed-setpoint controller function has been configured ( $F_{nct} = 0$ )

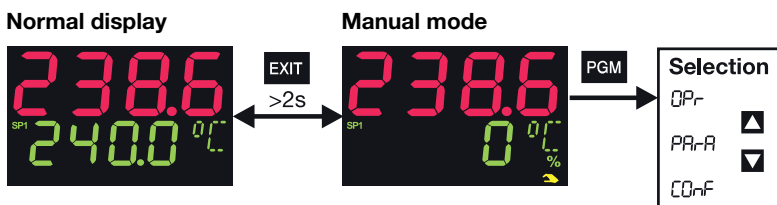

- \* Alter the present setpoint with ▲ and ▼  
The value is accepted automatically.


The controller output appears in the lower display. The hand symbol and the unit "%" light up in addition.

- \* Alter the output with ▲ and ▼  
In the case of a modulating controller, the actuator is opened or closed using the keys.  
The output entry on a changeover is configurable.

- \* Return to the normal display with EXIT (press for more than 2 seconds)

### 4.6.5 Operation of the program controller

- The program controller will only function if**
- the program controller function has been configured (  $F_{nct} = 1 \dots 4$  )
  - the program setpoints (  $SP_1 \dots SP_8$  ) and segment times (  $t^P_1 \dots t^P_8$  ) have been entered

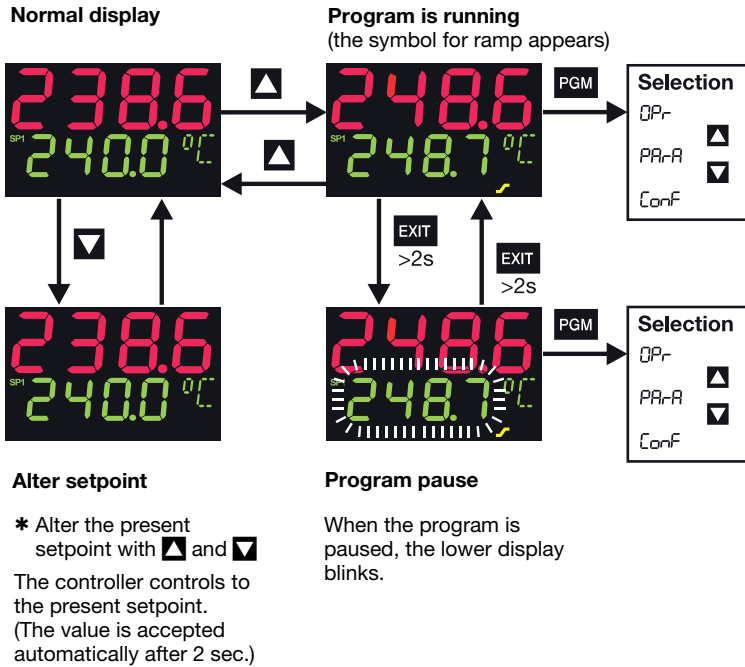

The program is canceled in the event of a power failure.

## 4.6.6 Operator level „OPr“

### Process data $P_{rOC}$


Symbol	Meaning
$SP_1$	Setpoint 1 (editable)
$SP_2$	Setpoint 2 (editable)
$SP_3$	Setpoint 3 (editable)
$SP_4$	Setpoint 4 (editable)
$SP_r$	Ramp setpoint (only if configured)
$inP_1$	Measurement of analog input 1
$inP_2$	Measurement of analog input 2 (only if available)
$F_1$	Calculated result of math formula 1 (only if available)
$F_2$	Calculated result of math formula 2 (only if available)
$y$	Output
$t_{run}$	Program run time (only with program controller/generator)
$t_{rE5}$	Residual program time (only with program controller/generator)
$t_1$	Timer: time 1 (only if configured)
$t_2$	Timer: time 2 (only if configured)

### User data $USE_r$ (through the setup program only)

Any parameter (up to eight) can be displayed and edited here by using the setup program.

### Program data $P_{rO}$ (only with program controller/generator)

A program with up to eight segments is defined here, via the segment setpoints  $SPP_1 \dots SPP_8$  and segment times  $tP_1 \dots tP_8$ .

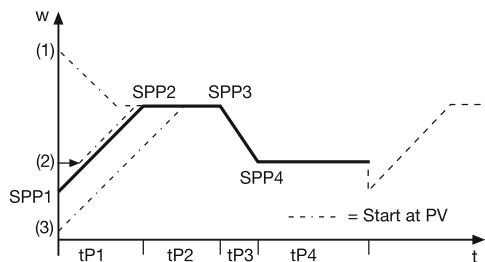

## 4.7 Parameter level „PARA“

Two parameter sets, PAR1 und PAR2, can be stored.

Parameter	Symbol	Value range	Factory setting
Proportional band 1 <sup>a</sup>	$Pb_1$	0 ... 9999 °C/°F	0 °C/°F
Proportional band 2 <sup>b</sup>	$Pb_2$	0 ... 9999 °C/°F	0 °C/°F
Derivative time <sup>c</sup>	$dt$	0 ... 9999 s	80 s
Reset time <sup>d</sup>	$rt$	0 ... 9999 s	350 s
Actuator time $t_t$	$t_t$	5 ... 3000 s	60 s
Cycle time 1	$tY_1$	0.0 ... 999.9 s	20 s
Cycle time 2	$tY_2$	0.0 ... 999.9 s	20 s
Contact spacing	$db$	0.0 ... 999.9 °C/°F	0 °C/°F
Switching differential 1 <sup>e</sup>	$HYS_1$	0.0 ... 999.9 °C/°F	1 °C/°F
Switching differential 2	$HYS_2$	0.0 ... 999.9 °C/°F	1 °C/°F
Working point	$W0$	-100 ... +100 %	0 %
Output limiting (max.)	$Y1$	0 ... 100 %	100 %
Output limiting (min.)	$Y2$	-100 ... +100 %	-100 %

- with  $Pb_{1/2}=0$ , the controller structure is not effective; depending on the display configuration, these values are shown with the corresponding decimal places
- for controller output 2 (with 3-state controllers)
- with  $dt=0$ , the controller has no differential action (e. g. PI controller)
- with  $rt=0$ , the controller has no integral action (e. g. PD controller)
- for controllers with  $Pb_{1/2}=0$

## 4.8 Configuration level „ConF“

Depending on the equipment level of the instrument, individual parameters or groups of parameters are switched out of display.

### Analog selector

With some parameters, you can choose from a series of analog signals.

The list below gives you an overview of the selection options.

0	no function
1	Analog input 1
2	Analog input 2
3	Process value (controller)
4	Setpoint (controller))
5	Ramp end value
6	Program setpoint
13	Controller output level
14	Controller output 1
15	Controller output 2

### 4.8.1 Analog inputs “InP”

→ *InP1* Analog input 1 →

→ *InP2* Analog input 2 →

	Parameter	Symbol	Value range
A	Sensor type	SEN5	0... <b>1</b> ...11
B	Linearization	LIN	0... <b>1</b> ...18
	Measurement offset	OFF5	-1999... <b>0</b> ...+9999
	Display start	SCL	-1999... <b>0</b> ...+9999
	Display end	SEH	-1999... <b>100</b> ...+9999

Factory settings are shown **bold**.

A	Sensor type	
	0 no function	6 Heater current 0 – 50mA AC
	1 Resistance thermometer in 3-wire circuit	7 0 – 20mA
	2 Resistance thermometer in 2-wire circuit	8 4 – 20mA
	3 Resistance thermometer in 4-wire circuit	9 0 – 10V
	4 Thermocouple	10 2 – 10V
	5 Resistance transmitter	11 0 – 1V

## 4.8.2 Configuration level „ConF“

<b>B</b> Linearization	
0 Linear	10 Thermocouple type U
1 Pt100	11 Thermocouple type L
2 Pt500	12 Thermocouple type K
3 Pt1000	13 Thermocouple type S
4 KTY11-6	14 Thermocouple type R
5 Thermocouple type C	15 Thermocouple type B
6 Thermocouple type D	16 Thermocouple type N
7 Thermocouple type E	17 Thermocouple W3Re-W26Re
8 Thermocouple type T	18 Customized linearization
9 Thermocouple type J	

→ in i2 Analog input 1 and 2 general →

Parameter	Symbol	Value range
Temperature unit	$U_{in} t$	<b>0</b> ... 1 (0=°C, 1=°F)
Sampling cycle time	$Cycl$	<b>0</b> ... 3 (0=50ms; 1=90ms; 2=150ms; 3=250ms)

Factory settings are shown **bold**.

## 4.8.3 Controller „Cntr“

Parameter	Symbol	Value range
Controller type	$CtYP$	0 no function <b>1 Two-state controller</b> 2, 3 Three-state, modulating controller 4 Continuous controller
Control action	$CAct$	<b>0</b> ... <b>1</b> (0=direct (cooling); 1=inverse (heating))

Factory settings are shown **bold**.

## 4.8.4 Generator „Pro“

Parameter	Symbol	Value range
Function	$Funct$	<b>0 Fixed-setpoint controller</b> 1 Ramp function 2 Program controller 3 Program generator 4 Hot-channel controller

Factory settings are shown **bold**.

## 4.8.5 Outputs „OutP“

### Numbering of the outputs

Standard: relay 1=output 1; relay 2=output 2; binary output 1=output 3; binary output 2=output 4

Slot	Plug-in board with 1 analog output	Plug-in board with 1 binary output	Plug-in board with 2 binary outputs
Option 1	Output 5	Output 5	Output 5+8
Option 2	Output 6	Output 6	Output 6+9
Option 3	Output 7	Output 7	Output 7+10

→ Analog output *OutA* → Output 5...7 *Out5...Out7* →

Parameter	Symbol	Value/selection
Function	<i>Funct</i>	Analog selector <b>Switched off</b>
Type of signal	<i>S, En</i>	0... <b>2</b> ...3 (0=0...10V; 1=2...10V; 2=0...20mA; 3=4...20mA)
Zero point	<i>OPnt</i>	-1999... <b>0</b> ...+9999
End value	<i>End</i>	-1999... <b>100</b> ...+9999

Factory settings are shown **bold**.

→ Output *OutL* → Output 1...10 *Out1...Out10* →

Function	
<b>0 no function</b>	16 4. Limit comparator
<b>1 Controller output 1</b>	17 Control contact 1
2 Controller output 2	18 Control contact 2
3 - reserved	19 Control contact 3
4 - reserved	20 Control contact 4
5 Binary input 1	21 Logic formula 1
6 Binary input 2	22 Logic formula 2
7 Binary input 3	23 Timer 1 active
8 Binary input 4	24 Timer 2 active
9 Binary input 5	25 Program active
10 Binary input 6	26 Program end signal
11 Binary input 7	27 Tolerance limit signal
12 Binary input 8	28 Manual mode on/off
13 1. Limit comparator	29 Binary marker
14 2. Limit comparator	30 Any binary value from storage address (only through setup)
15 3. Limit comparator	31 always active

Factory settings are shown **bold**.

## 4.8.6 Display „diSP“

→

Parameter	Symbol	Value/selection
Decimal point	<i>dEcP</i>	<b>0</b> ...2 (0=no decimal; 1=one; 2=two)
Brightness	<i>br, B</i>	<b>0</b> ...5 (0=Bright)

Factory settings are shown **bold**.



## 4.9 Autotuning

The autotuning facility can be used to automatically adapt the controller parameters to the process.

The autotuning function determines the controller parameters for a PID controller or, if dt=0 is set, for a PI controller in a closed control loop.

The autotuning facility can be used to automatically adapt the controller parameters to the process.

The autotuning function determines the controller parameters for a PID controller or, if dt=0 is set, for a PI controller in a closed control loop.

\* Start with ▲ and ▼ (press simultaneously for >2sec)

“tUnE” is shown blinking in the green display



\* Cancel with ▲ and ▼ (press simultaneously).

- The more sluggishly the process responds to setpoint changes, the longer the autotuning procedure will take.
- This involves determining the controller parameters  $r_t$ ,  $d_t$ ,  $Pb_1$ ,  $Pb_2$ ,  $Cy_1$ ,  $Cy_2$ ,  $dF$  and accepting them automatically after the end of tuning.

## 4.10 Alarms

Display	Cause	Clear faults check/rectify/replace
- 9999 (blinking!)	Underrange for the value being displayed.	Is the medium to be measured within the range (too hot - too cold?) Check probe for probe break/short-circuit. Check the probe connection and the terminals. Check the cable.
9999 (blinking!)	Overrange for the value being displayed.	
All displays are on; lower 7-segment display is blinking	Watchdog or power-on triggers initialization (reset).	Replace controller if the initialization takes longer than 5sec.
PrOF	PROFIBUS error	Can be suppressed by setting the PROFIBUS address to "0".
OPt	Hardware configuration error	Check which option boards are installed in the slots.

Overrange/underrange covers the following events:

- probe break/short-circuit
- measurement is outside the controllable range for the probe connected
- display overflow

### Displaying the software version

\* Display version with PGM and ▲ (press simultaneously).

## 4.11 Factory settings Controller JUMO

### Controller with modulating operation and temperature sensor PT-100 (120 527 01)

#### 4.11.1 Function Temperature

Setpoint 1 (SP 1) the desired temperature is changed with the up or down arrow buttons, adjustable from 0-100 in the delivery version.

Power regulation is controlled in the "User" menu.

**Example of setting:**

**Delivery setpoint is 80°C and value for operation as below:**

**PGM** + "User"

- AL1=5
- DIF1=4
- Pb=10
- Dt=5
- Rt=20
- Tt=30
- Db=2

AL values are when the actual power stage should be switched off when the temperature rises.

DIF values are when the burner should be switched on when the temperature drops.

SET=100 - Max selectable temperature on display, if a higher value is desired, this value is increased.

Example: the start of the burner is controlled by the limit value "AL" which is set to 5°C, this gives the following function of the control (with the factory settings).

- 85°C burner is switched off, the temperature drops.
- 81°C burner starts, controlled by DiF1 value.  
The regulator controls the pressure in the boiler by increasing and decreasing the power when needed. The values for "Pb", "Dt" and "Rt" may need to be adjusted in the "User" menu above, in order for it to regulate according to demand.
- When the boiler temperature rises above 80°C, the output is regulated down to the minimum temperature.
- When the boiler temperature rises to 85°C, the controller switches off the burner.

If other temperatures are desired, change the values above to achieve the appropriate function.

## 4.11.2 Parameters (120 527 01)

### Hardware:

Device type:	703041 JUMO dTRON 316
Parameter list:	12135101

### Slots:

Expansion slot 1:	Changeover relay output
Expansion slot 2:	Not fitted

### Analog inputs (InP):

#### Analog input 1 (InP1):

Sensor type (SEnS):	Resistance thermometer (3-wire)
Linearization (Lin):	Pt100 DIN
Measurement offset (OFFS):	0.000
Filter time constant (dF):	0.6 s

#### Globals (In12):

Temperature unit (Unit):	°C
Supply frequency:	50 Hz
Sampling cycle time (Cycl):	250 ms

### Controller (Cntr):

#### Configuration:

Controller type (CtyP):	Modulating controller
Control action (CAct):	Inverse
Manual mode (InHA):	not locked
Manual output level (HAnd):	101 %
Range output level (rOut):	0 %
Start of setpoint limiting (SPL):	0.000
End of setpoint limiting (SPH):	100.0

#### Inputs:

Controller process value (CPr):	Analog input 1
External setpoint (ESP):	Switched off
Output level feedback (FEEd):	Switched off

#### Self-optimization:

Method (tyPt):	Oscillation
Self-optimization (InHt):	not locked
Controller output 1 (Ott1):	Relay
Controller output 2 (Ott2):	Relay

**Generator (Pro):****Globals:**

Function (Funct):	Fixed-setpoint controller
-------------------	---------------------------

**Basic status:**

Control contacts:	
SK 1:	OFF
SK 2:	OFF
SK 3:	OFF
SK 4:	OFF

**Limit comparators (LC):****1. Limit comparator (LC1):**

Function (Funct):	lk 5
Limit value (AL):	5.000
Differential (HySt):	4.000
Hysteresis function:	Asymmetrical right
Action (AcrA):	Absolute
Range response (AcrA):	Lk off
Acknowledgement (AcnL):	none
Switch-on delay (tOn):	0 s
Switch-off delay (tOFF):	0 s
Pulse time (tPuL):	0 s
Lk actual value (LCPr):	Process value
Lk setpoint (LCSP):	Current setpoint

**2. Limit comparator (LC2):**

Function (Funct):	no function
-------------------	-------------

**3. Limit comparator (LC3):**

Function (Funct):	no function
-------------------	-------------

**4. Limit comparator (LC4):**

Function (Funct):	no function
-------------------	-------------

**Outputs (OutP):****Binary outputs (OutL):**

Function Binary output 1 (Out1):	1. Controller output
Function Binary output 2 (Out2):	2. Controller output
Function Binary output 3 (Out3):	Switched off
Function Binary output 4 (Out4):	Switched off
Function Binary output 5 (Out5):	1. Limit comparator

**Analog outputs (OutA):**

No analog output available
----------------------------

**Logic functions (binF):****Binary inputs:**

Binary input 1:	
Function (bin1):	none
Additional functions:	none
Binary input 2:	
Function (bin2):	none
Additional functions:	none

**Limit comparators:**

1.Limit comparator :	
Function (LC1):	none
Additional functions:	none
2.Limit comparator :	
Function (LC2):	none
Additional functions:	none
3.Limit comparator :	
Function (LC3):	none
Additional functions:	none
4.Limit comparator :	
Function (LC4):	none
Additional functions:	none

**Timer:**

Timer 1:	
Function (tF1):	none
Additional functions:	none
Timer 2:	
Function (tF2):	none
Additional functions:	none

**Logic:**

Extra code "Math" is not available
------------------------------------

**Control contacts:**

Control contact 1:	
Function (CC1):	none
Additional functions:	none
Control contact 2:	
Function (CC2):	none
Additional functions:	none
Control contact 3:	
Function (CC3):	none
Additional functions:	none
Control contact 4:	
Function (CC4):	none
Additional functions:	none

**other:**

Tolerance band signal:	
Function (ToS):	none
Additional functions:	
Program end signal:	
Function (PrES):	none
Additional functions:	

**Text display:**

Static text:	ALRT
--------------	------

**Display (diSP)/ Operation:****Globals**

Function (upper display) (diSU):	Process value
Function (lower display) (diSL):	Current setpoint
Function (16-segment display) (diS3):	Temperature unit
Brightness (briG):	0
Decimal point (dEcP):	****
Time-out (tOut):	180 s
Level inhibit:	none

**User data**

Parameter:	Name:	Value:
1	al1	Limit comparator 1: Limit value
2	dif1	Limit comparator 1: Differential
3		Parameter set 1: Pb1
4		Parameter set 1: dt
5		Parameter set 1: rt
6		Parameter set 1: TT
7		Parameter set 1: db
8	set	Analog input 1: End of display range

**Timer (tFct):****Timer 1 (tF1):**

Function (Fnct):	no function
Timer value (t):	00:00 hh:mm
Tolerance band (toLt):	0.000

**Timer 2 (tF2):**

Function (Fnct):	no function
Timer value (t):	00:00 hh:mm
Tolerance band (toLt):	0.000

**Interfaces (IntF):**

Only Setup interface available
--------------------------------

**Controller parameters:****Parameter set 1:**

Proportional band	Pb1:	10.00	Pb2:	0.000
Derivative time	dt:	5 s		
Reset time	rt:	20 s		
Cycle time	Cy1:	20.0 s	Cy2:	20.0 s
Contact spacing	db:	2.0		
Differential	Hys1:	4.0	Hys2:	1.0
Stroke time	TT:	30 s		
Working point	Y0:	0 %		
Output limiting	Y1:	100 %	Y2:	-100 %

**Parameter set 2:**

Proportional band	Pb1:	0.000	Pb2:	0.000
Derivative time	dt:	80 s		
Reset time	rt:	350 s		
Cycle time	Cy1:	20.0 s	Cy2:	20.0 s
Contact spacing	db:	0.0		
Differential	Hys1:	1.0	Hys2:	1.0
Stroke time	TT:	60 s		
Working point	Y0:	0 %		
Output limiting	Y1:	100 %	Y2:	-100 %

**Setpoints:**

Setpoint 1 (SP 1):	80.00
Setpoint 2 (SP 2):	0.000
Setpoint 3 (SP 3):	0.000
Setpoint 4 (SP 4):	0.000

**Math / logic:**

Extra code "Math" is not available
------------------------------------

**Customized linearization:**

Type of customized linearization:	Calibration points
no table entered!	

**Undocumented parameters:****Bit parameter:**

Parameters 1:	OFF	Parameters 25:	OFF
Parameters 2:	OFF	Parameters 26:	OFF
Parameters 3:	OFF	Parameters 27:	OFF
Parameters 4:	OFF	Parameters 28:	OFF
Parameters 5:	OFF	Parameters 29:	OFF
Parameters 6:	OFF	Parameters 30:	OFF
Parameters 7:	OFF	Parameters 31:	OFF
Parameters 8:	OFF	Parameters 32:	OFF
Parameters 9:	OFF	Parameters 33:	OFF
Parameters 10:	OFF	Parameters 34:	OFF
Parameters 11:	OFF	Parameters 35:	OFF
Parameters 12:	OFF	Parameters 36:	OFF
Parameters 13:	OFF	Parameters 37:	OFF
Parameters 14:	OFF	Parameters 38:	OFF
Parameters 15:	OFF	Parameters 39:	OFF
Parameters 16:	OFF	Parameters 40:	OFF
Parameters 17:	OFF	Parameters 41:	OFF
Parameters 18:	OFF	Parameters 42:	OFF
Parameters 19:	OFF	Parameters 43:	OFF
Parameters 20:	OFF	Parameters 44:	OFF
Parameters 21:	OFF	Parameters 45:	OFF
Parameters 22:	OFF	Parameters 46:	OFF
Parameters 23:	OFF	Parameters 47:	OFF
Parameters 24:	OFF	Parameters 48:	OFF

**Integer parameter:**

Parameters 1:	0x0000	Parameters 2:	0
---------------	--------	---------------	---



## 5. Installation

### 5.1 General instructions

Installation must be carried out in accordance with current regulations and instructions.

The supplier/installer of the facility is obliged to familiarize himself with all regulations so that the installation meets the requirements of the local authorities.

Installation, assembly and settings must be performed to obtain the best possible function. Only gas intended for the gas burner may be used.

### 5.2 Instructions

It is the installer's responsibility to instruct the user in detail in the functions of the gas burner and the entire system.

### 5.3 Inspection and maintenance

The system must be maintained at the interval specified in the service schedule. If the burner is in a dirty environment, service should be done at more frequent intervals.

### 5.4 Preparation for assembly

Check that the burner's dimensions and capacity range match the current boiler. The power information on the type plate refers to the burner model's min. and max. effect.

### 5.5 Gas supply

In order to obtain good operational safety, it is important that the installation of the gas distribution system is carried out correctly, considering the following:

- Check that the burner is approved for the gas quality of the installation.
- Check that the burner gas components are approved for the specified gas pressure, see type plate.
- Installation must be carried out in accordance with current standards.
- Pipe lines should be assembled so that service can easily be performed on the boiler and burner.
- Pipe lines should be assembled so that any contaminants do not come into contact with the gas components.


### 5.6 Electric connection

- Before work on the electrical connection, the current must be disconnected so that the installation is isolated.
- Connection must be done in accordance with the applicable regulations.
- Connection must conform to the wiring diagram.



If any electrical connection other than that recommended by CTC is used, there is a risk of property damage and personal injury.

## 5.7 Handling and lifting instruction

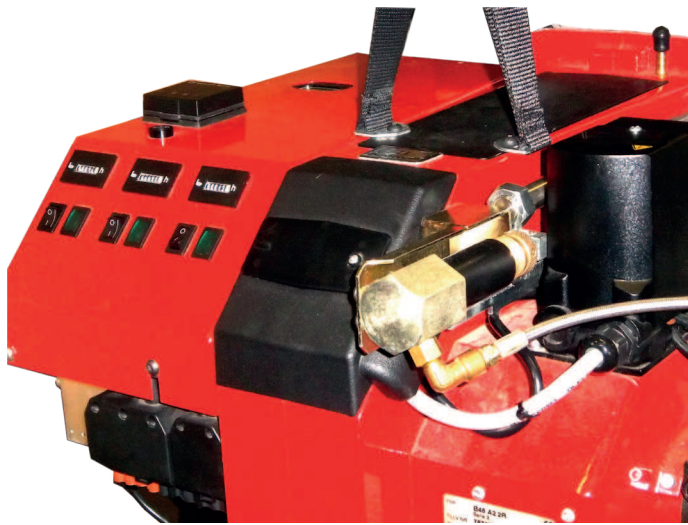

**i** The lifting aid are available as accessories.



## 6. Mounting

Mount the burner to the boiler using 4 bolts (if new fixing holes need to be drilled, use the fixing flange as a template).




Before obtaining access to electrical and fuel line components all supply circuits must be disconnected.

Separate the fixing flange from the fan housing as follows:

1. Remove cover of fan housing (A), disconnect ignition and ionizing cables and the control arm (B) from nozzle assembly.
2. Disconnect the electrical cable to the gas valve.
3. Loosen nuts on both sides of the fixing flange.
4. Loosen end stop (C) for guides. NOTE! The screws must always be refitted.
5. Pull the fixing flange with flame tube, nozzle assembly and gas fitting out of the fan housing.
6. Check that the ignition electrodes are correctly set, see chapter Gas nozzle.
7. Fit the enclosed gasket to the flame tube.
8. Screw the fixing flange and the enclosed gasket onto the boiler, lift the fan housing onto the guides and mount in reverse order.
9. Connect the gas line, connect the supply cable, operating and safety circuits.




NOTE! The screws must always be refitted in the end stops of the guides.

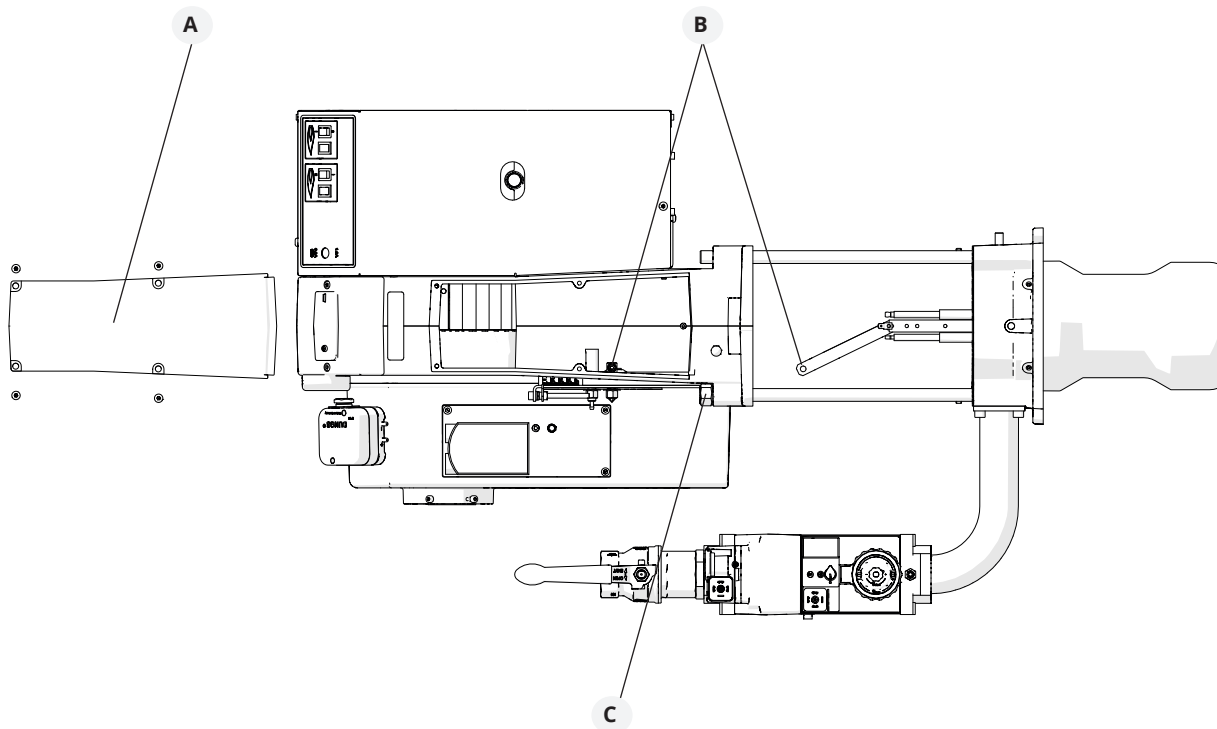


## 6.1 Gas nozzle

Check that the ignition electrodes are correctly set before mounting on the boiler.

### Natural gas

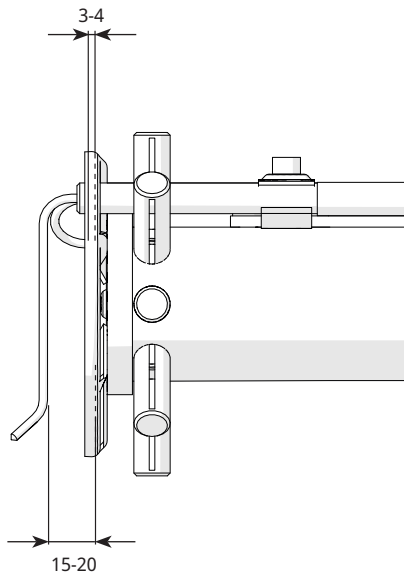


160303-742

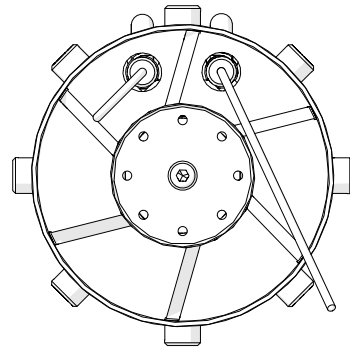


160303-743

### Propane

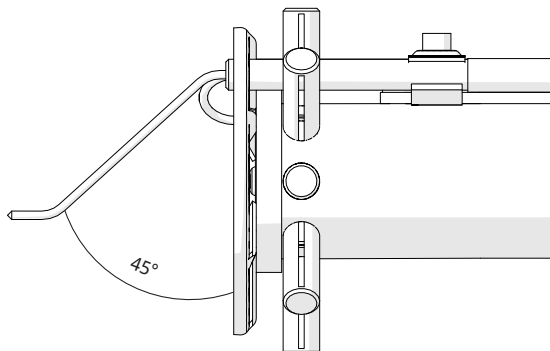


160303-755

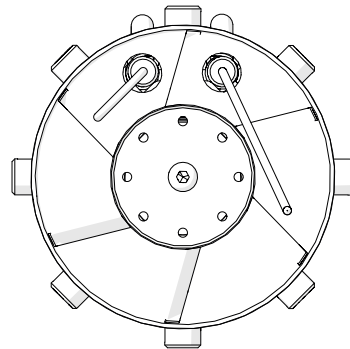


160303-756

### Biogas (UV detector)

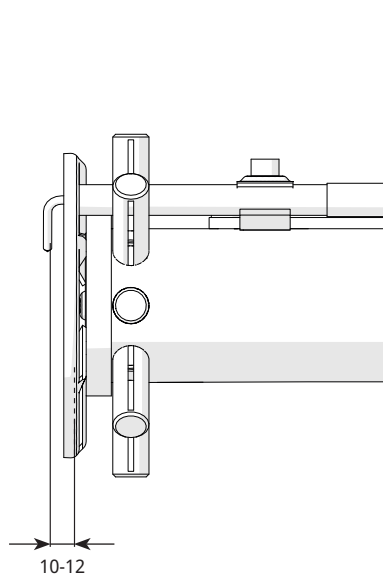

160303-757

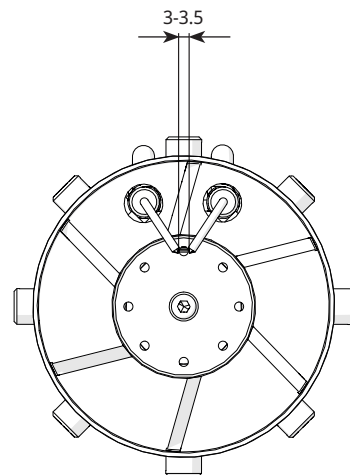

160303-758

## 6.2 De-aerating



De-aerating the gas line by closing the tap to the gas connection and unscrewing the screw on the measuring nipple for the connection pressure. Connect a plastic hose, open the tap and drain the gas in a safe place. When the de-aerating is completed, be sure to refit the screw on the measuring nipple.

## 6.3 Leakage control

When checking for leakage, the solenoid valve must be closed. A pressure gauge is connected to the measuring nipple "Pa", see picture. The test pressure in the system must not be higher than max. connection pressure, see data plate. Also check the tightness at the filter. If leaks are found during measurement, locate the source using soapy water or leak detection spray. After sealing: check the leakage of the gas fixture again.



Check for leaks in the gas line.

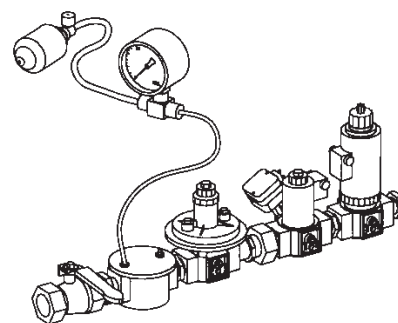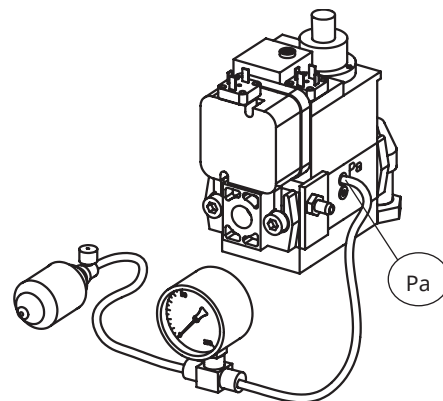

## 6.4 Calculation of gas flow

Formula symbol	Description	Example values
$V_N$	Standard gas volume [Nm <sup>3</sup> /h] Gas volume at normal condition 15 °C 1013 mbar	-
Q	Boiler output [kW]	380 kW
$H_i$	Lower calorific value of gas [kWh/m <sup>3</sup> ] Natural gas under normal conditions 15 °C 1013 mbar, EN 676	9.45 kWh/m <sup>3</sup>
$\eta$	Boiler efficiency (e. g. 90%)	0.9
f	Conversion factor (pressure and temperature compensation)	-
$t_{Gas}$	Gas temperature at gas meter [°C]	15 °C
$P_{Baro}$	Barometric air pressure [mbar]	945 mbar
$P_{Gas}$	Pressure of gas at the gas meter [mbar]	20 mbar
V	Operating volume [m <sup>3</sup> /h]	-
VG	Gas flow measured at the gas meter [m <sup>3</sup> ]	1.28 m <sup>3</sup>
T	Measuring time for consumed gas quantity [s]	93 s

Calculate standard volume using the following formula:

$$V_N = \frac{Q}{\eta \cdot H_i} \quad V_N = \frac{380 \text{ kW}}{0.9 \cdot 9.45 \text{ kWh/m}^3} = 44.7 \text{ m}^3/\text{h}$$

Calculate conversion factor using the following formula:

$$f = \frac{273}{273 + t_{Gas}} \times \frac{P_{Baro} + P_{Gas}}{1013} \quad f = \frac{273}{273 + 15} \cdot \frac{945 + 20}{1013} = 0.90$$

Calculate gas volume using the following formula:

$$V = \frac{V_N}{f} \quad V = \frac{44.7 \text{ m}^3/\text{h}}{0.90} = 49.5 \text{ m}^3/\text{h}$$

Determine operating volume with the following formula:

$$V = \frac{3600 \cdot V_G}{T} \quad V = \frac{3600 \cdot 1.28 \text{ m}^3}{93 \text{ sek}} = 49.5 \text{ m}^3/\text{h}$$

Height above sea level [m]	0	100	200	300	400	500	600	700	800	900	1000	1100	1200
$P_{Baro}$ [mbar]	1013	1001	989	977	966	954	943	932	921	910	899	888	877

### Calorific value of the gas

Gas quality		kWh/Nm <sup>3</sup>	MJ/Nm <sup>3</sup>
Natural gas	G20	9.5	34.02
Natural gas	G25	8.2	29.25

Gas quality		kWh/Nm <sup>3</sup>	MJ/Nm <sup>3</sup>
Butan	G30	32.25	116.09
Propan	G31	24.44	88.00
Biogas		6.0	21.60

Lower calorific value  $H_i$  at normal conditions 15 °C and 1013 mbar, EN 676.  
For exact calorific value of the gas, contact the gas distributor.

## 7. Settings

### 7.1 Nozzle assembly adjustment

The burner is equipped with a control (X) that changes the position of the brake plate in the combustion head. This is used to set the correct pressure drop across the combustion assembly and thereby obtain good combustion without ripples.


The best position is, among other things, dependent on the input power and overpressure in the boiler.

In general, the smaller the capacity, the smaller the gap between the brake plate and the burner tube.

The position of the brake plate also has an impact on the quantity of air supplied for combustion. This means that once the brake plate has been adjusted, the combustion should be checked and, if necessary, the setting of the air damper adjusted to obtain good combustion.

A left turn opens the brake plate, providing a lower pressure drop and more air to the combustion process.

A right turn closes the brake plate, providing a higher pressure drop and less air to the combustion process.

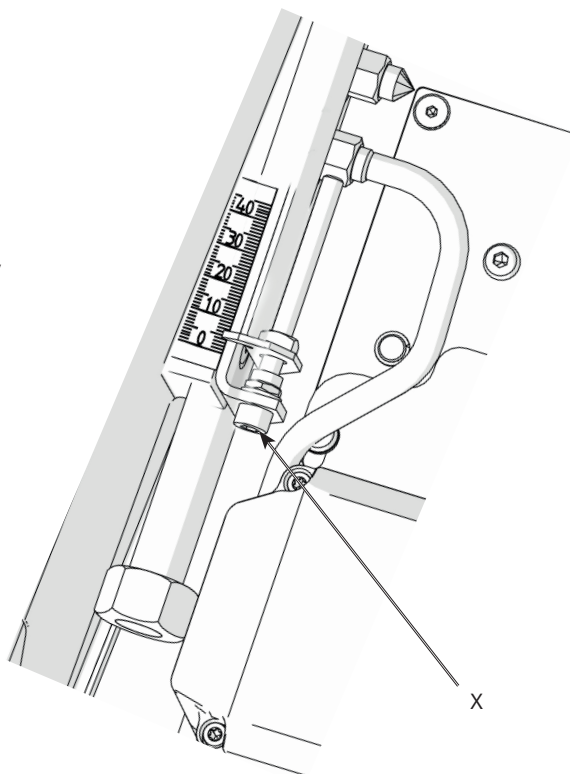

### 7.2 Startup

After the burner has been mounted on the boiler and the electrical connection, de-aeration and tightness control have been performed, the burner is ready to start-up.

Read the sections dealing with settings of gas valve, damper motor and combustion device before start-up.

Open the ball valve and turn on the main switch, start the burner and begin setting up the system.

### 7.3 Control of combustion

Check combustion using flue gas analysis instruments. Set the burner to about 20% excess air and check that good combustion is obtained. Check the actual gas flow on the gas meter to ensure that the correct input power is achieved.

## 7.4 Setting the air pressure switch

The air pressure switch must block the burner if the amount of air for combustion becomes too low. The air pressure switch must be set so that in the event of a lack of air supply at the burner's max. or min. capacity reacts before the monitored pressure drops so much that poor combustion occurs.

1. Remove protective cover.

**!** Be careful when adjusting the air pressure switch; it contains a live component.

2. Start the burner.
3. Carefully turn the scale on the air pressure switch clockwise until the air pressure switch stops the burner.
4. Measure and note the lowest air pressure in the entire work area.
5. Set the air pressure switch to about 10-15% lower than the lowest noted pressure.
6. Test run the burner and check the function in the entire work area.
7. Refit protective cover.






## 7.5 Setting the gas pressure switch, min.

The gas pressure switch must react to too low a connection pressure to the burner, prevent the burner from starting and stop the burner during operation. The burner may start again when the connection pressure has risen above the set pressure on the gas pressure switch.

1. Remove protective cover.
2. Open measuring socket and connect a manometer for measuring connection pressure.
3. Start the burner.
4. Measure and note the connection pressure to the burner at the highest input power.
5. Set the gas pressure switch to a value 10-15% lower than the noted pressure.
6. Check the setting by carefully closing the ball valve and at the same time measuring the connection pressure.
7. When the gas pressure switch stops the burner, the measured value must approximately correspond to the setting on the gas pressure switch.
8. Open ball valve.
9. Remove manometer and close measuring socket.
10. Refit protective cover.



Check gas tightness.

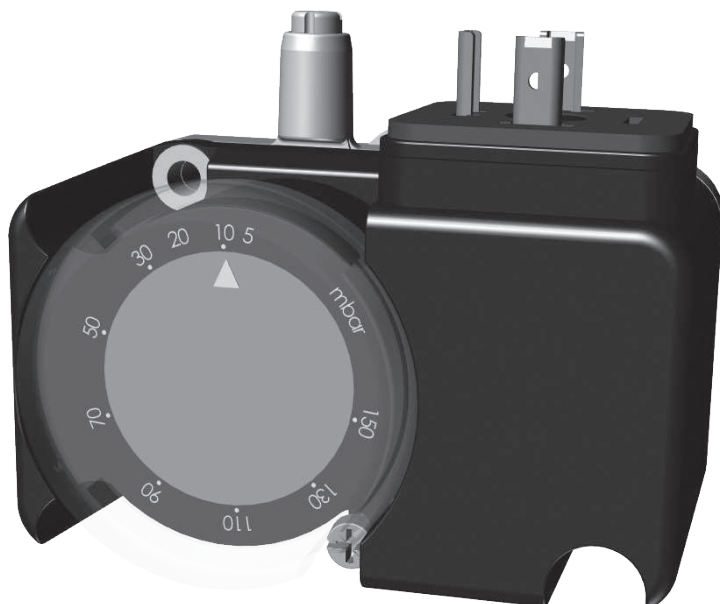

## 7.6 Setting Damper motor, Modulating operation

### Air adjustment

The damper motor rotates the air damper between three preset positions: completely closed, low load and high load. These positions are controlled in the motor by colored cam discs:

- Orange cam disc is adjusted for low load (approx. 5-10°).
- Red cam disc is adjusted for high load (approx. 90°).
- Blue cam disc is factory set for closed air damper during standstill.
- Black cam disc has no function during sliding and modulating operation.

### Setting amount of gas

- Before starting the burner, vent the line so that gas is safely available at the gas valve.
- Connect a manometer for measuring outlet pressure (PBr).
- Set the control switch to the MAN position.
- Set gas pressure switch min and air pressure switch in position MIN and (if mounted) gas pressure switch max in position MAX.
- Start burner. If no flame is formed and the manometer does not give a reading, adjust the amount of gas by increasing with screw N on the gas valve. Check combustion values.
- Set high load by pressing "+" control switch (increase). Adjust the amount of gas with screw V on the gas valve and check the combustion values.


- Return to low load "-", check combustion value and adjust if necessary.
- If necessary, repeat the setting on low (N) and high load (V).
- Adjust the orange and red cam discs to obtain the desired effect on low and high loads. Check the amount of gas on the system's gas meter.
- Adjust air and gas pressure switches after adjustment, see special instructions.
- Set the control switch to the AUTO position.

### Release

By pressing the button, the motor is disengaged and the air damper can be turned. The function is used when servicing air dampers.


### Recommended excess air

Gas quality	Excess air flue gases% O <sub>2</sub>
Natural gas	4 ±1
Propane	
Butane	
Liquefied petroleum gas	
Biogas	

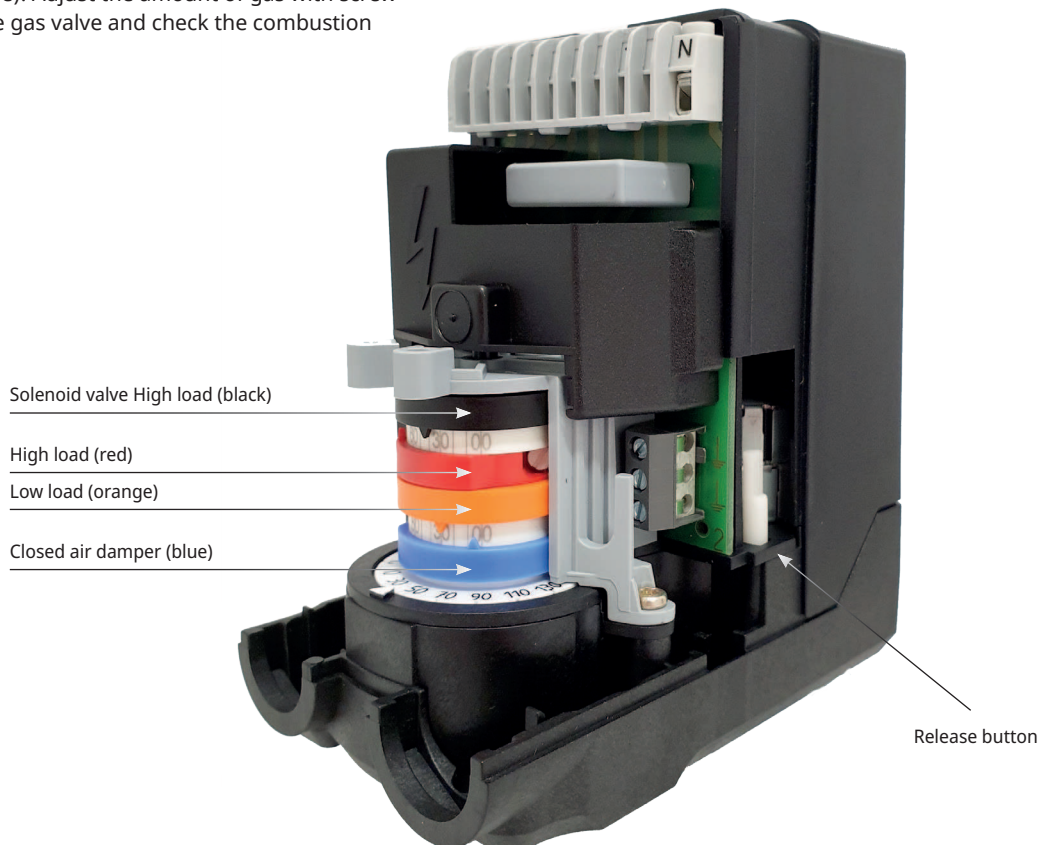

## 8. Gas valve, MultiBloc MB-VEF 407-412

**!** All gasline components shall be assembled and mounted without bending, torque and other mechanical or thermal stress.

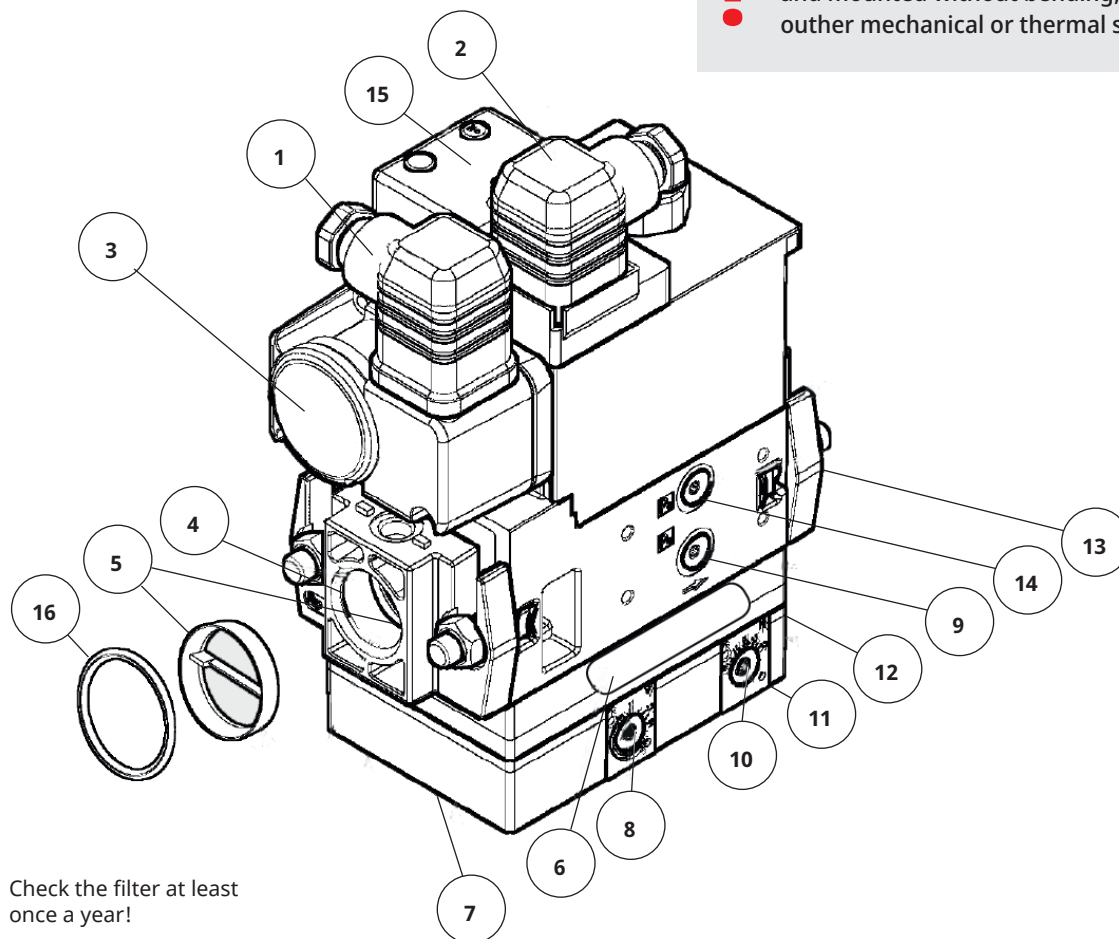

Check the filter at least once a year!

### 8.6.1 Components

- |   |  |   |
|---|--|---|
| 1. Electrical connection gas pressure switch, min | 7. Connection 1/8" $P_L$                                     | 12. Test point connection 1/8" $P_{Br}$                         |
| 2. Electrical connection gas valve                | 8. Adjustment screw V for ratio $P_{Br} : P_L$ (max. load)   | 13. Flange connection, outlet                                   |
| 3. Pressure switch, min                           | 9. Test point connection 1/8" before V1 (before governor)    | 14. Test point connection 1/8" $P_a$ before V2 (after governor) |
| 4. Flange connection inlet                        | 10. Adjustment screw for zero point adjustment N (min. load) | 15. Indication of V1 and V2 in operation (not standard)         |
| 5. Filter   | 11. Test point connection 1/8" $P_F$                         | 16. O-ring  |
| 6. Data plate                                     |  |   |

It is possible to connect a leakage control VPS 504 and a gas pressure switch, max.

NB. The impulse line  $P_{Br}$  can be replaced by an impulse flange on the gas valve. The impulse line  $P_{Br}$  is then placed inside this flange.

### 8.6.2 Technical data

- Max inlet pressure 360 mbar
- Valves V1+V2 class A group 2 in accordance with EN 161
- Governor class A group 2 in accordance with EN88-1
- Ratio  $V P_{Br}:P_L$  0,75:1-3:1
- Filter according to DIN 3386
- Ambient temperature -15°C- +70°C
- Protection standard type IP54 (according to IEC 529, DIN 40050)
- Gas family 1 +2 +3
- Outlet pressure 0,5 - 100 mbar
- Zero point adjustment  $N \pm 2$  mbar
- Pressure switch DIN3398 TI
- Fan pressure  $P_L$  0,4-100 mbar
- Fire room pressure  $P_F$  -2 -+5mbar
- Burner pressure  $P_{Br}$  0,5 - 100 mbar

### 8.6.3 Mounting instruction - Impulse lines $P_L$ , $P_F$ och $P_{Br}$

- Impulse lines  $P_{Br}$  should preferably be made of steel. Inside diameter  $> \varnothing$  4 mm (steel tube  $\varnothing$  6/4).
- For  $P_L$  other material can be used.
- Impulse lines  $P_L$  and  $P_{Br}$  are ready from factory.
- Impulse lines shall be mounted in such a way that no condensate can flow back into the gas valve. This is especially important when  $P_F$  is concerned.
- Impulse lines shall be mounted in such a way that they are protected against rupture and damage.
- Impulse lines shall be as short as possible.

### 8.6.4 Adjustment possibilities



Effective burner pressure


$$\Delta P_{Br} = P_{Br} - P_F$$




Effective fan pressure

$$\Delta P_L = P_L - P_F$$

Adjustment range

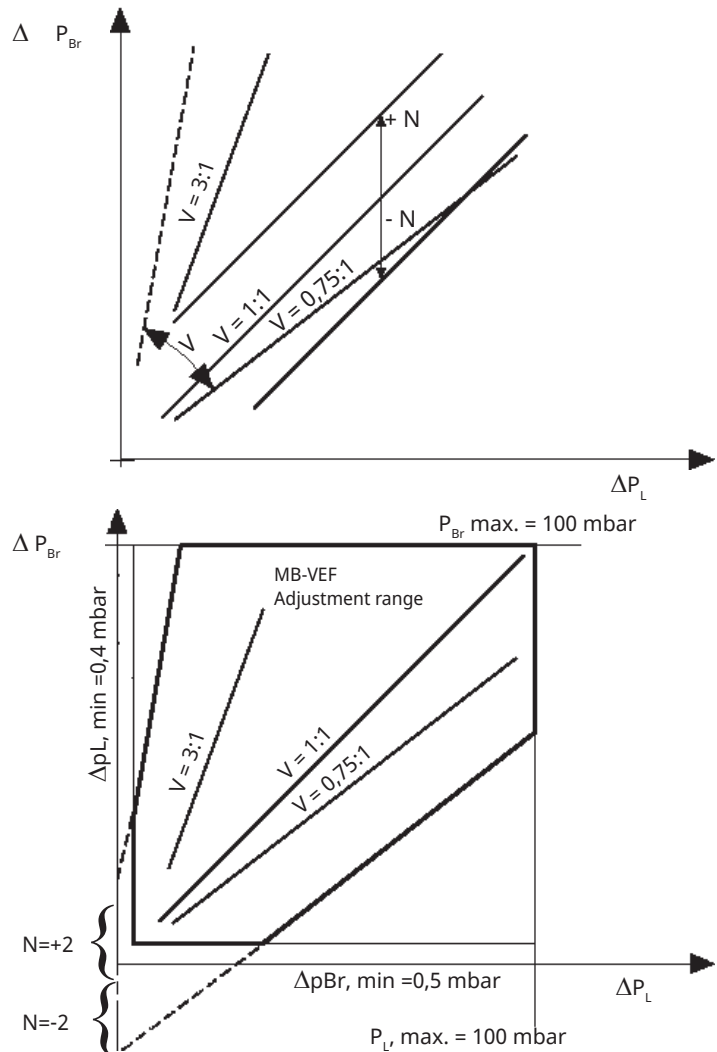

### 8.6.5 Pressure taps

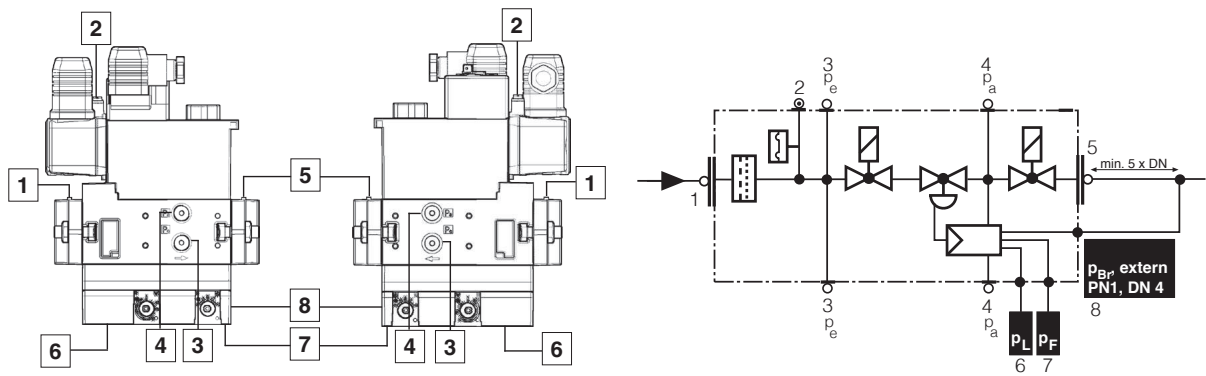


1,3,4,5 G 1/8 screwed sealing plug

2 Measuring nozzle

6,7,8 G 1/8 female thread for  $P_L$ ,  $P_F$ ,  $P_{Br}$  pulse lines

### 8.6.6 Electrical connection

#### S 10/S 30

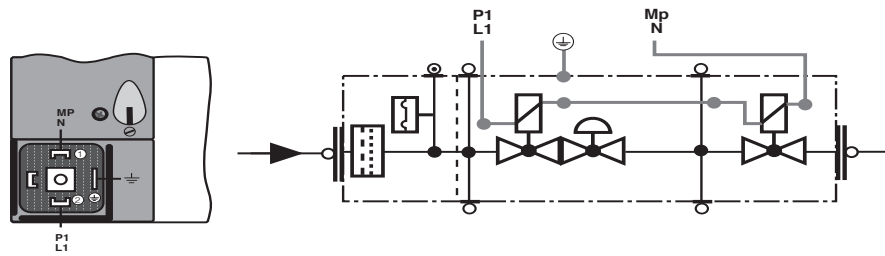

## 9. Service

Service and maintenance work may only be performed by qualified personnel. Perform operational check of all safety systems and components at each service. Only CTC original parts should be used when replacing components.



Use caution when operating the burner, surfaces may be hot.



### 9.1 Burner Service Schedule, Gas

Servicing must be carried out once a year or after 3,000 hours of operation.

If the burner is in a dirty environment, service should be done at more frequent intervals.

Burner	1 year	3,000 h
Inspection of electrical installation	1 year	3,000 h
Leak check	1 year	3,000 h
Filter	1 year, replacement at $\Delta p > 10$ mbar	3,000 h, replacement at $\Delta p > 10$ mbar
Electrodes	Replacement/cleaning 1 year	Replacement/cleaning 3,000 h
Brake plate	Replacement/cleaning 1 year	Replacement/cleaning 3,000 h
Motor	1 year	3,000 h
Fan wheel	1 Year	3,000 h
	Replace if need for cleaning/imbalance	Replace if need for cleaning/imbalance

### 9.2 Component replacement intervals

Components	Service life - Recommended replacement	Service life - Recommended replacement Operating cycles
Control system	10 years	250,000 starts
Valve control system	10 years	250,000 starts
Pressure switch	10 years	250,000 starts
Ignition system with flame guard	10 years	250,000 starts
UV flame sensor	10,000 h	N/A
Gas pressure controls	15 years	N/A
Gas valve without leak testing	10 years	250,000 starts
Gas valve with leak testing	Replacement upon fault detection	N/A
Gas pressure switch	10 years	250,000 starts
Safety blow-off system	10 years	N/A
Damper motor	N/A	500,000 starts
Contactora	10 years	500,000 starts



The burner and its components must be recycled according to applicable regulations.

## 9.3 Combustion device

1. Disconnect the main power and shut off the fuel supply.




Before obtaining access to electrical and fuel line components all supply circuits must be disconnected.

2. Remove cover (A), disconnect ignition and ionization cables and control arm (B) from nozzle assembly.
3. Loosen nut (C) and pull out the fan housing on the guides.
4. By loosening screw(s) (D), the combustion device is released and can be lifted out from the burner.
5. Check and clean the brake plate and gas inlet, replacing components as necessary.
6. Check that the ignition and ionisation electrodes are correctly set, (see Gas nozzle chapter) - replace if necessary.
7. Refit the combustion device in reverse order.
8. Press the burner together and lock with nut (C).
9. Switch on the main power and open the fuel supply.
10. Start burner and check/adjust combustion.



Check for leaks in the gas line.

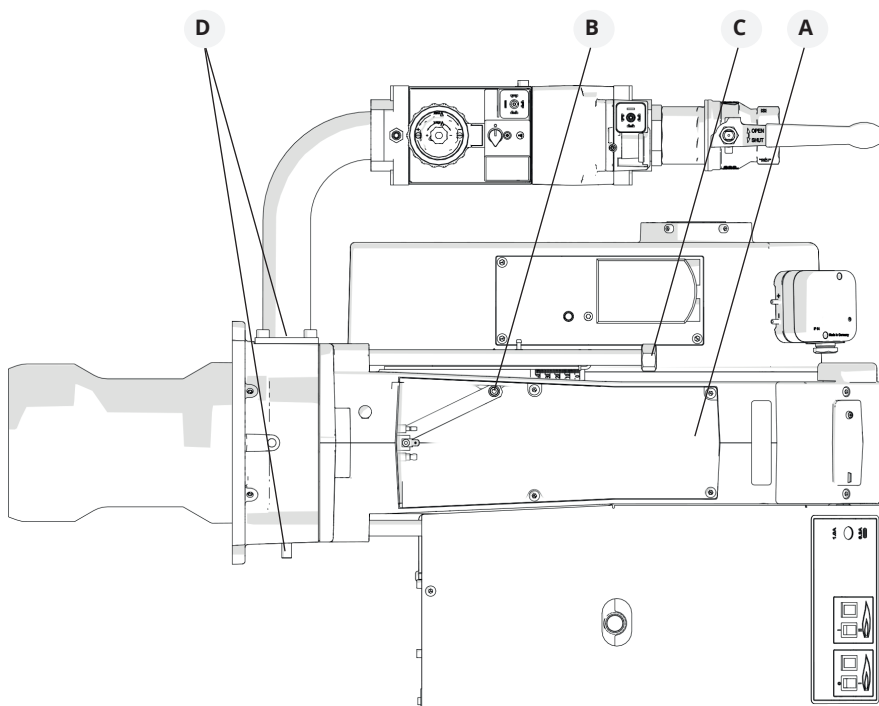

When servicing/replacing components that affect combustion, flue gas analysis and soot test must be carried out following installation.


## 9.4 Air damper

1. Disconnect the main power and shut off the fuel supply.



Before obtaining access to electrical and fuel line components all supply circuits must be disconnected.

2. Remove cover (A), disconnect ignition and ionization cables and control arm (B) from nozzle assembly.
3. Loosen nut (C) and pull out the fan housing on the guides.
4. Remove the intake grille (E) to the air intake.
5. Loosen screws (G) holding the damper motor fixing plate and lift the damper motor out.
6. Clean the air damper and air intake, lubricate the damper shaft if necessary.
7. Refit the damper motor and mounting plate, ensuring that the damper shaft and control arm are correctly connected.
8. Fit the intake grille.
9. Press the burner together and lock with nut (C).
10. Switch on the main power and open the fuel supply.
11. Start burner and check/adjust combustion.

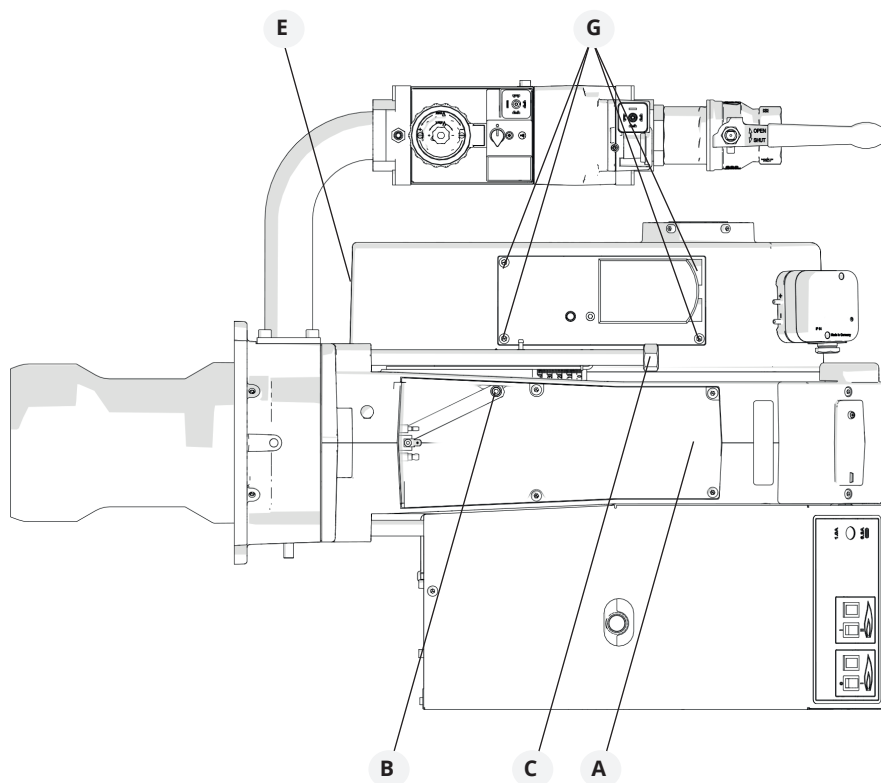




## 9.5 Replacement, Damper motor

1. Disconnect the main power and shut off the fuel supply.





Before obtaining access to electrical and fuel line components all supply circuits must be disconnected.

2. Remove the cover on the damper motor.
3. Note the connection position of cables to the damper motor.
4. Disconnect cables from damper motor.
5. Loosen screws (G) to the damper motor fixing plate.
6. Disengage the damper motor and turn it to approx. 60°.
7. Lift up damper motor.
8. Remove the control arm (J) from the motor shaft.
9. Loosen screws (H) securing the damper motor to the fixing plate. Adjust the cams of the new damper motor according to the replaced motor, see chapter "Setting Damper motor" and fit the fixing plate.
10. Fit the control arm on the shaft of the damper motor. It is important that the screw is perpendicular to the flat surface of the shaft.
11. Refit the damper motor and mounting plate, ensuring that the damper shaft and control arm are correctly connected.
12. Connect the damper motor cable.
13. Switch on the main power and open the fuel supply.
14. Start burner and check/adjust combustion.

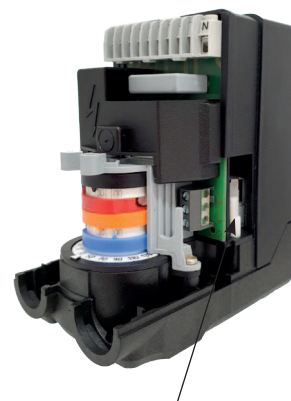

### Releasing button

By pressing the button and snapping it down, the motor will be released and the damper can easily be turned. This function facilitates an exchange of damper motor.

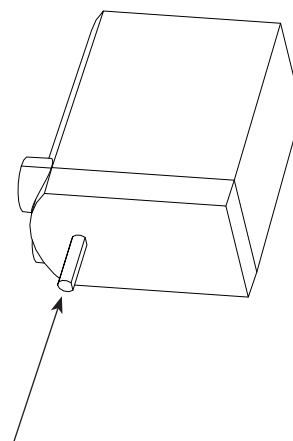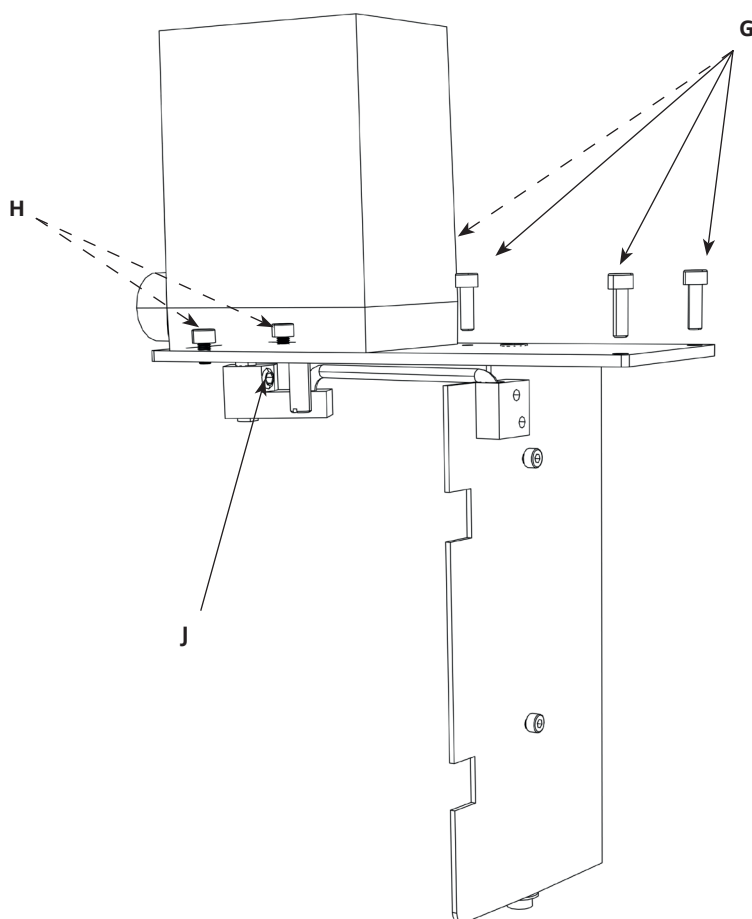

Ensure that the shaft of the damper motor is in the correct position.


## 9.6 Fan

1. Disconnect the main power and shut off the fuel supply.



Before obtaining access to electrical and fuel line components all supply circuits must be disconnected.

2. Detach the electrical panel (Y).
3. Loosen the motor's electrical connection and screws (X) and lift out the motor.
4. Check the fan wheel attachment and any skew, replace if damaged.
5. Clean or replace the fan wheel.
6. Refit the parts.
7. Switch on the main power and open the fuel supply.
8. Start burner and check/adjust combustion.

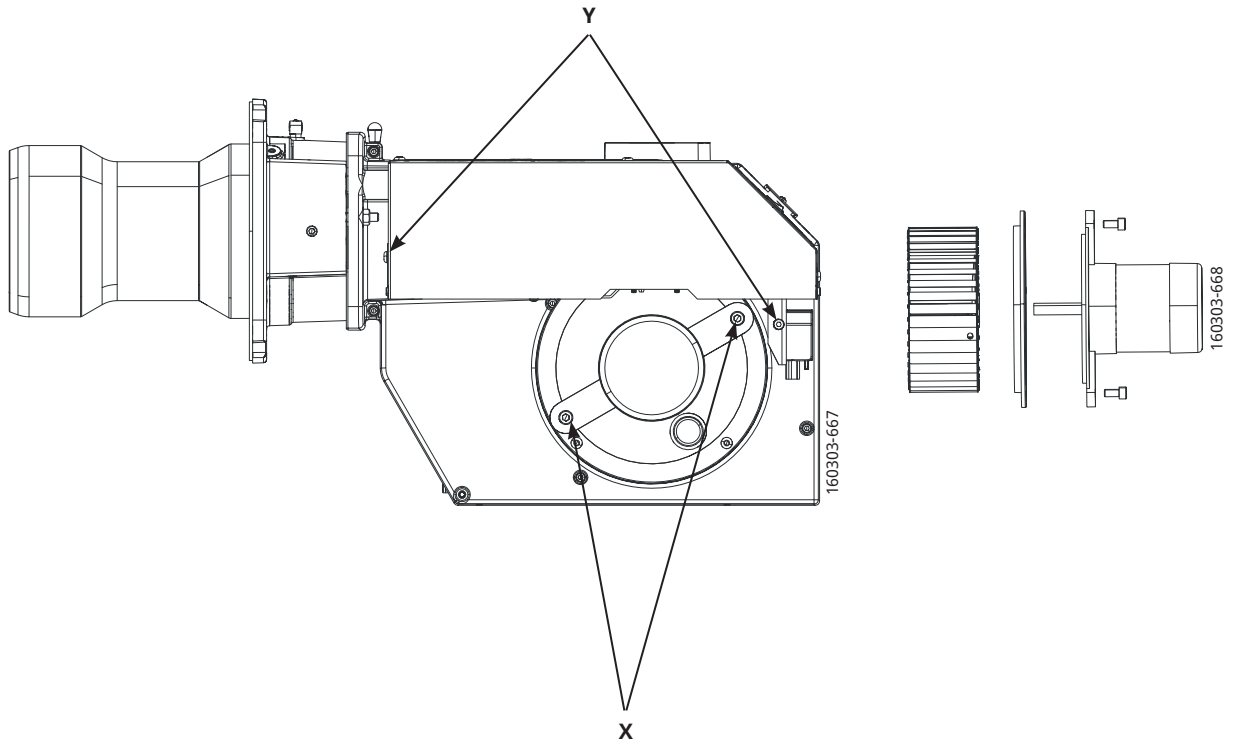


When servicing/replacing components that affect combustion, flue gas analysis and soot test must be carried out following installation.

## 9.7 Vibrations

Maximum permitted vibration level is 5.0 mm/s<sup>2</sup>.

- Check tightness of fasteners.
- Check fan wheel for damage and contamination (replace if necessary).
- Check motor shaft and bearings. If they are worn, replace the motor.

Use screw to attach  
the vibration sensor.

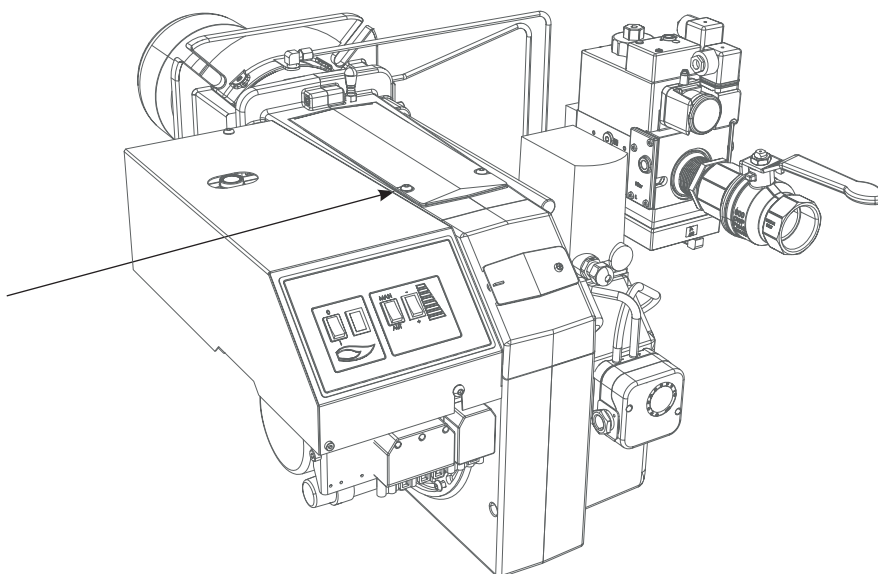

## 9.8 Control of flame monitoring and ionization current


The burner is monitored in the standard version according to the ionization principle. The ionization current must be checked at each service occasion.

The ionization current is measured with a microammeter ( $\mu\text{A}$ ) which is connected in series with the flame electrode and the gas burner control. Connect the  $\mu\text{A}$  meter as shown below. The minimum required ionization current is shown in the table. During normal operation, this current must be significantly higher, preferably more than  $10 \mu\text{A}$ .

The reason for too low ionization current can be creep current, poor connection to earth, dirt or that the flame electrode may need to be adjusted. The wrong gas/air mix can also cause too low ionization current.

Technical data	
Idle voltage at ION-terminals	AC 115-230V
Short-circuit current	Max. AC 100-300 mA
Min. current for flame detection	Min. DC $1.5 \mu\text{A}$
Required current to ensure detection	Min. DC $3 \mu\text{A}$
Possible detection current	Max. DC $20 \mu\text{A}$
Operational indicator lamp flashes green	$<5 \mu\text{A DC}$
Operational indicator lamp shines green	$>5 \mu\text{A DC}$


### 9.8.1 Flame monitoring ionisation

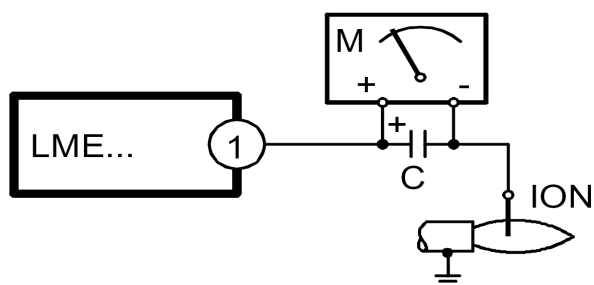

## 9.8.2 UV detector (QRC)

The UV detector should not be exposed to temperatures higher than 60 °C.  
The current passing through the UV detector when it is lighted must be at least 70  $\mu\text{A}$ . The current can be measured using a rotary coil instrument. A check is necessary only if a malfunction is suspected.

## 9.8.3 Flame monitoring UV detector (QRC)

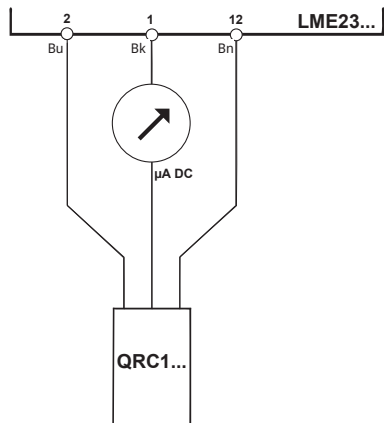

Technical data	
Idle voltage at ION-terminals	AC 115-230V
Short-circuit current	Max. AC 100-300 mA
Max. current for flame detection	Max. DC 5.5 $\mu\text{A}$
Required current to ensure detection	Min. DC 40 $\mu\text{A}$
Possible detection current	Max. DC 60 $\mu\text{A}$
Operational indicator lamp flashes green	<45 $\mu\text{A}$ DC
Operational indicator lamp shines green	>45 $\mu\text{A}$ DC

## 9.9 Replacement of electrical components

1. Disconnect the main power and switch off the fuel supply.



Before obtaining access to terminals, all supply circuits must be disconnected.

2. Note the connection of the existing component and disassemble.
3. Fit new component with same connection or with specified alternative connection.
4. Switch on the main power and check the operation of the new component.
5. Start burner and check/adjust combustion.



When servicing/replacing components that affect combustion, flue gas analysis and soot test must be carried out following installation.

## 10. Handing over of the installation

- Make repeated start attempts to ensure that the adjustments function.
- Close the ball valve during operation to check that the gas switch switches off at the set value.
- Remove the hose for the air pressure switch to check that the burner locks out.
- Check that all protective covers and measurement nipples are mounted and fastened.
- Fill out necessary test reports.
- Instruct the persons in charge of the operation on the service and maintenance of the installation and what to do should any troubles occur.
- Inspection and service must be carried out by authorized personnel.



Review and service should be performed by authorised personnel only.

# 11. Troubleshooting

Conditions favourable to trouble-free operation of the system can only be guaranteed through the interaction between three factors: electricity, gas flow and combustion air. If any of these factors change, it may cause a malfunction.

Before requesting servicing, check the following points:

1. Are the system's gas taps open?
2. Are the fuses intact and is the power on?
3. Are control devices (room thermostat, boiler thermostat, etc.) correctly set?
4. Is there sufficient gas pressure to the burner?
5. Are the burner controls on standby and not locked?
6. Is there sufficient air supply to the burner?

Cause of fault	Action
<b>Burner does not start:</b>	
No gas.	Make sure all gas taps are open.
No power.	Check the fuse, thermostat and electrical connections.
Burner motor does not start.	Motor protection has tripped. Motor faulty.
Burner control faulty.	Replace.

<b>Burner motor running, no ignition spark at the end of pre-aeration:</b>	
No power in the terminals.	Check the connector. Replace faulty burner controls.
Ignition electrodes in contact with each other or earth.	Adjust.
Ignition electrode porcelain damaged.	Replace the electrodes.
Poor connection to cable connectors.	Adjust connection.
Ignition cables damaged.	Replace.
Transformer damaged, no power to secondary winding.	Replace the transformer.
Ignition cable and ionisation cable swapped around.	Reconnect.

<b>No flame propagation:</b>	
Gas solenoid valve faulty.	Replace.
Gas solenoid valve does not open despite having power.	Replace solenoid valve terminals, or entire valve.
No power to solenoid valve.	Check the connection.
No electrical connection through air pressure gauge.	Check the air pressure gauge's settings and functions.
Ignition load incorrectly set.	Increase/decrease gas supply Reduce airflow.
Burner control faulty	Replace
Air pressure gauge incorrectly set or faulty	Check the settings and reset, or replace
No acknowledgement signal due to incorrect adjustment or misalignment of the control motor cams.	Check the settings and realign.

<b>Burner trips after safety time limit despite flame propagation:</b>	
No ionisation current or UV cell incorrectly positioned.	Adjust ionisation electrode and UV cell Check cables and connectors.
Burner control monitor faulty.	Replace burner control.
Voltage lower than 185V.	Contact an electrician.
Ignition electrodes disrupting ionisation current.	Adjust ignition electrodes. Re-polarise the transformer.
Poor earth connection.	Ensure adequate earth connection.
Phase and neutral swapped around.	Check wiring diagram and change accordingly.



Cause of fault	Action
<b>Burner trips during pre-aeration:</b>	
Air sensor faulty or incorrectly set.	Increase/decrease air setting. Reduce air volume.
Ignition load incorrectly set.	Increase/decrease gas supply Reduce airflow.
Gas pressure too low.	Increase pressure. If necessary, contact gas supplier.

<b>Pulsations at start-up:</b>	
Ignition electrodes incorrectly set.	Adjust .
Gas pressure too high.	Check and adjust using pressure gauge and pressure control valve.
Flue gas side blocked.	Check the chimney flue.

<b>Burner pulsates during operation:</b>	
Burner incorrectly set.	Adjust.
Burner dirty.	Clean the burner.
Incorrect chimney.	Check and modify dimensions if necessary.

<b>Burner functioning properly but with occasional blockage:</b>	
Ionisation current too low.	Check. Must be at least 6 $\mu$ A, but should ideally lie between 8-20 $\mu$ A.
UV cell incorrectly positioned.	Adjust.
Voltage drop at certain times.	Must not drop below 15% of rated voltage. Contact an electrician if necessary.
Incorrectly set or faulty air sensor.	Check the settings and reset, or replace.
Ignition electrode overload.	Replace.
Burner control ambient temperature too high.	Insulate for heat, Max. 60 °C.
Ignition spark too weak.	Check the transformer.

<b>Poor combustion:</b>	
Poor draught conditions.	Check the chimney.
Flue gas temperature too high.	Boiler overloaded Decrease the gas volume, sweep the chimney if necessary.
CO <sub>2</sub> content too low.	Choke the air supply. Check the boiler for any leakages. Choke the draught if too high.

<b>CO content too high:</b>	
Surplus air when using natural gas and liquefied petroleum (propane, butane).	Choke the air supply.
Poor air supply.	Open the air supply. Check flue gas damper.
Holes in gas nozzle clogged.	Clean.
Poor fresh air intake.	Check and increase.
Flame at incorrect angle due to combustion head out of position.	Check the combustion head and readjust.

<b>Condensation build up in boiler and chimney:</b>	
Flue gas temperature too low or gas volume too low.	Raise the flue gas temperature by increasing gas volume Insulate the chimney.

## 12. Service- and inspection protocol

Installation:	Boiler:	
Name:	Type:	Efficiency kW:
Address:	Burner	
	Type:	Efficiency kW:
Installed by:	Date:	

Date	Nm <sup>3</sup> gas/h	Governor		CO <sub>2</sub> %	CO %	Fluegas temp °C	Ionisation current µ A	Pressure		Efficiency %
		Before	After					Fire room mbar	Chimney mbar	
Measurement	Small Flame									
	Large Flame									
	Measures									

Date	Nm <sup>3</sup> gas/h	Governor		CO <sub>2</sub> %	CO %	Fluegas temp °C	Ionisation current µ A	Pressure		Efficiency %
		Before	After					Fire room mbar	Chimney mbar	
Measurement	Small Flame									
	Large Flame									
	Measures									

Date	Nm <sup>3</sup> gas/h	Governor		CO <sub>2</sub> %	CO %	Fluegas temp °C	Ionisation current µ A	Pressure		Efficiency %
		Before	After					Fire room mbar	Chimney mbar	
Measurement	Small Flame									
	Large Flame									
	Measures									



# EU Declaration of conformity

## Bentone Gas Burners

Type:	Certificate No.	Type:	Certificate No.
BFG 1	CE-0123CT1269	BG 550	CE-0123CT1326
STG 120	CE-0123CT1270	BG 650	CE-0123CT1348
STG 146	CE-0123CT1281	BG 700	CE-0123CT1359
BG 300	CE-0123CT1292	BG 800	CE-0123CT1360
BG 400	CE-0123CT1304	BG 950	CE-0123CT1371
BG 450	CE-0123CT1315		

This declaration of conformity is issued under the sole responsibility of the manufacturer.  
The object of the declaration described above is in conformity with:

- **Gas Appliance Regulation 2016/426/EU**
- **Machinery Directive 2006/42/EC**
- **LVD 2014/35/EU**
- **EMC 2014/30/EU**
- **The Restriction of the Use of Certain Hazardous Substances (RoHS) Directive 2011/65/EU**

References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

**EN 676:2020** Excluding the requirements of Annex K.  
Automatic forced draught burners for gaseous fuels.

**Additional information can be downloaded at: [www.bentone.com](http://www.bentone.com)**

Manufacturer: CTC AB  
Näsvägen 8  
SE-341 34 LJUNGBY  
Sweden

Notified Body: TUV SÜD Product Service GmbH  
Ridlerstraße 65  
D-80339 München, Germany  
Notified Body Number: 0123

Ljungby, 2024-01-01

Joachim Hultqvist  
Technical Manager  
CTC AB

Ola Karlsson  
Quality Manager  
CTC AB

# UK Declaration of conformity

## Bentone Gas Burners

Type:

<b>BFG 1</b>	<b>BG 300</b>	<b>BG 550</b>	<b>BG 800</b>
<b>STG 120</b>	<b>BG 400</b>	<b>BG 650</b>	<b>BG 950</b>
<b>STG 146</b>	<b>BG 450</b>	<b>BG 700</b>	

This declaration of conformity is issued under the sole responsibility of the manufacturer.  
The object of the declaration described above is in conformity with:

- **Gas Appliances (Enforcement) and Miscellaneous Amendment Regulations 2018**
- **Supply of Machinery (Safety) Regulations 2008**
- **Electrical Equipment (Safety) Regulations 2016**
- **Electromagnetic Compatibility Regulations 2016**
- **The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012**

References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:


**BS EN 676:2020** Excluding the requirements of Annex K.  
Automatic forced draught burners for gaseous fuels.

**Additional information can be downloaded at: [www.bentone.com](http://www.bentone.com)**

Manufacturer: CTC AB  
Näsvägen 8  
SE-341 34 LJUNGBY  
Sweden

Approved Body: TUV SÜD BABT Unlimited  
Octagon House,  
Concorde Way, Segensworth North,  
Fareham, Hampshire,  
PO 15 5RL, United Kingdom  
Approved Body Number: 0168

Ljungby, 2024-01-01

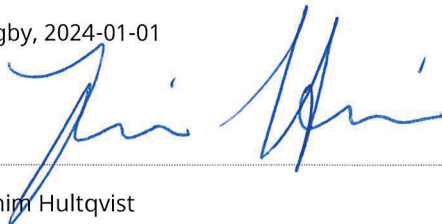

Joachim Hultqvist

Technical Manager  
CTC AB



Ola Karlsson

Quality Manager  
CTC AB









CTC AB Box 309 SE-341 26 Ljungby  
info@bentone.se +46 372 88 000  
www.bentone.se