



Providing sustainable energy solutions worldwide

Installation- and maintenance instruction

BG 700-2 Biogas

BP230UVFR-S2

DMV-DLE 525/11

MVD 220/5

VPS 504

FRS 520



3 exempel example Beispiel

352011030141	Serial no. 1234567	Man.Year 2019
Designation	BF 1 KS 76-24	
Type	BF 1	
Model	BF 1 KS 76-24	
Cap. Min-Max	LIGHT OIL 35-90kW 1,25-6,0 cSt 7-14bar	
Main supply	1~230V 1,0A 50Hz IP 20	
Motor supply		
MADE IN SWEDEN BY	Bentone	CE

-sv

1. Manualer på övriga språk

2. www.bentone.com\
nedladdning eller scanna
QR-koden.

3. Skriv in brännarens
artikelnummer som finns på
din typskylt (se bild) och välj
ditt språk.

Detaljerad ecodesign
information kan laddas ner
på: [www.bentone.com/
ecodesign](http://www.bentone.com/ecodesign).

-en

1. Manuals in other languages

2. www.bentone.com\
or scan QR-code.

3. Enter the burner`s article
number on your data plate (see
picture) and select language.

Detailed ecodesign information
can be downloaded at:
www.bentone.com/ecodesign.

-da

1. Manualer på andre sprog

2. www.bentone.com\
download eller scan
QR-koden.

3. Indtast brænderens
artikelnummer, der findes
på typeskiltet (se billede), og
vælg dit sprog.

Detaljerede oplysninger om
ecodesign kan downloades
på: [www.bentone.com/
ecodesign](http://www.bentone.com/ecodesign).

-fr

1. Manuels dans d'autres langues

2. www.bentone.com\
download ou scannez le
code QR.

3. Saisir le numéro d'article
du brûleur sur votre plaque
signalétique (consultez
l'illustration) et sélectionnez
la langue.

Des informations détaillées
sur l'écodesign peuvent être
téléchargées à l'adresse:
[www.bentone.com/
ecodesign](http://www.bentone.com/ecodesign).

-de

1. Gebrauchsanweisungen in anderen Sprachen

2. www.bentone.com\
oder scannen Sie den QR-Code.

3. Geben Sie die Artikelnummer
des Brenners auf Ihrem
Typenschild ein, (siehe Bild)
und wählen Sie die Sprache
aus.

Detaillierte Informationen zum
Ecodesign können unter
www.bentone.com/ecodesign
heruntergeladen werden.

Table of contents

1. General Information.....	4	7. Settings	27
1.1 Delivery inspection.....	4	7.1 Startup.....	27
1.2 Safety	4	7.2 Control of combustion	27
1.3 What to do if you smell gas.....	5	7.3 Setting the air pressure switch	28
2. Technical data.....	6	7.4 Setting the gas pressure switch, min.....	29
2.1 Dimensions BG 700-2	6	7.5 Setting the gas pressure switch max/ overload protection switch	30
2.2 Capacity range.....	7	7.6 Settings Damper motor, 2-stage	31
2.3 Gas categories, approved gases.....	7	8. Leakage control VPS 504	32
2.4 Technical specification	8	8.1 Technical data	32
2.5 Working field	8	8.2 Program sequence	32
2.6 Components.....	9	8.3 Electrical connection	33
2.7 Skeleton diagram 2-stage burner, Biogas.....	10	9. Gas pressure regulator	34
2.8 Adjusting the gas train.....	11	10. Double Solenoid Valve DMV-DLE.....	36
3. Electric equipment.....	12	10.1 Technical data	36
3.1 Safety system	12	10.2 DMV-DLE 512-520/11	37
3.2 Components.....	12	10.3 DMV-DLE 525/11	37
3.3 Wiring diagram	13	11. Gas solenoid valve MVD 210/5 / MVD 215/5	39
4. Control.....	14	12. Service	41
4.1 Technical data	14	12.1 Burner Service Schedule, Gas	41
4.2 LED indicator lamps.....	14	12.2 Component replacement intervals.....	41
4.3 Explanation of the different sequence modes.....	15	12.3 Combustion device	42
4.4 BurnerPro LED fault/lock code table.....	16	12.4 Air damper.....	43
5. Installation.....	20	12.5 Replacement, Damper motor air.....	44
5.1 General instructions	20	12.6 Fan	45
5.2 Instructions	20	12.7 Vibrations.....	46
5.3 Inspection and maintenance.....	20	12.8 Flame monitoring and ionisation current check	47
5.4 Preparation for assembly	20	12.9 UV-5 detector.....	47
5.5 Gas supply	20	12.10 Replacement of electrical components.....	48
5.6 Electric connection	20	13. Handing over of the installation	49
5.7 Handling and lifting instruction	21	14. Troubleshooting.....	50
6. Mounting	22	15. Service- and inspection protocol	52
6.1 Gas nozzle.....	23		
6.2 De-aerating.....	24		
6.3 Leakage control.....	24		
6.4 Calculate prepurge time, Industrial applications	25		
6.5 Calculation of gas flow	26		

1. General Information

The burner may only be used for its intended purpose in accordance with the product's technical data.

We reserve the right to make design changes and cannot be held liable for any misprints or typographical errors.

Modifying the design or using accessories or components that have not been approved by Enertech in writing is strictly prohibited.

This Installation and Maintenance manual:

- is to be regarded as part of the burner and must always be kept near the installation site.
- must be read prior to installation.
- is intended for use by authorised personnel.

1.1 Delivery inspection

- Make sure everything is delivered and the goods have not been damaged during transit. Transport damage should be reported to the shipping company.
- If something is wrong with a delivery, report it to the supplier.

1.2 Safety

- before installation:

- Installation and work on the burner and associated system components may only be carried out by persons who have undergone relevant training.
- The product is packaged to prevent damage from occurring when handled – Handle the product with care! Lifting equipment must be used to lift larger packages.
- The products must be transported/stored on a level surface in a dry environment, max. 80% relative humidity, no condensation. Temperature -20 to +60 °C.

- installation:

- The burner must be installed in accordance with local regulations for fire safety, electrical safety, and fuel distribution.
- The premises must comply with local regulations pertaining to use of the burner and must have adequate air supply.
- The installation site must be free of chemicals.
- Fire extinguisher with Class BE recommended.
- Make sure when installing the burner that there is enough space to service the burner.
- The electrical installation must be professionally carried out in accordance with current mains electricity regulations and in a professional manner.
- Make sure that the burner is suitable for the application (see Technical Data).
- All components must be installed without being bent, twisted or subjected to mechanical or thermal forces that affect components.



- Care must be taken by the installer to ensure that no electrical cables or fuel lines are pinched or otherwise damaged during installation or service.
- Sharp edges can occur on, for example: flame tube, fan wheel and air damper.
- The gas outlet from the pressure regulator must be configured in accordance with applicable regulations and lead to a safe area.

- before first start:

- The burner must not be put into operation without proper safety and protection devices.
- Permitted ambient temperature during operation -10 to +60 °C. Max. 80% relative humidity, no condensation.
- The surface temperature of the burner's components may exceed 60 °C.
- Handle with caution – the burner has moving parts, and there is risk of crushing injuries.
- Seal inspections must be performed during installation and servicing to prevent leakage.
- Fitting and installation work has been completed and approved.
- Electrical installation has been correctly performed.
- Flue gas ducts and combustion air ducts are not blocked.
- All actuators and control and safety devices are in working order and correctly set.
- If the boiler is equipped with an access hatch, this must be equipped with a hatch opening switch connected to the burner's safety system.
- When in operation, the burner's noise level can exceed 85 dBA – use hearing protection!

- Operation:

- Carry out all stipulated settings, service and inspection work within the set time.

1.3 What to do if you smell gas

- Turn off the fuel supply.
- Turn off the device and remove the boiler from operation.
- Open windows and doors.
- Prevent open flames or sparking, e.g. do not turn lights on or off, do not use any electrical appliances or mobile phones.
- Evacuate the building.
- Notify the installer or gas supplier of the problem so that it can be rectified.



2. Technical data


The burner is intended for:

- Operation in installations according to EN 303 and EN 676.

Fuels:

- Natural gas H, E, L, LL.
- Dry biogas max 0.1 Vol% H₂S and min 50% CH₄.

2.1 Dimensions BG 700-2

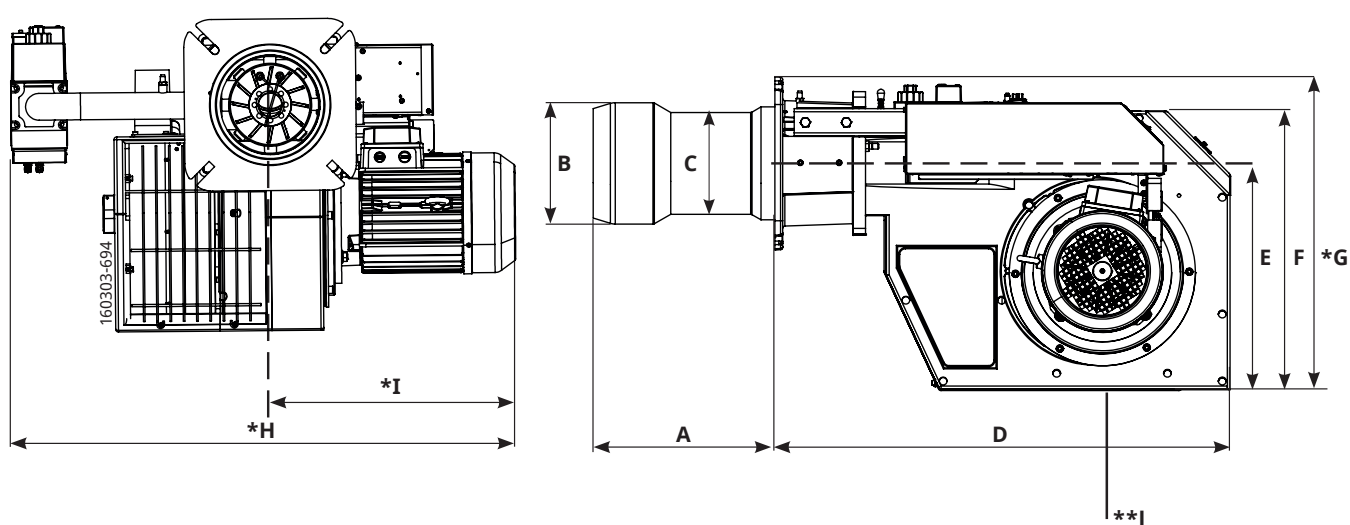

Length of flame tube	Flame tube measure A	Flame tube measure B	Flame tube measure C
363	328	ø220	ø205
663	628	ø220	ø205

D	E	F	G	H	I	J
820	410	510	*730	*970	420	**200


* The above dimensions are max. measurements. Depending on the components used, the measurements may vary.

** Min. recommended distance to floor.

2.1.1 Measurements for connection to the boiler

K	L	M
14	(Ø 280) Ø320-380	***(Ø 210) Ø 230

***Dimensions when installing flame tube from the inside of the heat generator.

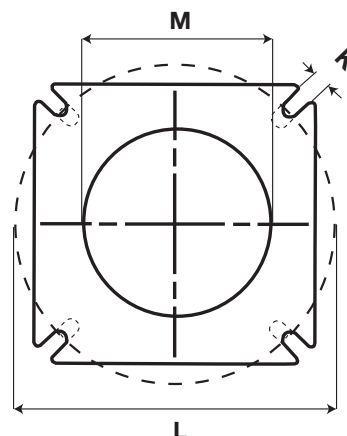

2.2 Capacity range

Capacity kW	Gas quantity at min. power Nm³/h	Gas quantity at max. power Nm³/h	Max. connection pressure mbar	Min connection pressure mbar
BG 700				See data plate.
G20 300-1500	31.7	158.7	360	
G25 300-1500	36.9	184.5	360	
Biogas 300-1200	50.0	200.0	360	

160303-698

Gas quantity and capacity vary according to grade of gas and connection pressure.

2.3 Gas categories, approved gases

Components are approved for dry biogas with a maximum content of 0.1% H₂S.

Category	Country of destination	Supply pressure
II _{2R3R}	AT, BE, BG, CH, CY, CZ, DE, DK, EE, ES, FI, FR, GB, GR, HR, HU, IE, IS, IT, LT, LU, LV, MK, MT, NL, NO, PL, PT, RO, RS, SE, SI, SK, TR	40 mbar
II _{2H3B/P}	AT, CH, CY, DK, FI, LT, RO, SE, SK	40 mbar
II _{2H3P}	GB, IE	40 mbar
II _{2L3B/P}	NL, RO	40 mbar
II _{2E3B/P}	PL	40 mbar
I _{2E(R)B}	BE	40 mbar
I _{3P}	BE	40 mbar

160302-235-3

2.4 Technical specification

BG 700-2	
Main supply, Operation ^{1) 2)}	230V, 1~, 2.3A, 50Hz, IP20
Main supply, Motor ¹⁾	230/400V, 10.4/6.0A
Max fuse rating, Motor	6.3A
Max fuse rating, Operating	C10A
NO _x -class	2
Noise level	93 dBA

¹⁾ Max operating current, see data plate.


²⁾ Motor excluded.

Measurements according to EN 15036-1:2006

Alt.1 The noise level of the burner can be reduced by equipping the burner with silencer. Installation must be done so it does not prevent air supply to the burner.


Alt.2 The burner's noise level can be reduced by connecting the burner's air intake to the air duct that opens into an appropriate location. Installation must be done so it does not prevent air supply to the burner.

2.5 Working field

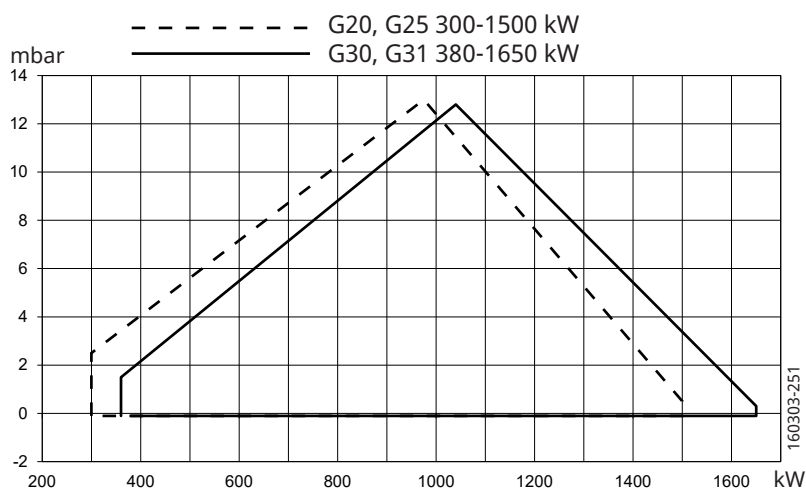


Do not exceed working field.

2.6 Components

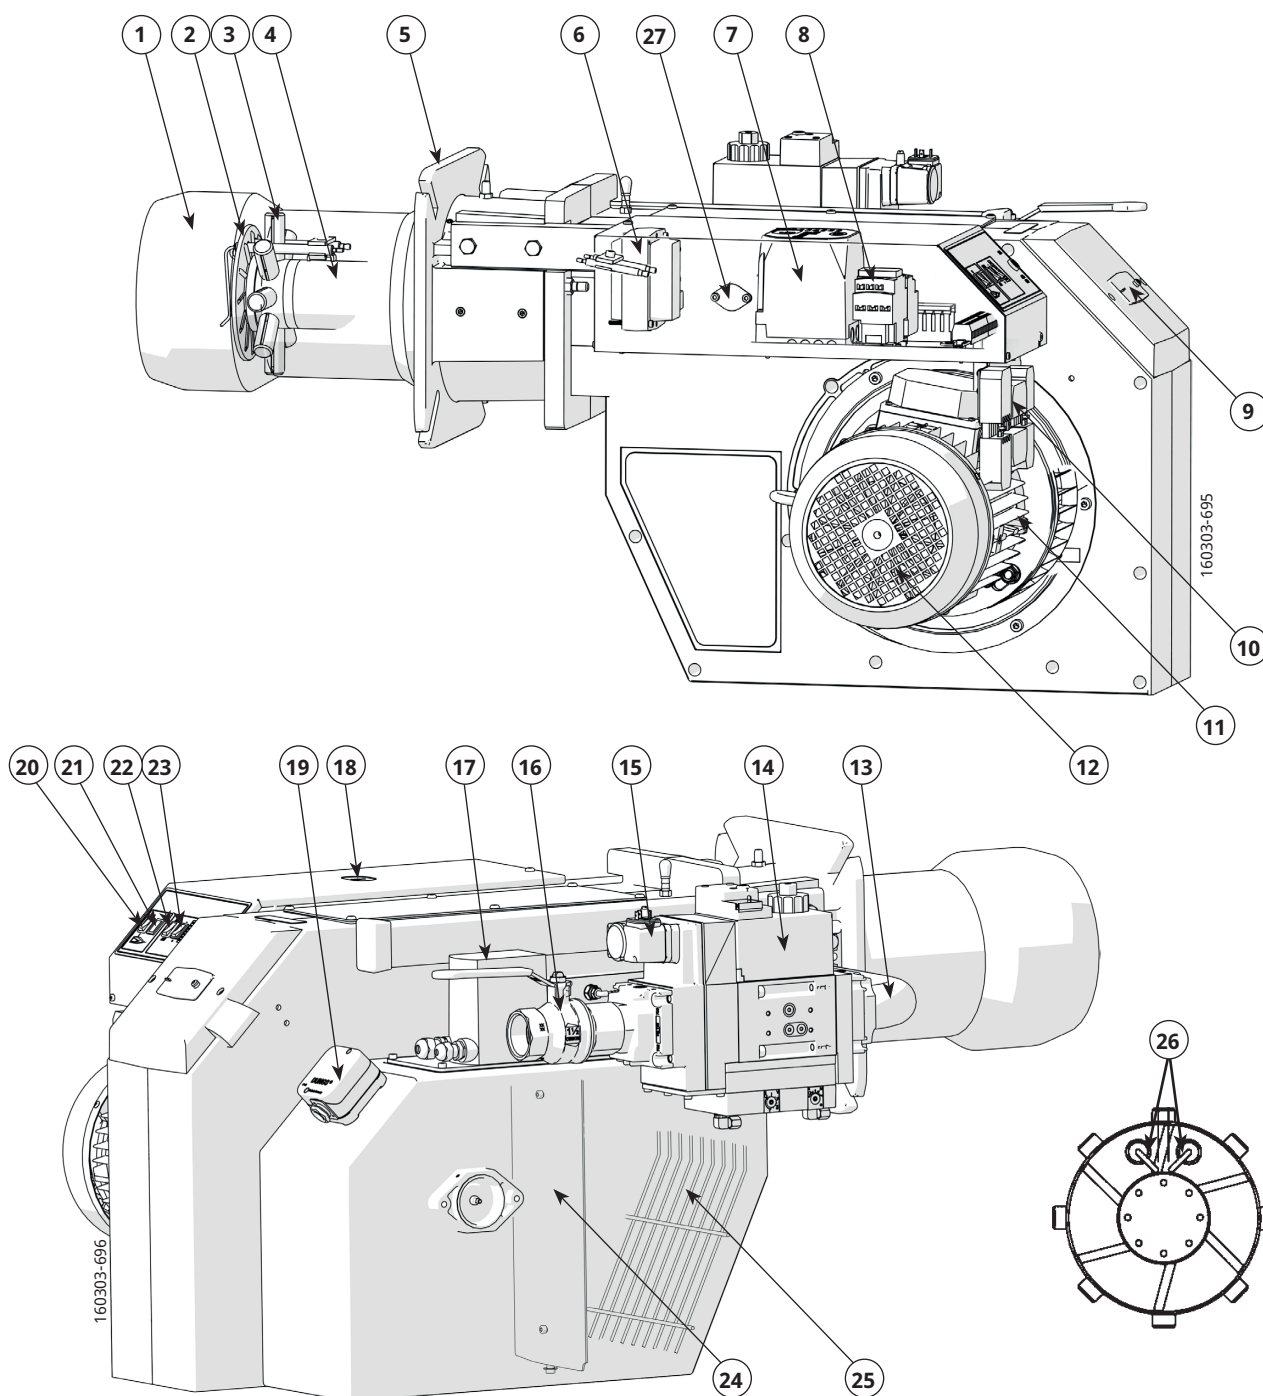

- | | | |
|------------------------------------|------------------------------|------------------------------|
| 1. Flame tube | 10. Electrical connection | 19. Air pressure switch |
| 2. Brake plate | 11. Fan wheel | 20. Power switch 0-I |
| 3. Nozzle | 12. Motor | 21. Indication lamp, Stage 1 |
| 4. Inner assembly | 13. Connection, gas | 22. Power switch I-II |
| 5. Fixing flange | 14. Gas valve (MultiBloc) | 23. Indication lamp, Stage 2 |
| 6. Transformer | 15. Gas pressure switch, min | 24. Air damper |
| 7. Burner Control | 16. Ball valve | 25. Air intake |
| 8. Contactor + Overload protection | 17. Damper motor | 26. Ignition electrodes |
| 9. Cover, inspection glass | 18. Reset button | 27. Flame detector |

2.7 Skeleton diagram 2-stage burner, Biogas

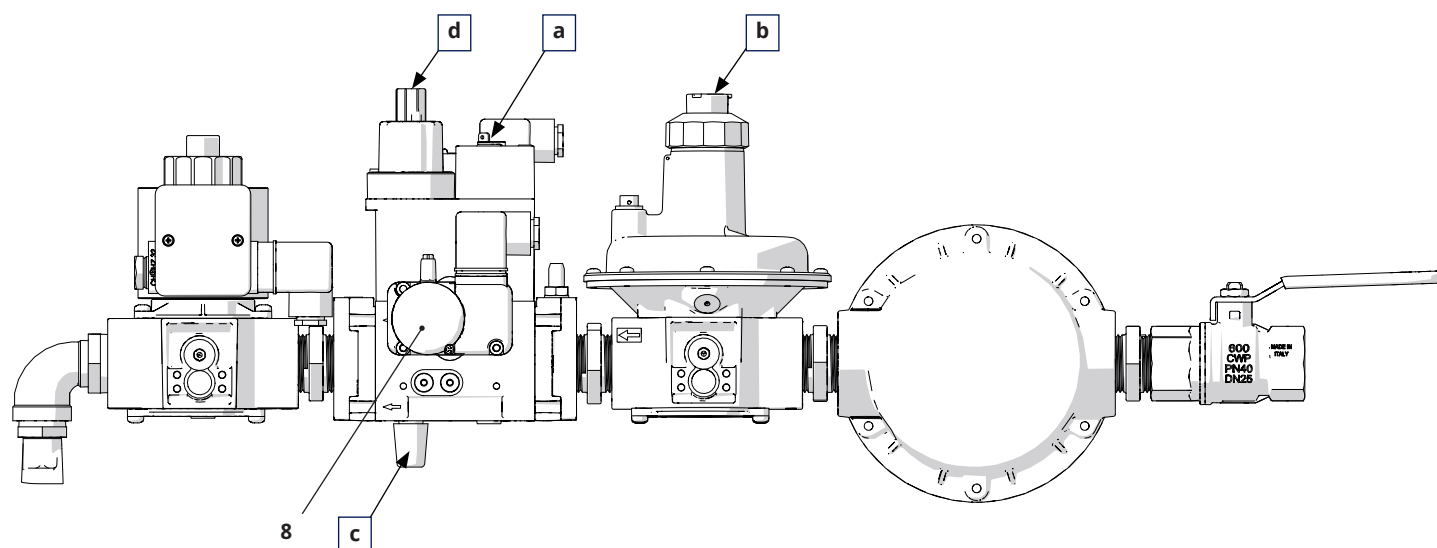


Gas train

1. Ball valve
2. Filter
3. Pressure regulator
4. Pressure outlet
5. Gas valve
6. Leakage control (VPS)
7. Safety valve on-off
8. Gas pressure switch

Adjusting points:

- a. Main flow restrictor stage 2 (max load)
- b. Gas pressure adjustment
- c. Main flow restrictor stage 1 (min load)
- d. Hydraulic brake stage 1 to 2

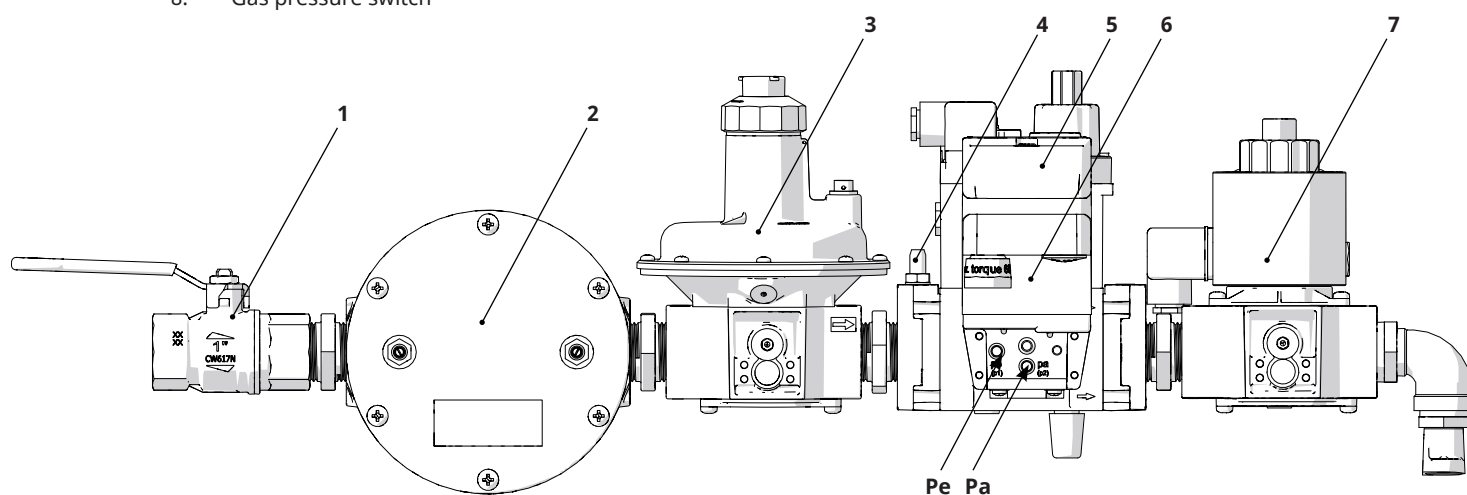

Pe Pressure before valve
Pa Pressure between valves

2.8 Adjusting the gas train

The burner is test run with propane before delivery.

The safety valve (7) must be fully open during operation. At initial setting, the adjusting screw (c) must have lifted the valve for stage 1 by 1-2 turns.

On start-up, safety valve (7) and valve on double solenoid valve (5) open, gas flows through the valve for stage 1.

When the burner has started on stage 1, proceed to stage 2 and start adjusting this stage first. When stage 2 is complete, adjust stage 1.

Adjustment of stage 2 is done with adjusting screw (a) on the double solenoid valve (5) which regulates the opening of the valve controlling the gas for stage 2. The burner is now receiving gas for maximum load, adjust the power on stage 2 to the desired load and set the air damper for stage 2 and nozzle assembly for a good combustion.

The power is adjusted for stage 2 by adjusting the opening of valve 1 with the adjusting screw (a) and the gas pressure is adjusted on the pressure regulator screw (b). The air damper and nozzle assembly shall also be adjusted to obtain the correct air volume and good combustion.

Adjustment of stage 1 on the burner is done when stage 2 is complete, adjust the stage 1 valve on the double solenoid valve (5) using the adjusting screw (c). If this is screwed in, the gas flow to the burner is increased by lifting the valve. This valve is always open and this opening is what gives the min-load. Adjust the air damper for stage 1 for good combustion.

3. Electric equipment

3.1 Safety system

The safety system (safety switch for hatches, doors, water level, pressure, temperature and other safety devices) must be installed in the safety circuit in accordance with current regulations for the system.

The cables of the safety system must be separated so that the outgoing signal is not placed in the same cable as the incoming signal.




Mains connection and fuse in accordance with local regulations.

3.2 Components

A1	Burner control	S7	Main switch, 3-phase
A3	Leakage control, VPS504	S8	Air pressure switch
F1	Fuse	S9	Gas pressure switch, min
F2	Fuse	S10	Gas pressure switch, max.
F3	Fuse	S20	Main switch, 1-phase
H1	Lamp, low capacity	T1	Ignition transformer
H2	Lamp, high capacity	X1	Connection terminal board
K1	Contactor + Overload protection	X2	Earth terminal
M1	Motor	X3	Plug-in contact, burner
M2	Damper motor	X4	Plug-in contact, boiler
R1	UV-detector	X5	Plug-in contact, stage 2, burner
S1	Operating switch	X6	Plug-in contact, stage 2, boiler
S2	Operating switch, Stage 2	X7	Plug-in contact, 3-phase, burner
S3	Regulating/Operating thermostat	X8	Plug-in contact, 3-phase, boiler
S4	Temperature/Pressure limiter	Y1	Solenoid valve 1
S5	Safety switch for hinged door	Y2	Solenoid valve 2
S6	Control thermostat, Stage 2	Y3	Safety valve

3.3 Wiring diagram

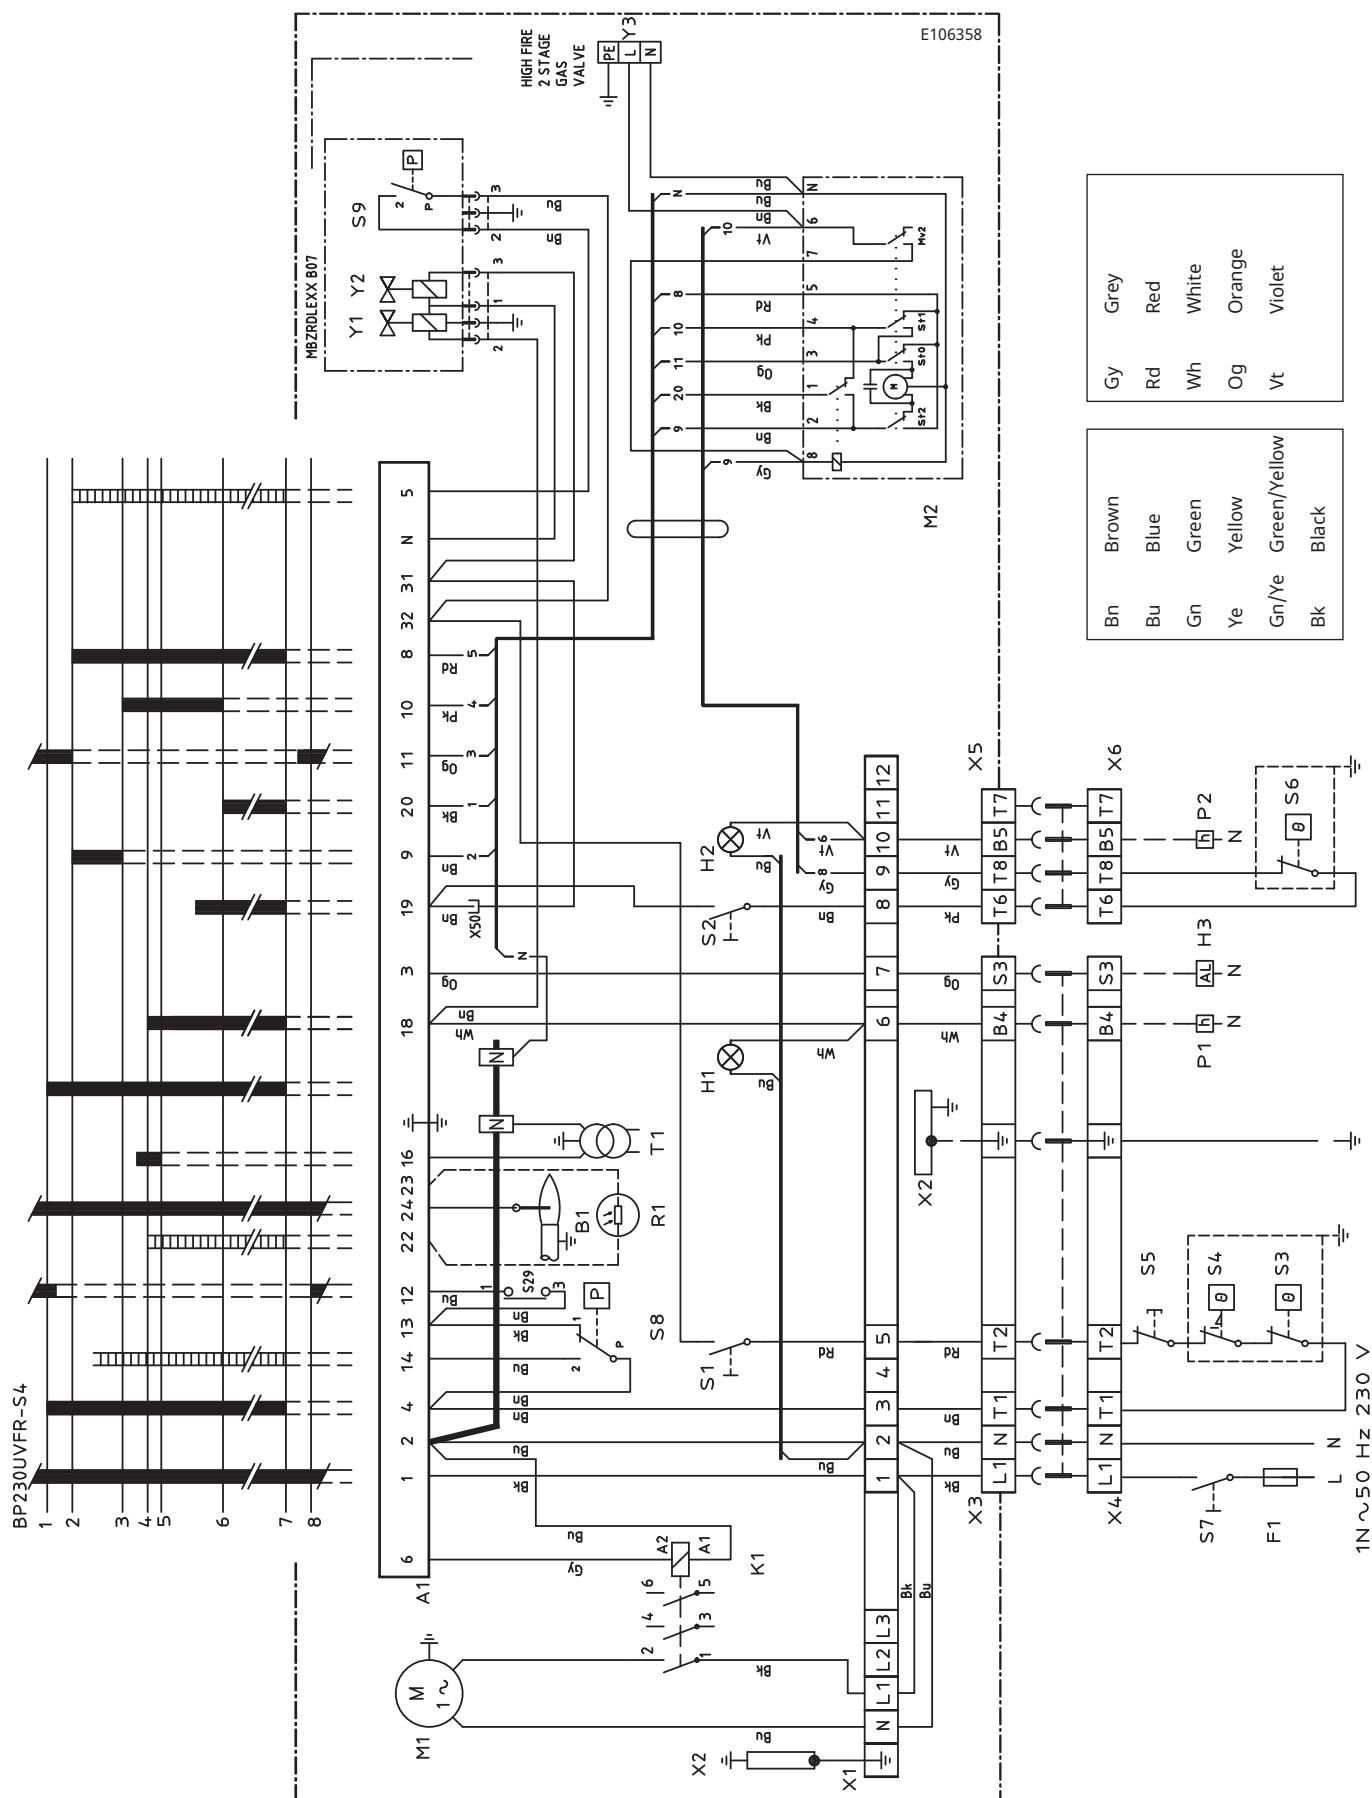

4. Control








	BP230UVFR-S2	BP230UVFR-S3	BP230UVFR-S4
Pre-purge time (t1)	30.7 s	37.2 s	60 s
Pre-ignition time (t3)	6 s	2.5 s	2.5 s
Safety time (TSA)	3 s	5 s	5 s
Post-purge time (t6)	16.8 s	14.9 s	15 s
Reaction time for low interrupt	1 s	1 s	1 s
Ambient temperature BP	-40 to +60 °C	-40 to +60 °C	-40 to +60 °C
Ambient temperature UV5	-20 to +60 °C	-20 to +60 °C	-20 to +60 °C
Max. current, terminals 6-7	2 A	2 A	2 A
Max. current, other terminals	1 A	1 A	1 A
Ionisation current	3-10 µA	3-10 µA	3-10 µA

4.1 Technical data

4.2 LED indicator lamps

BurnerPRO's burner control has seven LEDs which indicate the operating status of the control unit and the cause of the lockouts.

Each LED has an icon describing its function.

	FAN	Lights up when voltage is supplied to the fan motor (terminal 6)
	OPEN DAMPER 6	Flashes when the damper motor runs to maximum position. When the switch for the maximum damper motor position closes, this LED will light continuously.
	CLOSE DAMPER 5	Flashes when the damper motor runs to minimum position. When the switch for the minimum damper motor position closes, this LED will light continuously.
	AUTO 4	Lights up when the Burner control is in normal operating mode.
	IGNITION 3	Indicates ignition
	FLAME 2	Lights up when a flame is detected by the flame detector.
	ALARM/STATUS	In lockout mode, the Alarm lamp lights up and the other LEDs light up to indicate lockout. Refer to "Fault codes".

The LEDs can show the flame strength in Control mode by pressing the reset button for 3 seconds when the Flame LED flashes during start-up. In Control mode, the Status LED shines yellow, the Fan LED flashes, and LEDs 2-6 show the flame signal strength. Each LED corresponds to 20% of the total flame signal. 5 lit LEDs correspond to 100% and 2 LEDs correspond to 40%.

4.3 Explanation of the different sequence modes

1. **Operation**
This is the control unit voltage supply.
2. **System test**
In this status mode, the control unit undergoes an internal test to verify correct functionality of the hardware and software.
3. **Preconditions for burner start-up**
The control unit verifies that the air pressure switch is in the depressurised position and a test of the fuel cut-off valve is carried out.
4. **Heating requirement**
The operating thermostat closes and voltage is supplied to connection 5 so that the control unit can start the burner.
5. **Pre-purge begins**
The control unit starts the fan. Connections 6 and 7.
6. **Damper motor opens**
Control unit connection 9 sends a command to the damper motor to run at Max. mode. The control unit detects that the damper motor's end position switch indicates successful transition to the Max. load mode by supplying voltage to the connection 8 input. The control unit also performs a test to ensure that the air sensor detects airflow by monitoring connection 14.
7. **Pre-purge**
The combustion chamber is ventilated.
8. **Damper motor closes**
Following pre-purge, the control unit closes connection 10. The control unit detects that the damper motor is in the Low Load mode by supplying voltage to connection 8 on the control unit.
9. **Ignition on**
The control unit supplies voltage to the ignition transformer by activating connection 16.
10. **Fuel on** The control unit activates the fuel valve by supplying voltage to connections 17 and 18 as well as to direct ignition systems.
11. **Flame indication**
Ignition transformer turns off. The flame signal is tested during this stage. If no flame is detected, the burner enters Lockout mode.
12. **Operating mode**
Once a flame is stable, the control unit transitions to Operating mode. There must be a flame signal. Voltage is supplied to connection 20.
13. **Shutdown**
Shutdown occurs when the heating requirement is met and power is cut off to the operating thermostat connection 5 . The control unit closes the fuel valves by cutting off power to outputs 18 and 20. The fan post-purges the combustion chamber.
14. **Lockout**
The control unit enters lockout mode when an internal or external fault is detected. The reset button and the remote-reset connection can be used to disable Lock mode. However, the control unit will revert to lockout mode if the fault is not rectified.








Burner Lockout

When lockout occurs, the LEDs indicate the cause. The control unit status is saved in the memory, even in the event of a power outage. By pressing the manual reset button on the control unit or remote reset.



Note! At remote reset: maximum 5 reset attempts within a 15 min period, after which qualified personnel must examine the burner before further reset attempts are made.

4.4 BurnerPro LED fault/lock code table

NO.	FAULT	LED 1	LED 2	LED 3	LED 4	LED 5	LED 6	LED 7	POSSIBLE SOLUTION
	OPERATION LED ● = ON	Fan	Open damper	Closed damper	Auto	Ignition	Flame	Status	
	ICON								
1	DIAGNOSTIC ERROR, MAIN MCU INLET	●						RED	Initial diagnostic error. Ensure correct status of inputs and outputs when the unit is turned on.
2	LOCAL RESET		●					RED	User-initiated manual reset/lockout or defective reset switch.
3	AIR SENSOR	●	●					RED	Air sensor signal [connection 14] could not be detected by the end of the safety time, or loss of the air sensor signal during burner operation
4	DIAGNOSTIC ERROR			●				RED	"The system detected voltage at terminal 16, 17, 18, or 19 at the incorrect time, or no voltage detected when necessary. Check cabling and makes sure the system is running on a single line phase (50/60Hz)"
5	IONISATION FLAME LOSS	●		●				RED	Flame loss. Inspect the system, check the gas pressure, flame detector, cabling, etc.
6	IONISATION CIRCUIT FAULT		●	●				RED	Replace the control unit. Contact reseller/distributor.
7	INTERNAL COMMUNICATION ERROR	●	●	●				RED	Reset the system to continue normal operation. Contact reseller/distributor if the fault persists.
8	REMOTE RESET				●			RED	The user has pressed Remote Reset or the remote controller has short-circuited.
9	IONISATION FAULT	●			●			RED	Replace the control unit. Contact reseller/distributor.
10	MAIN PROGRAM SEQUENCE ERROR		●		●			RED	Replace the control unit. Contact reseller/distributor.
11	RAM TEST	●	●		●			RED	Replace the control unit. Contact reseller/distributor.
12	PROGRAM SEQUENCE ERROR			●	●			RED	Replace the control unit. Contact reseller/distributor.
13	READING ERROR INPUT	●		●	●			RED	Check cabling and makes sure the system is running on a single phase (50/60Hz)
14	TIMER2 ERROR		●	●	●			RED	Replace the control unit. Contact reseller/distributor.
15	CPU TEST FAILED	●	●	●	●			RED	Replace the control unit. Contact reseller/distributor.

NO.	FAULT	LED 1	LED 2	LED 3	LED 4	LED 5	LED 6	LED 7	POSSIBLE SOLUTION
16	FLAME LOSS	●				●		RED	Visually inspect the flame detector and confirm that the pilot light was lit during start-up. Check the fuel supply system.
17	CABLE FAULT		●			●		RED	The system detected voltage at terminal 16, 17, 18, or 19 at the incorrect time, or no voltage detected when necessary. Check cabling and makes sure the system is running on a single phase (50/60Hz)
18	SAFETY RELAY FAULT	●	●			●		RED	Replace the control unit. Contact reseller/distributor
19	FUEL VALVE OPEN			●		●		RED	Check fuel valve cabling. The valves may not be fully closed.
20	FLAME LOSS	●		●		●		RED	Visually inspect the flame detector and confirm that the main flame was lit during start-up. Check the fuel supply system.
21	WELDED SAFETY RELAY		●	●		●		RED	Replace the control unit. Contact reseller/distributor.
22	SELF TEST	●	●	●		●		RED	Replace the control unit. Contact reseller/distributor.
23	ROM ERROR				●	●		RED	Replace the control unit. Contact reseller/distributor.
24	FLAME LOSS DURING OPERATION	●			●	●		RED	Check the cabling. Check the flame detector. Check the fuel supply system.
25	RAM ERROR		●		●	●		RED	Replace the control unit. Contact reseller/distributor.
26	INTERNAL FAULT	●	●		●	●		RED	Replace the control unit. Contact reseller/distributor.
27	NOT USED								
28	NOT USED								
29	AMBIENT TEMPERATURE		●	●	●	●		RED	Ambient temperature below -40 °C or above 70 °C
30	ROM ERROR	●	●	●	●	●		RED	Replace the control unit. Contact reseller/distributor.
31	IONISATION SHORT-CIRCUIT						●	RED	Possible external short-circuit between terminals 23 and 24. Contact reseller/distributor if the fault persists.
32	TIME LIMIT EXCEEDED FOR CONTROL MODE	●					●	RED	30-minute activation time passed.
33	STANDBY FALSE FLAME		●					RED	False flame detected in Standby mode.
34	NOT USED							RED	
35	INTERNAL RESET			●			●	RED	Internal software reset of control unit. Contact reseller/distributor if the fault persists.

NO.	FAULT	LED 1	LED 2	LED 3	LED 4	LED 5	LED 6	LED 7	POSSIBLE SOLUTION
36	SOFTWARE RESET	●		●			●	RED	Internal software reset of control unit. Contact reseller/distributor if the fault persists.
37	WAITING TIME INPUTS		●	●			●	RED	The system was unable to perform airflow sensor test and/or valve closure test. Check the cabling. Check the air sensor and/or fuel valve switch.
38	INTERNAL RESET	●	●	●			●	RED	Internal software reset of control unit. Contact reseller/distributor if the fault persists.
39	SOFTWARE RESET				●		●	RED	Internal software reset of control unit. Contact reseller/distributor if the fault persists.
40	HARDWARE RESET	●			●		●	RED	Replace the control unit. Contact reseller/distributor if the fault persists.
41	HARDWARE RESET		●		●		●	RED	Replace the control unit. Contact reseller/distributor if the fault persists.
42	CONTROL PROGRAM FROZEN	●	●		●		●	RED	Replace the control unit. Contact the distributor/factory.
43	CONTROL PROGRAM FROZEN			●	●		●	RED	Replace the control unit. Contact reseller/distributor.
44	TIMER2 ERROR	●		●	●		●	RED	Replace the control unit. Contact reseller/distributor.
45	LOW VOLTAGE ERROR		●	●	●		●	RED	Check mains power. Contact reseller/distributor if the fault persists.
46	LOW VOLTAGE ERROR	●	●	●	●		●	RED	Check mains power. Contact reseller/distributor if the fault persists.
47	UV DETECTION FAULTY					●	●	RED	Replace the control unit. Contact reseller/distributor.
48	INTERNAL FAULT	●				●	●	RED	Replace the control unit. Contact reseller/distributor.
49	INTERNAL FAULT		●			●	●	RED	Replace the control unit. Contact reseller/distributor.
50	IGNITION FEEDBACK	●	●			●	●	RED	The system detected voltage at terminal 16 at the incorrect time, or no voltage. Check cabling and ensure sufficient earthing.
51	PILOT FEEDBACK			●		●	●	RED	The system detected voltage at terminal 17 at the incorrect time, or no voltage. Check cabling and ensure sufficient earthing.
52	MAINP FEEDBACK	●		●		●	●	RED	The system detected voltage at terminal 19 at the incorrect time, or no voltage. Check cabling and ensure sufficient earthing.
53	WAITING TIME FEEDBACK LIMIT EXCEEDED		●	●		●	●	RED	Loss of feedback from the damper motor for more than 10 minutes. Check the cabling. Check the damper motor.
54	MAIND FEEDBACK	●	●	●		●	●	RED	The system detected voltage at terminal 18 at the incorrect time, or no voltage. Check cabling and ensure sufficient earthing.
55	DIAGNOSTICS INTERRUPTED				●	●	●	RED	Replace the control unit. Contact reseller/distributor.

NO.	FAULT	LED 1	LED 2	LED 3	LED 4	LED 5	LED 6	LED 7	POSSIBLE SOLUTION
56	UV FALSE FLAME			●	●	●	●	RED	False flame detected prior to ignition. Check the cabling. Check the flame detector. Ensure sufficient earthing.
57	IONISATION FALSE FLAME			●	●	●	●	RED	False flame detected prior to ignition. Check the cabling. Check the flame detector. Ensure sufficient earthing.
58	OPEN FEEDBACK READING		●	●	●	●	●	RED	The system detected voltage at terminal 8 at the incorrect time, or no voltage. Check cabling and ensure sufficient earthing.
59	ADJACENT POLE SHORT-CIRCUIT	●			●	●	●	RED	Replace the control unit. Contact reseller/distributor.
60	LOCAL RESET	●	●	●	●	●	●	RED	The local reset button has been pressed in for more than 10 seconds, or the reset button is stuck.
61	FUEL VALVE OPEN		●		●	●	●	RED	Fuel valve open at incorrect time.
62	STRONG UV FLAME	●	●		●	●	●	RED	Flame detector too close to the flame. Increase the distance between the flame detector and the flame.
63	INTERNAL FAULT					●		RED	Replace the control unit. Contact reseller/distributor.

5. Installation

5.1 General instructions

Installation must be carried out in accordance with current regulations and instructions.

The supplier/installer of the facility is obliged to familiarize himself with all regulations so that the installation meets the requirements of the local authorities.

Installation, assembly and settings must be performed to obtain the best possible function. Only gas intended for the gas burner may be used.

5.2 Instructions

It is the installer's responsibility to instruct the user in detail in the functions of the gas burner and the entire system.

5.3 Inspection and maintenance

The system must be maintained at the interval specified in the service schedule. If the burner is in a dirty environment, service should be done at more frequent intervals.

5.4 Preparation for assembly

Check that the burner's dimensions and capacity range match the current boiler. The power information on the type plate refers to the burner model's min. and max. effect.

5.5 Gas supply

In order to obtain good operational safety, it is important that the installation of the gas distribution system is carried out correctly, considering the following:

- Check that the burner is approved for the gas quality of the installation.
- Check that the burner gas components are approved for the specified gas pressure, see type plate.
- Installation must be carried out in accordance with current standards.
- Pipe lines should be assembled so that service can easily be performed on the boiler and burner.
- Pipe lines should be assembled so that any contaminants do not come into contact with the gas components.


5.6 Electric connection

- Before work on the electrical connection, the current must be disconnected so that the installation is isolated.
- Connection must be done in accordance with the applicable regulations.
- Connection must conform to the wiring diagram.



If any electrical connection other than that recommended by Enertech is used, there is a risk of property damage and personal injury.


5.7 Handling and lifting instruction

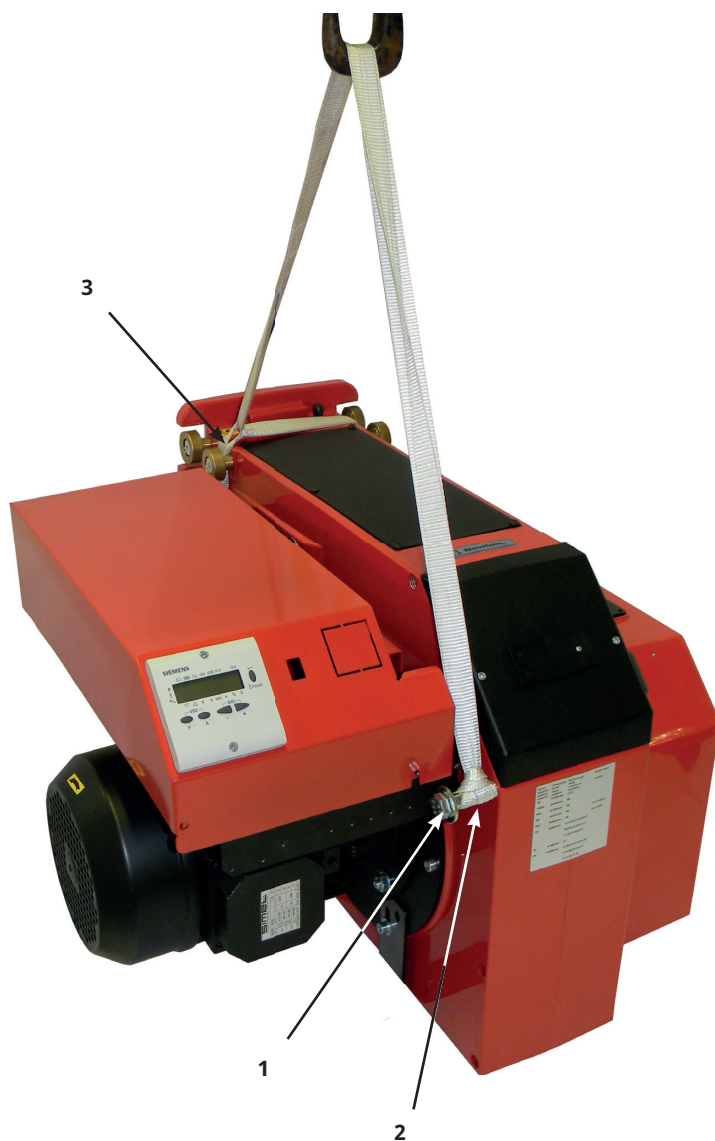


1



2

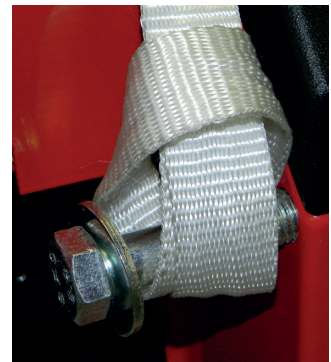

3

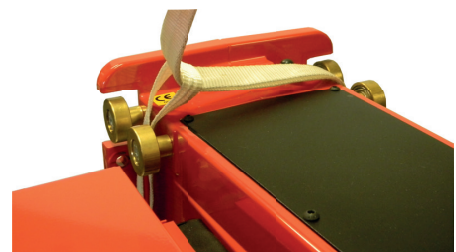

Lifting kits can be purchased as accessories.



172 515 37

6. Mounting


Mount the burner to the boiler using 4 bolts (if new fixing holes need to be drilled, use the fixing flange as a template).

Separate the fixing flange from the fan housing as follows:

1. Remove cover (C) from fan housing and disconnect ignition and ionization cables.
2. Disconnect the electrical cable to the gas valve.
3. Loosen nuts on both sides of the fixing flange.
4. Loosen end stop (C) for guides.
5. Pull the fixing flange with flame tube, nozzle assembly and gas fitting out of the fan housing.
6. Disconnect the connecting pipe from the fixing flange.
7. Check that the ignition electrodes are correctly set, see chapter Gas nozzle.
8. Fit the enclosed gasket to the flame tube.
9. Screw the fixing flange and the enclosed gasket onto the boiler, lift the fan housing onto the guides and mount in reverse order.
10. Connect the gas line, connect the supply cable, operating and safety circuits.




Before obtaining access to electrical and fuel line components all supply circuits must be disconnected.

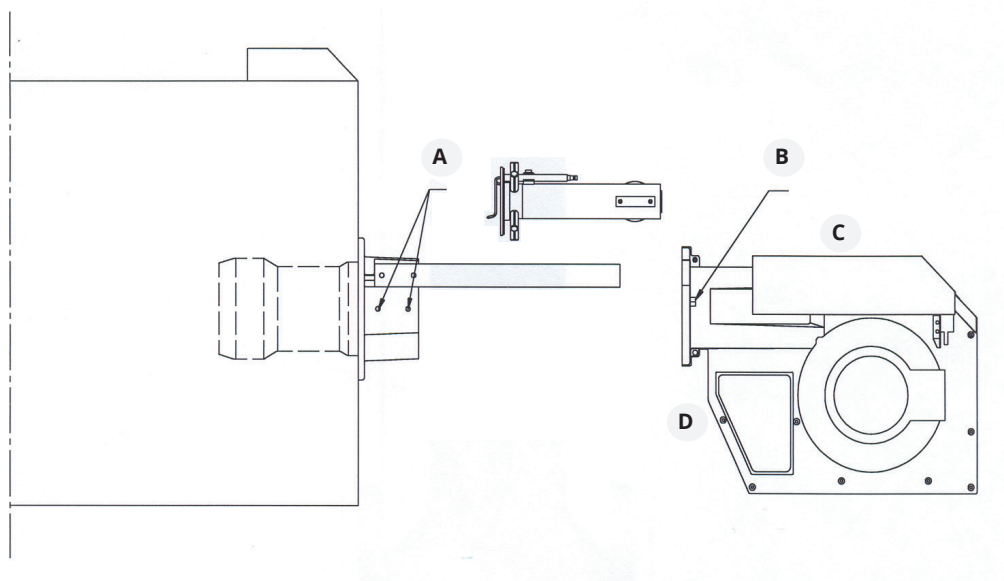


6.1 Gas nozzle

Check that the ignition electrodes are correctly set before mounting on the boiler.


Natural gas

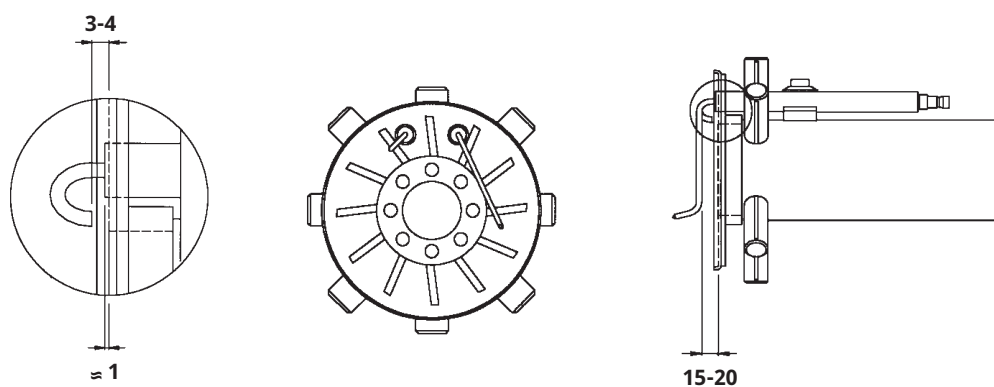

Propane

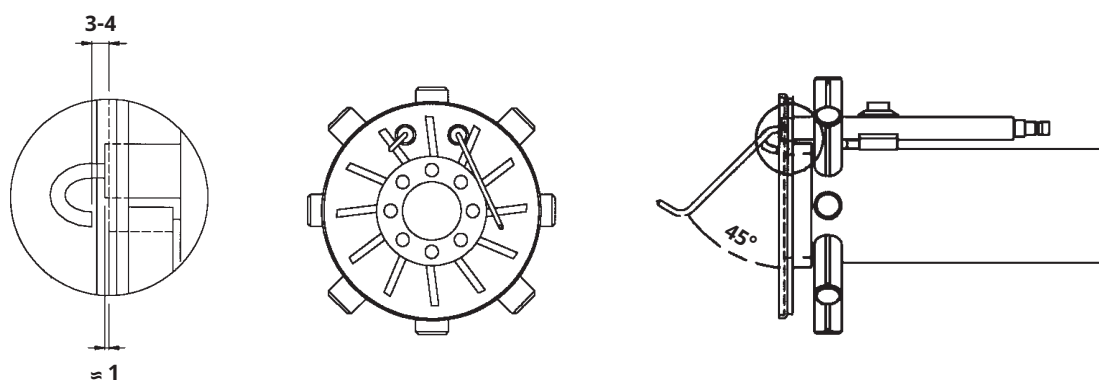

Biogas (UV detector)

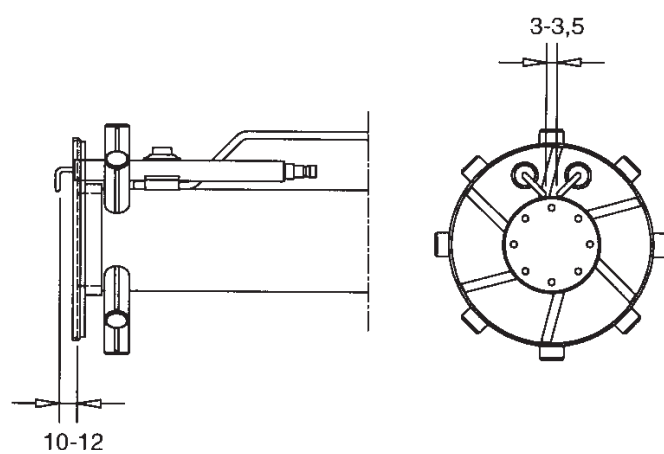

6.2 De-aerating



De-aerating the gas line by closing the tap to the gas connection and unscrewing the screw on the measuring nipple for the connection pressure. Connect a plastic hose, open the tap and drain the gas in a safe place. When the de-aerating is completed, be sure to refit the screw on the measuring nipple.

6.3 Leakage control

When checking for leakage, the solenoid valve must be closed. A pressure gauge is connected to the measuring nipple "Pa", see picture. The test pressure in the system must not be higher than max. connection pressure, see data plate. If leaks are found during measurement, locate the source using soapy water or leak detection spray. After sealing: check the leakage of the gas fixture again.



Check for leaks in the gas line.

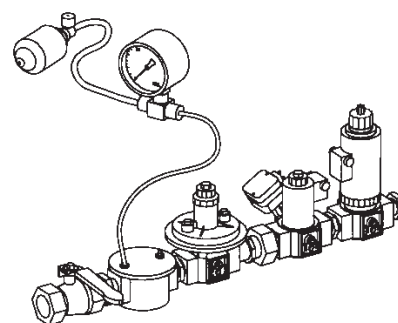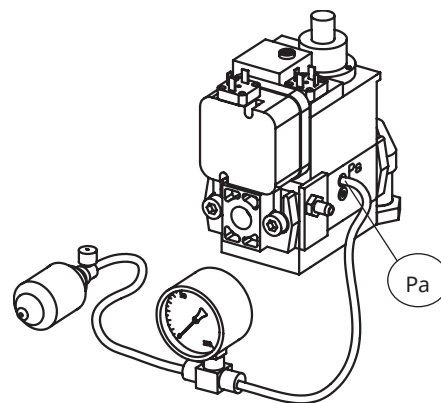

6.4 Calculate prepurge time, Industrial applications

Prepurge time can be set on control unit LMV with parameter 225.

Formula symbol	Description	Example values
V	Volume fire box [m³]	10.5 m³
Q	Burner output [kW]	1050 kW
T	Prepurge time [s] Industrial applications according to EN 746. The prepurge time must correspond to at least 5 complete air circulations in the fire box and adapted compartments.	

Calculate prepurge time using the following formula:

$$T = \frac{V \cdot 5}{Q \cdot 1.2 / 3600}$$

$$T = \frac{10.5 \text{ m}^3 \cdot 5}{1050 \text{ kW} \cdot 1.2 / 3600} = 150 \text{ s}$$

6.5 Calculation of gas flow

Formula symbol	Description	Example values
V_N	Standard gas volume [Nm ³ /h] Gas volume at normal condition 15 °C 1013 mbar	-
Q	Boiler output [kW]	1050 kW
H_i	Lower calorific value of gas [kWh/m ³] Natural gas under normal conditions 15 °C 1013 mbar, EN 676	9.45 kWh/m ³
η	Boiler efficiency (e. g. 90%)	0.9
f	Conversion factor (pressure and temperature compensation)	-
t_{Gas}	Gas temperature at gas meter [°C]	15 °C
P_{Baro}	Barometric air pressure [mbar]	945 mbar
P_{Gas}	Pressure of gas at the gas meter [mbar]	20 mbar
V	Operating volume [m ³ /h]	-
VG	Gas flow measured at the gas meter [m ³]	3.61 m ³
T	Measuring time for consumed gas quantity [s]	95 s

Calculate standard volume using the following formula:

$$V_N = \frac{Q}{\eta \cdot H_i} \quad V_N = \frac{1050 \text{ kW}}{0.9 \cdot 9.45 \text{ kWh/m}^3} = 123.5 \text{ m}^3/\text{h}$$

Calculate conversion factor using the following formula:

$$f = \frac{273}{273 + t_{Gas}} \times \frac{P_{Baro} + P_{Gas}}{1013} \quad f = \frac{273}{273 + 15} \cdot \frac{945 + 20}{1013} = 0.90$$

Calculate gas volume using the following formula:

$$V = \frac{V_N}{f} \quad V = \frac{123.5 \text{ m}^3/\text{h}}{0.90} = 136.8 \text{ m}^3/\text{h}$$

Determine operating volume with the following formula:

$$V = \frac{3600 \cdot V_G}{T} \quad V = \frac{3600 \cdot 3.61 \text{ m}^3}{95 \text{ sek}} = 136.8 \text{ m}^3/\text{h}$$

Height above sea level [m]	0	100	200	300	400	500	600	700	800	900	1000	1100	1200
P_{Baro} [mbar]	1013	1001	989	977	966	954	943	932	921	910	899	888	877

Calorific value of the gas

Gas quality		kWh/Nm ³	MJ/Nm ³
Natural gas	G20	9.5	34.02
Natural gas	G25	8.2	29.25

Gas quality		kWh/Nm ³	MJ/Nm ³
Butan	G30	32.25	116.09
Propan	G31	24.44	88.00
Biogas		6.0	21.60

Lower calorific value H_i at normal conditions 15 °C and 1013 mbar, EN 676.
For exact calorific value of the gas, contact the gas distributor.

7. Settings

7.1 Startup

After the burner has been mounted on the boiler and the electrical connection, de-aeration and tightness control have been performed, the burner is ready to start-up.

Read the sections dealing with settings of gas valve, damper motor and combustion device before start-up.

Open the ball valve and turn on the main switch, start the burner and begin setting up the system.

7.2 Control of combustion

Check combustion using flue gas analysis instruments. Set the burner to about 20% excess air and check that good combustion is obtained. Check the actual gas flow on the gas meter to ensure that the correct input power is achieved.

7.3 Setting the air pressure switch


The air pressure switch must block the burner if the amount of air for combustion becomes too low. The air pressure switch must be set so that in the event of a lack of air supply at the burner's max. or min. capacity reacts before the monitored pressure drops so much that poor combustion occurs.

1. Remove protective cover.



Be careful when adjusting the air pressure switch; it contains a live component.

2. Start the burner.
3. Carefully turn the scale on the air pressure switch clockwise until the air pressure switch stops the burner.
4. Measure and note the lowest air pressure in the entire work area.
5. Set the air pressure switch to about 10-15% lower than the lowest noted pressure.
6. Test run the burner and check the function in the entire work area.
7. Refit protective cover.

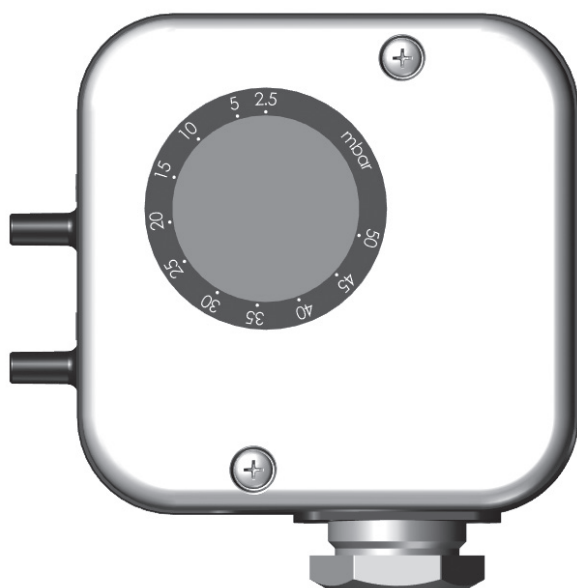


7.4 Setting the gas pressure switch, min.

The gas pressure switch must react to too low a connection pressure to the burner, prevent the burner from starting and stop the burner during operation. The burner may start again when the connection pressure has risen above the set pressure on the gas pressure switch.

1. Remove protective cover.
2. Open measuring socket and connect a manometer for measuring connection pressure.
3. Start the burner.
4. Measure and note the connection pressure to the burner at the highest input power.
5. Set the gas pressure switch to a value 10-15% lower than the noted pressure.
6. Check the setting by carefully closing the ball valve and at the same time measuring the connection pressure.
7. When the gas pressure switch stops the burner, the measured value must approximately correspond to the setting on the gas pressure switch.
8. Open ball valve.
9. Remove manometer and close measuring socket.
10. Refit protective cover.



Check gas tightness.

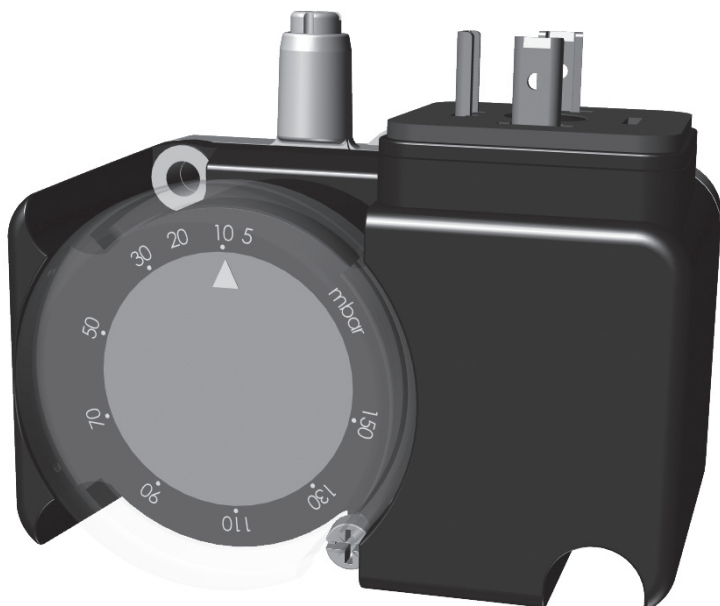

7.5 Setting the gas pressure switch max/ overload protection switch

The gas pressure switch must react to excessive gas pressure in the burner. Start can only be done by manual reset (gas burner control or overpressure switch).

The switch blocks the burner if gas pressure between gas valve and burner becomes too high. The overload protection switch can be connected so that it provides automatic restart or that the burner is blocked, see S10 or S16 in the wiring diagram. The system's safety regulations control connection options.

1. Remove protective cover.
2. Open measuring socket and connect a manometer for measuring connection pressure.
3. Start the burner.
4. Measure and note the highest gas pressure in the entire work area.
5. Set the gas pressure switch to a value 10-15% lower than the noted pressure.
6. Test run the burner and check the function in the entire work area.
7. Remove manometer and close measuring socket.
8. Refit protective cover.



Check the gas tightness.



7.6 Settings Damper motor, 2-stage

Air adjustment

The damper motor rotates the air damper between three preset positions: completely closed, low load and high load. These positions are controlled in the motor by colored cam discs, the black cam disc controls the switching on/off of the solenoid valve. Adjust the amount of air by changing the position of the cam discs.

Blue cam disc is the limit position for closed air dampers and does not normally need to be changed.

Low load

- Set control switch for load position to position II (high load).
- Turn orange cam disc to 0° to reduce airflow and to 90° to increase airflow.
- Return the control switch to position I (low load) and check the combustion values.

High load


- Set control switch for load position to position I (low load).
- Turn red cam disc to 0° to reduce airflow and to 90° to increase airflow.
- Place black cam disc in a position between red and orange cam discs and adjust to obtain a good load change.
- Return the control switch to position II (high load) and check the combustion values.

Release

By pressing the button, the motor is disengaged and the air damper can be turned. The function is used when servicing air dampers.

Recommended excess air

Gas quality	Excess air flue gases		Max % CO ₂
	% O ₂	% CO ₂ Lambda 1.2	
Natural gas	3 - 5	≈10	11.9
Propane	3 - 5	≈11.5	13.9
Butane	3 - 5	≈11.5	14.1
Liquefied petroleum gas	3 - 5	≈11	13.8
Biogas	3 - 5		

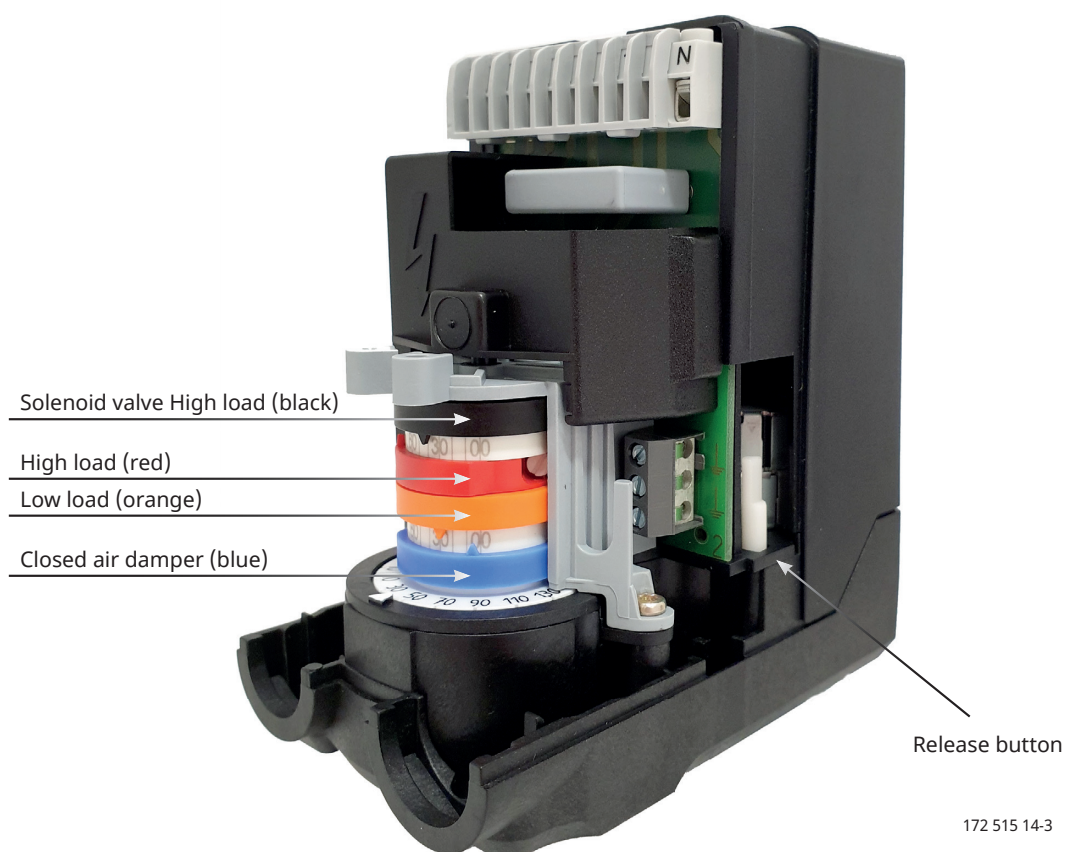

172 515 14-3 2022-10-27

8. Leakage control VPS 504

8.1 Technical data

Test volume	≤	4,0 l
Pressure increase using motor pumps	≈	20 mbar
Backup (customer supply)		10A fast or 6.3A slow
Fuse integrated in housing, replaceable		T6, 3L 250V (IEC 127-2/111) (DIN41662)
Switching capacity		Operating outputs SO1, SO2, SO4: 4A Fault output T7: 1A Fault output SO4 1, 2, 3, T7: 1A
Release time	≈	10 - 30 s Dependent on test volume and input pressure.
Sensitivity limit		50 l/h
Max. number of test cycles		20 /h

8.2 Program sequence


Idle state: Valves 1 and 2 are closed. Pressure buildup: The internal motor pump increases the gas pressure p_e in the section by approx. 20 mbar compared with the input pressure at valve V1. During the test time, the integrated differential pressure sensor monitors the test section for leaks. When the test pressure is attained, the motor pump switches off (end of test period). The release time (10-30 s) is dependent on the test volume (max. 4.0 l).

If the test section has no leaks, the contact is released to the control box after approx. 30 s and the yellow LED lights up.


If the test section is leaky or if the pressure increase by + 20 mbar is not attained during the test period (max. 26 s), the VPS 504 generates a fault. The red LED is lit as long as the contact is released by the regulator (heat requirement).

After a short voltage drop during testing or during burner operation, an automatic restart is performed.


Programmer Idle state

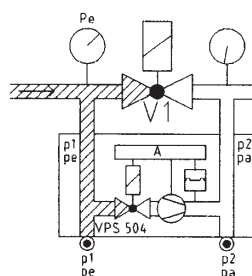


Pressure buildup

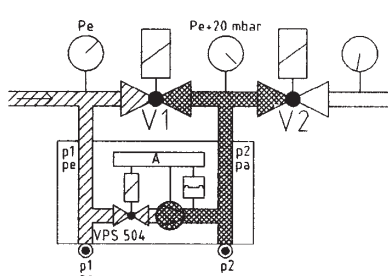

Operation

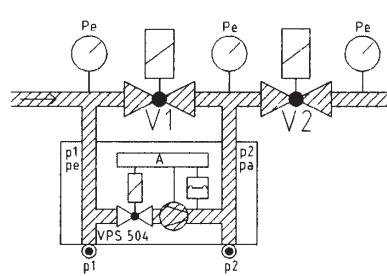


8.2.1 Program sequende schedule

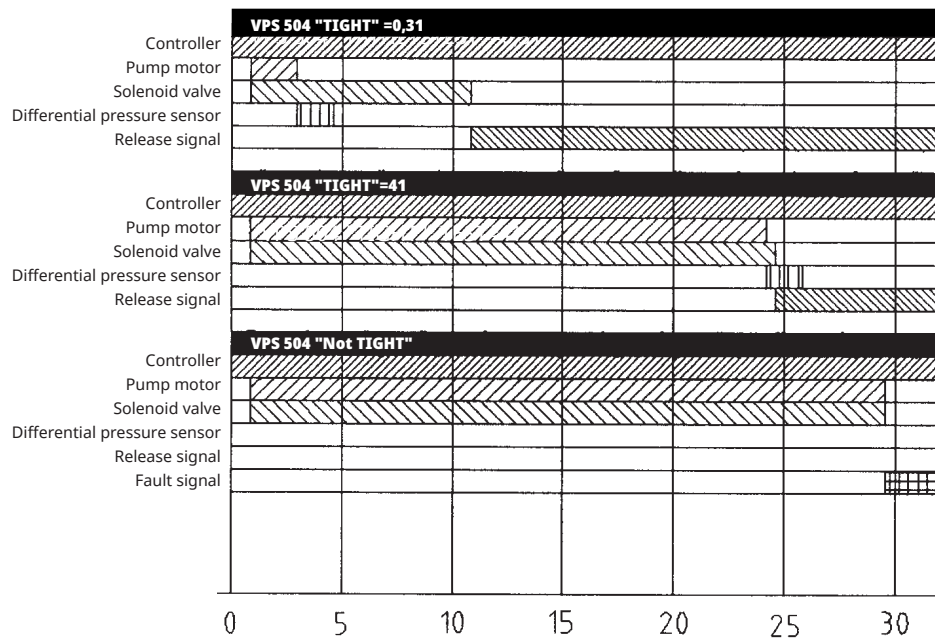

8.3 Electrical connection

The VPS 504 is connected in series between the temperature regulator and the control box via a 7-pin plug connector.

See wiring diagram!

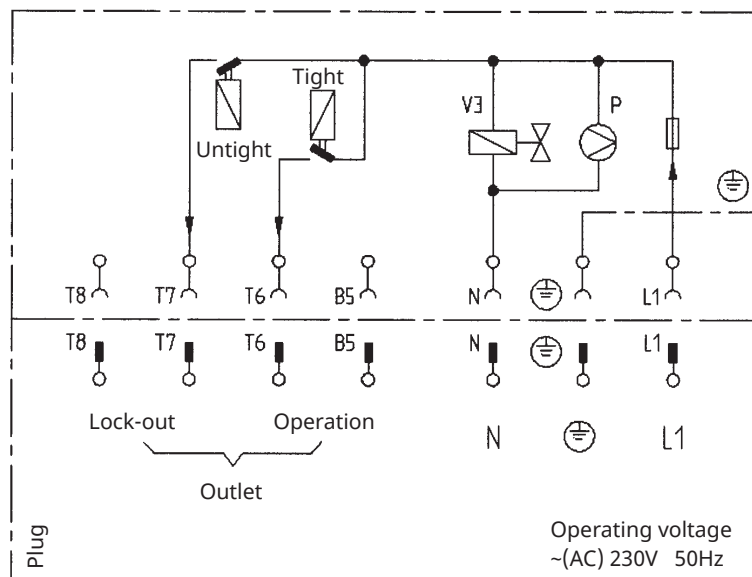

9. Gas pressure regulator

Type FRS



Nominal diameters Rp 3/8 - Rp 2 1/2
DN 40 - DN 150



Never close vent nozzle!

Pressure taps

1. Vent plug
2. Connection for external pulse G 1/4 screw plug ISO 228, on both sides, optional.
3. G 1/4 screw plug ISO 228, in inlet pressure range, on both sides

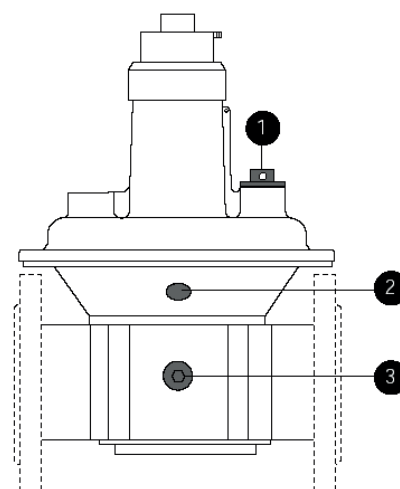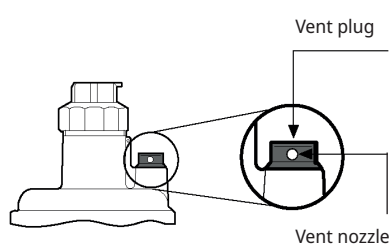

Max. operating pressure	500 mbar
Pressure regulator	Class A
Ambient temperature	-15 °C ... +70 °C
Inlet pressure range	5 - 500 mbar
Family	1 + 2 + 3
Outlet pressure range	2,5 - 200 mbar

Adjustment of outlet pressure
(setpoint adjustment)
Factory setting: Standard spring p 2
10-30 mbar

1.

1. Unscrew protective cap A.
2. Adjustment (+) Setting spindle B "Turn counter-clockwise" = Increasing outlet pressure (setpoint)

or

2.


Adjustment (-) Setting spindle B "Turn clockwise" = Reducing outlet pressure (setpoint)

4. Check setpoint


5. Screw on protective cap A.

6. Attach lead seal (Page 5).

1.

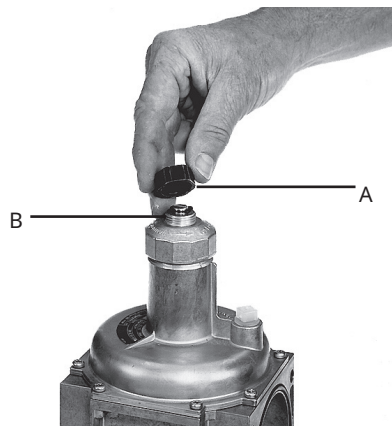


2.

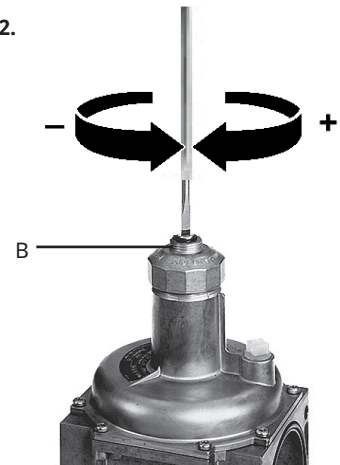


Replace setting spring 3-4

1. Remove protective cap. A. Release spring by turning adjustment spindle B counter clockwise. Turn spindle to stop.
2. Unscrew complete adjustment device B and remove spring C.
3. Insert new spring D.
4. Assemble complete adjustment device and adjust desired off-set.
5. Screw on protective cap A. Stick adhesive label E onto typeplate.
6. Attach lead seal.


3.

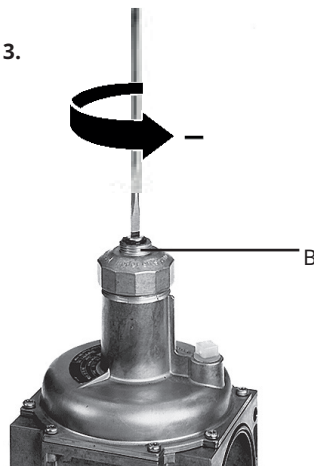



4.

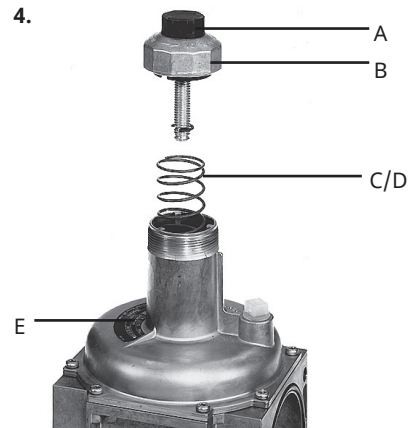

10. Double Solenoid Valve DMV-DLE

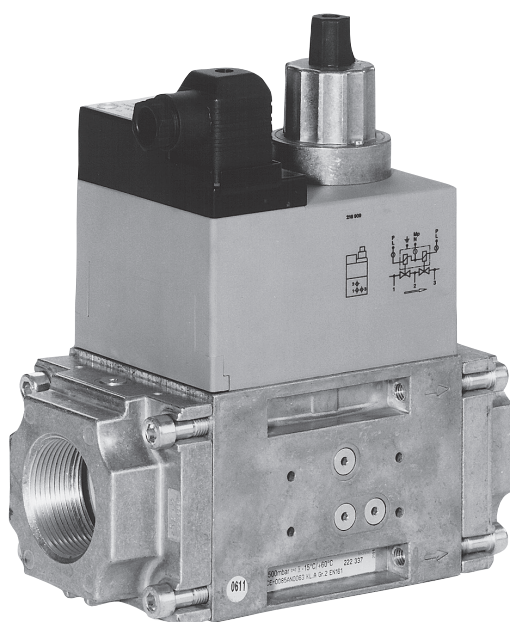


Nominal widths Rp 1/2 - Rp 2
Electrical connection IEC 730-1
(VDE 0631 T1)

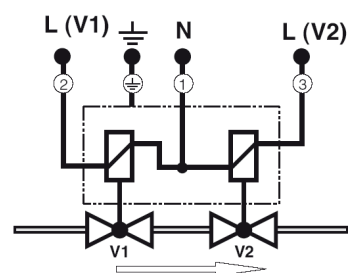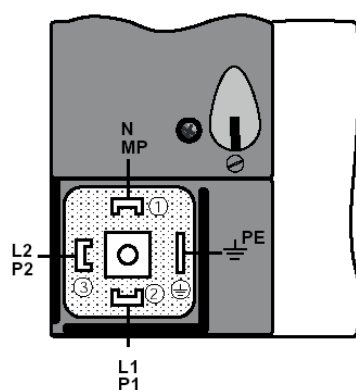


10.1 Technical data

Volt	U n ~(AC) 230 V
Valve	2 x Class A
Ambient temperature	-15 °C ... +60 °C
IP	54
Family	1 + 2 + 3
Max. operating pressure	500 mbar


10.2 DMV-DLE 512-520/11

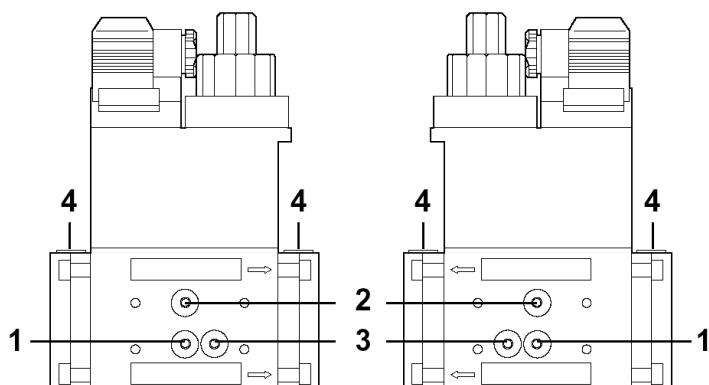


Pressure outlet 1, 2, 3, 4



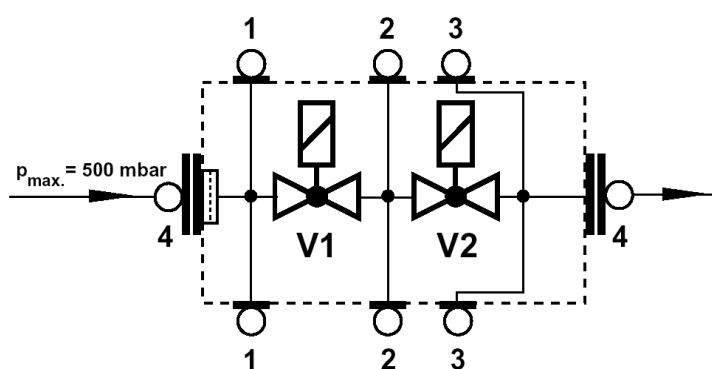


10.3 DMV-DLE 525/11

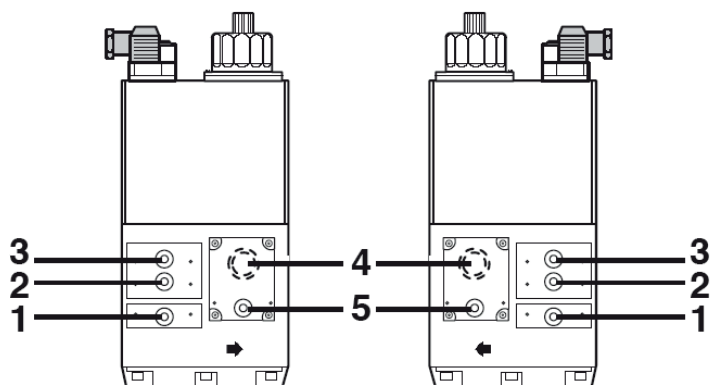


Pressure outlet 1, 2, 3, 5

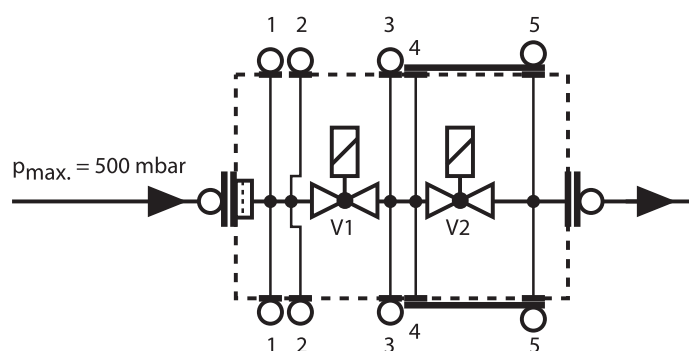

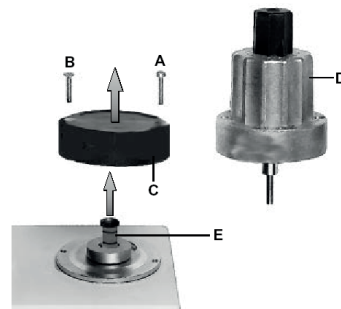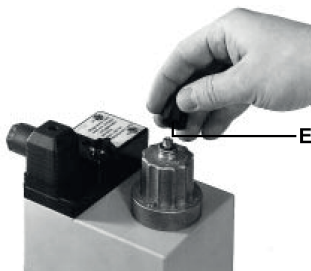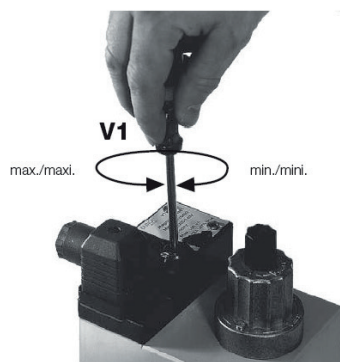

Main flow setting only possible at V1! Set main volume on open valve. Set valve V1 during operation. Check setting values continuously. Smallest setting volume flow:

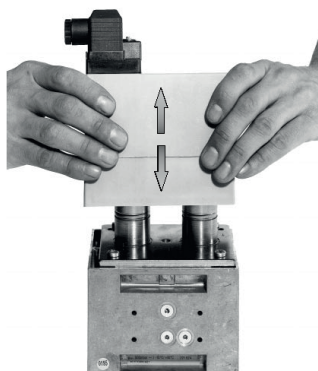

Rapid stroke adjustment V start

Factory setting DMV-DLE: Rapid stroke not adjusted

1. Unscrew the adjustment cap E from the hydraulic brake.
2. Turn the adjustment cap and use as a tool.
3. Turn a-clockwise = increase rapid stroke (+).

Replacing hydraulic brake unit or adjustment plate


1. Switch off firing system.
2. Remove locking varnish from countersunk screw A.
3. Unscrew countersunk screw A.
4. Unscrew socket head screw B.
5. Raise adjustment plate C or hydraulic brake D.
6. Remove sealing plug E
7. Exchange adjustment plate C or hydraulic brake D
8. Screw in countersunk and socket head screw. Only tighten socket head screw so that hydraulic brake can just be turned.
9. Coat countersunk screw A with locking varnish.
10. Leakage test: Pressure tap at sealing plug 2: DMV 507-520/11 Pressure tap at sealing plug 3: DMV 525/11 p max. = 500 mbar.
11. Perform functional test.
12. Switch on firing system.

Replacing the solenoid versions with hydraulic brake

1. Remove hydraulic brake or adjusting plate as described on page 6: "Replacing the hydraulic brake or adjusting disk", steps 1 - 5.
2. Replace solenoid
Important: Make sure that the solenoid no. and voltage are correct!
3. Remount hydraulic brake or adjusting plate as described on page 6: "Replacing the hydraulic brake or adjusting plate", steps 7 - 11.


11. Gas solenoid valve MVD 210/5 / MVD 215/5

11.3.1 Installation position

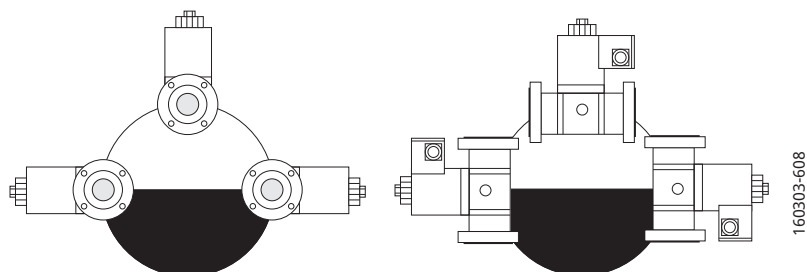


11.3.2 Electrical connection

Grounding acc. local regulations. AC

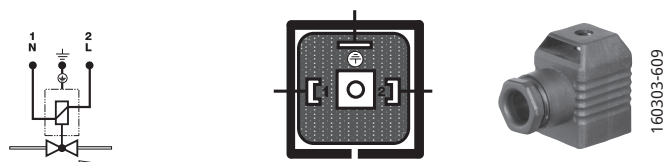


11.3.3 Pressure taps

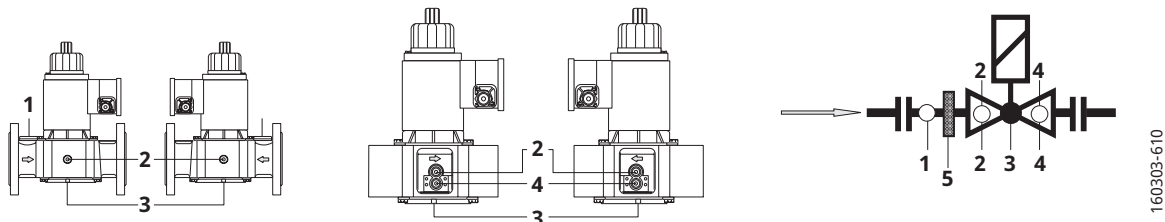

1. Only flange version from DN 25 Sealing plug G3/4 DIN ISO 228
2. Sealing plug G1/4 DIN ISO 228
3. Connection for C.P.I. Sealing plug G1/8 DIN ISO 228
4. Only threaded version. Bypass port under cover, optional.
5. Sieve

11.3.4 Mounting

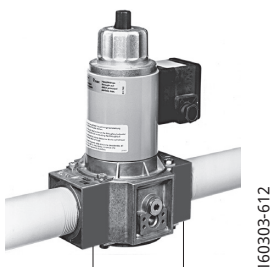


11.3.5 Setting the main flow

1.



2.

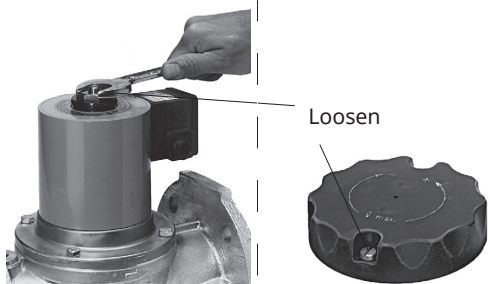

3.



12. Service

Service and maintenance work may only be performed by qualified personnel. Perform operational check of all safety systems and components at each service. Only Enertech original parts should be used when replacing components.



Use caution when operating the burner, surfaces may be hot.



12.1 Burner Service Schedule, Gas

Servicing must be carried out once a year or after 3,000 hours of operation.

Burner	1 year	3,000 h
Inspection of electrical installation	1 year	3,000 h
Leak check	1 year	3,000 h
Filter	1 year, replacement at $\Delta p > 10$ mbar	3,000 h, replacement at $\Delta p > 10$ mbar
Electrodes	Replacement/cleaning 1 year	Replacement/cleaning 3,000 h
Brake plate	Replacement/cleaning 1 year	Replacement/cleaning 3,000 h
Motor	1 year	3,000 h
Fan wheel	1 Year Replace if need for cleaning/imbalance	3,000 h Replace if need for cleaning/imbalance

12.2 Component replacement intervals

Components	Service life - Recommended replacement	Service life - Recommended replacement Operating cycles
Control system	10 years	250,000 starts
Valve control system	10 years	250,000 starts
Pressure switch	10 years	250,000 starts
Ignition system with flame guard	10 years	250,000 starts
UV flame sensor	10,000 h	N/A
Gas pressure controls	15 years	N/A
Gas valve without leak testing	10 years	250,000 starts
Gas valve with leak testing	Replacement upon fault detection	N/A
Gas pressure switch	10 years	250,000 starts
Safety blow-off system	10 years	N/A
Damper motor	N/A	500,000 starts
Contactor	10 years	500,000 starts



The burner and its components must be recycled according to applicable regulations.

12.3 Combustion device

1. Disconnect the main power and shut off the fuel supply.




Before obtaining access to electrical and fuel line components all supply circuits must be disconnected.

2. Remove cover (C) from fan housing and disconnect ignition and ionization cables.
3. Loosen nut (B) and pull out the fan housing on the guides.
4. By loosening screw(s) (A), the combustion device is released and can be lifted out from the burner.
5. Check and clean the brake plate and gas inlet, replacing components as necessary.
6. Check that the ignition and ionisation electrodes are correctly set, (see Gas nozzle chapter) - replace if necessary.
7. Refit the combustion device in reverse order.
8. Press the burner together and lock with nut (B).
9. Switch on the main power and open the fuel supply.
10. Start burner and check/adjust combustion.



Check for leaks in the gas line.

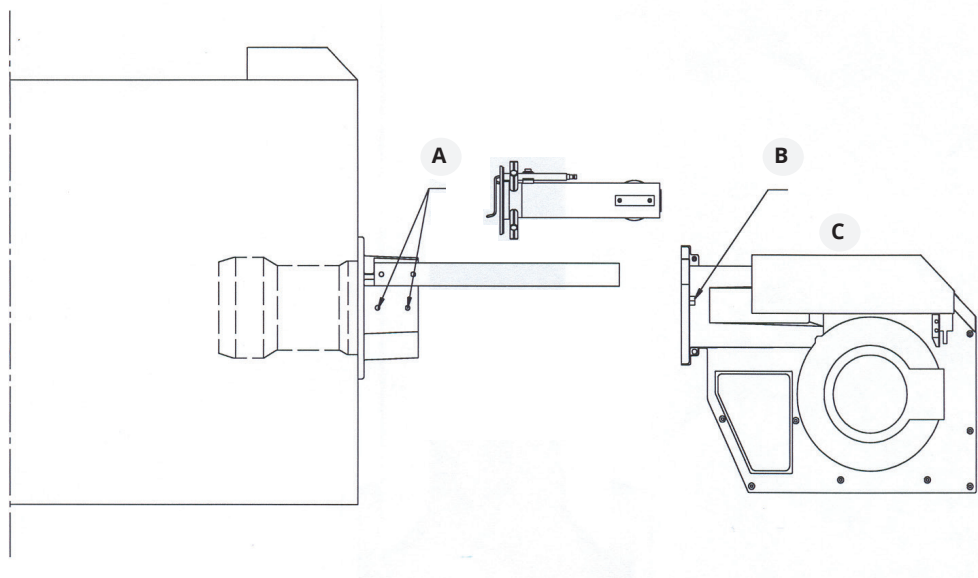

When servicing/replacing components that affect combustion, flue gas analysis and soot test must be carried out following installation.


12.4 Air damper

1. Disconnect the main power and shut off the fuel supply.



Before obtaining access to electrical and fuel line components all supply circuits must be disconnected.

2. Remove cover (C) from fan housing and disconnect ignition and ionization cables.
3. Loosen nut (B) and pull out the fan housing on the guides.
4. Remove the intake grille (D) to the air intake.
5. Loosen screws (E) holding the damper motor fixing plate and lift the damper motor out.
6. Clean the air damper and air intake, lubricate the damper shaft if necessary.
7. Refit the damper motor and mounting plate, ensuring that the damper shaft and control arm are correctly connected.
8. Fit the intake grille.
9. Press the burner together and lock with nut (B).
10. Switch on the main power and open the fuel supply.
11. Start burner and check/adjust combustion.

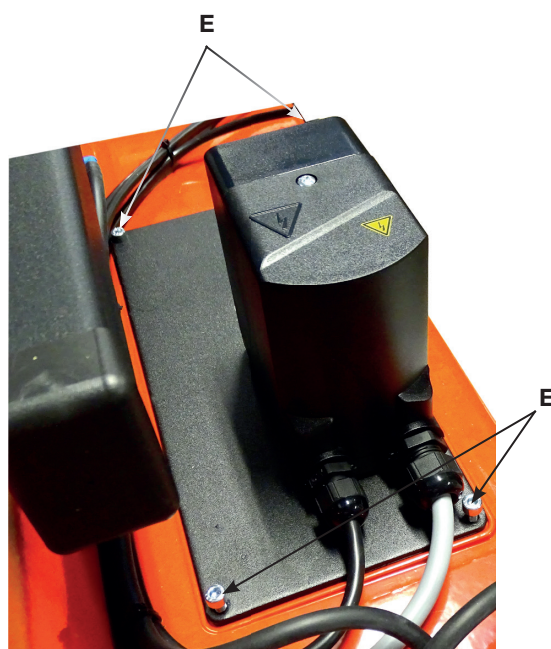


12.5 Replacement, Damper motor air

1. Disconnect the main power and shut off the fuel supply.






Before obtaining access to electrical and fuel line components all supply circuits must be disconnected.

2. Note the connection position of cables to the damper motor.
3. Disconnect cables from damper motor.
4. Loosen screws (G) to the damper motor fixing plate.
5. Disengage the damper motor and turn it to approx. 70°.
6. Lift up damper motor.
7. Remove the control arm (H) from the motor shaft.
8. Loosen screws (I) securing the damper motor to the fixing plate. Adjust the cams of the new damper motor according to the replaced motor, see chapter "Setting Damper motor" and fit the fixing plate.
9. Fit the control arm on the shaft of the damper motor. It is important that the screw is perpendicular to the flat surface of the shaft.
10. Refit the damper motor and mounting plate, ensuring that the damper shaft and control arm are correctly connected.
11. Connect the damper motor cable.
12. Switch on the main power and open the fuel supply.
13. Start burner and check/adjust combustion.

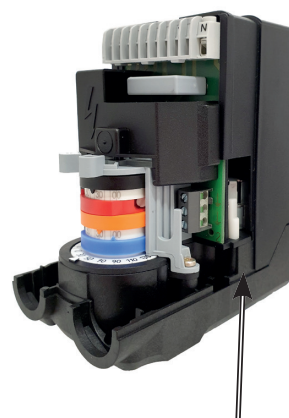

Releasing button

By pressing the button and snapping it down, the motor will be released and the damper can easily be turned. This function facilitates an exchange of damper motor.

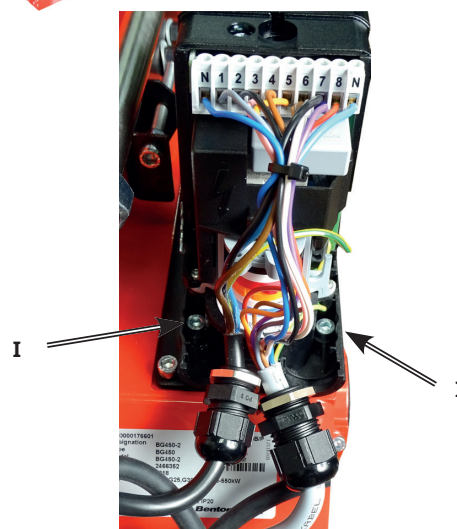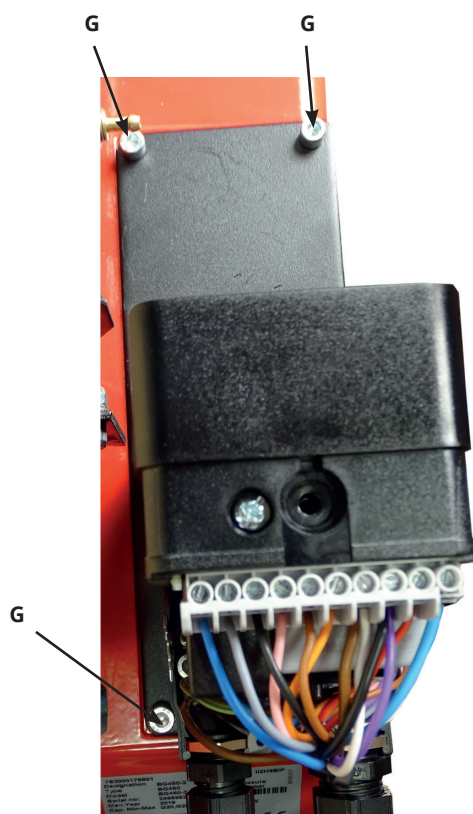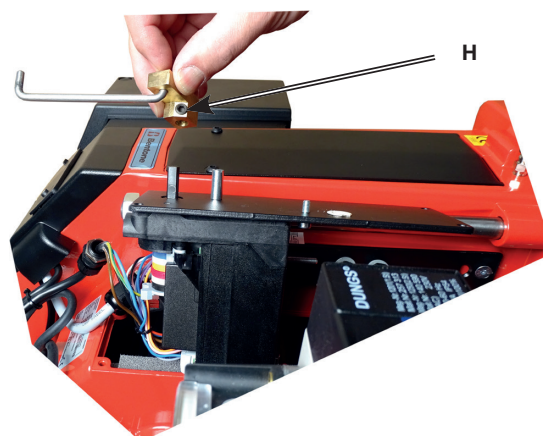


12.6 Fan

1. Disconnect the main power and shut off the fuel supply.



Before obtaining access to electrical and fuel line components all supply circuits must be disconnected.

2. Detach the electrical panel (Y).
3. Loosen the motor electrical connection and screws (X) enough to turn and lift out the motor.
4. Check the fan wheel attachment and any skew, replace if damaged.
5. Clean or replace the fan wheel.
6. Refit the parts.
7. Switch on the main power and open the fuel supply.
8. Start burner and check/adjust combustion.

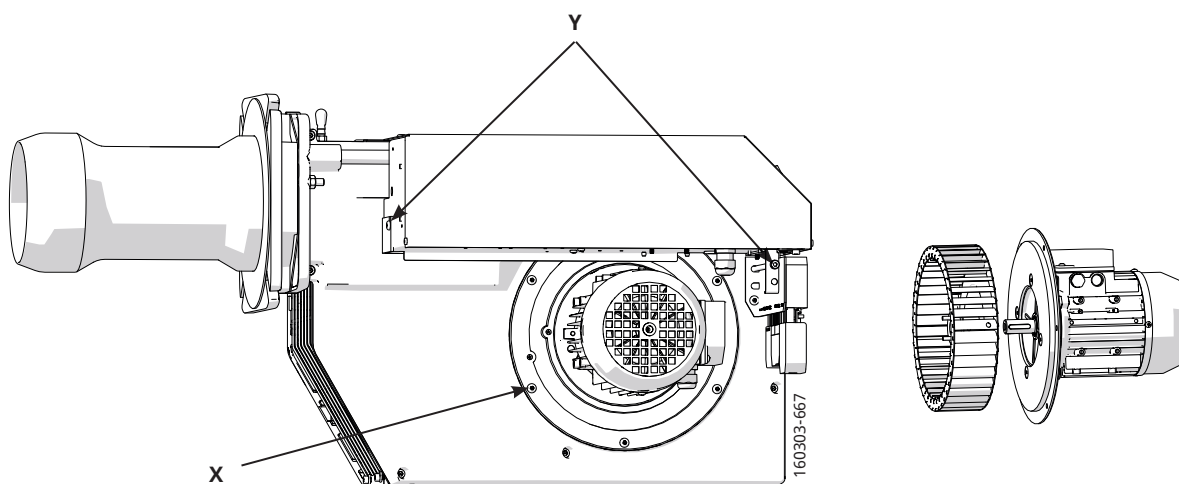

When servicing/replacing components that affect combustion, flue gas analysis and soot test must be carried out following installation.

12.7 Vibrations

Maximum permitted vibration level is 5.0 mm/s.

- Check tightness of fasteners.
- Check fan wheel for damage and contamination (replace if necessary).
- Check motor shaft and bearings. If they are worn, replace the motor.

Use screw to attach the vibration sensor.




12.8 Flame monitoring and ionisation current check

The standard version of the burner is monitored according to the ionisation principle. The ionisation current should be checked on initial start-up and at each service visit.

The cause of low ionisation current can be leakage current, poor connection to earth, fouling, or the angle of the ionisation electrode may need to be adjusted. Occasionally, an incorrect gas/air mix may result in poor ionisation current. Ionisation current is measured using a micro ammeter (μA) connected in series with the ionisation electrode and gas burner control. Connect the μA meter according to the diagram. The minimum required ionisation current is shown in the table. In practice, this current must be significantly higher, preferably more than $10\text{ }\mu\text{A}$. Connection of the μA instrument is made easier by the fact that all gas burners are equipped with a divisible ionisation cable.

Technical data	
For continuous operation!	
Idle voltage at ION-terminals	AC 330 V
<div><div>!</div><div>Protect the ionisation electrode from electric shock!</div></div>	
Short-circuit current	Max 0,5mA
Min. current for flame detection	Min 3 μA
Required current to ensure detection	Min 3 μA
Possible detection current	Max 20 μA

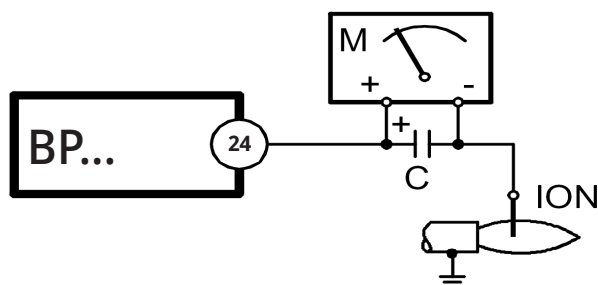

12.9 UV-5 detector

This should not be exposed to temperatures higher than 60°C . The signal running through the UV probe when it is illuminated cannot be measured. To check the flame, perform the following:

The LEDs can show the flame strength in Control mode by pressing the reset button for 3 seconds when the Flame LED flashes during start-up. In Control mode, the Status LED shines yellow, the Fan LED flashes, and LEDs 2-6 show the flame signal strength. Each LED corresponds to 20% of the total flame signal. 5 lit LEDs correspond to 100% and 2 LEDs correspond to 40%.

12.10 Replacement of electrical components

1. Disconnect the main power and switch off the fuel supply.



Before obtaining access to terminals, all supply circuits must be disconnected.

2. Note the connection of the existing component and disassemble.
3. Fit new component with same connection or with specified alternative connection.
4. Switch on the main power and check the operation of the new component.
5. Start burner and check/adjust combustion.



When servicing/replacing components that affect combustion, flue gas analysis and soot test must be carried out following installation.

13. Handing over of the installation

- Make repeated start attempts to ensure that the adjustments function.
- Close the ball valve during operation to check that the gas switch switches off at the set value.
- Remove the hose for the air pressure switch to check that the burner locks out.
- Check that all protective covers and measurement nipples are mounted and fastened.
- Fill out necessary test reports.
- Instruct the persons in charge of the operation on the service and maintenance of the installation and what to do should any troubles occur.
- Inspection and service must be carried out by authorized personnel.



Review and service should be performed by authorised personnel only.

14. Troubleshooting

Conditions favourable to trouble-free operation of the system can only be guaranteed through the interaction between three factors: electricity, gas flow and combustion air. If any of these factors change, it may cause a malfunction.

Before requesting servicing, check the following points:

1. Are the system's gas taps open?
2. Are the fuses intact and is the power on?
3. Are control devices (room thermostat, boiler thermostat, etc.) correctly set?
4. Is there sufficient gas pressure to the burner?
5. Are the burner controls on standby and not locked?
6. Is there sufficient air supply to the burner?

Cause of fault	Action
Burner does not start:	
No gas.	Make sure all gas taps are open.
No power.	Check the fuse, thermostat and electrical connections.
Burner motor does not start.	Motor protection has tripped. Motor faulty.
Burner control faulty.	Replace.

Burner motor running, no ignition spark at the end of pre-aeration:	
No power in the terminals.	Check the connector. Replace faulty burner controls.
Ignition electrodes in contact with each other or earth.	Adjust.
Ignition electrode porcelain damaged.	Replace the electrodes.
Poor connection to cable connectors.	Adjust connection.
Ignition cables damaged.	Replace.
Transformer damaged, no power to secondary winding.	Replace the transformer.
Ignition cable and ionisation cable swapped around.	Reconnect.

No flame propagation:	
Gas solenoid valve faulty.	Replace.
Gas solenoid valve does not open despite having power.	Replace solenoid valve terminals, or entire valve.
No power to solenoid valve.	Check the connection.
No electrical connection through air pressure gauge.	Check the air pressure gauge's settings and functions.
Ignition load incorrectly set.	Increase/decrease gas supply Reduce airflow.
Burner control faulty	Replace
Air pressure gauge incorrectly set or faulty	Check the settings and reset, or replace
No acknowledgement signal due to incorrect adjustment or misalignment of the control motor cams.	Check the settings and realign.

Burner trips after safety time limit despite flame propagation:	
No ionisation current or UV cell incorrectly positioned.	Adjust ionisation electrode and UV cell Check cables and connectors.
Burner control monitor faulty.	Replace burner control.
Voltage lower than 185V.	Contact an electrician.
Ignition electrodes disrupting ionisation current.	Adjust ignition electrodes. Re-polarise the transformer.
Poor earth connection.	Ensure adequate earth connection.
Phase and neutral swapped around.	Check wiring diagram and change accordingly.

172 615 06 2018-01-10

Cause of fault	Action
Burner trips during pre-aeration:	
Air sensor faulty or incorrectly set.	Increase/decrease air setting. Reduce air volume.
Ignition load incorrectly set.	Increase/decrease gas supply Reduce airflow.
Gas pressure too low.	Increase pressure. If necessary, contact gas supplier.
Pulsations at start-up:	
Ignition electrodes incorrectly set.	Adjust .
Gas pressure too high.	Check and adjust using pressure gauge and pressure control valve.
Flue gas side blocked.	Check the chimney flue.
Burner pulsates during operation:	
Burner incorrectly set.	Adjust.
Burner dirty.	Clean the burner.
Incorrect chimney.	Check and modify dimensions if necessary.
Burner functioning properly but with occasional blockage:	
Ionisation current too low.	Check. Must be at least 6µA, but should ideally lie between 8-20µA.
UV cell incorrectly positioned.	Adjust.
Voltage drop at certain times.	Must not drop below 15% of rated voltage. Contact an electrician if necessary.
Incorrectly set or faulty air sensor.	Check the settings and reset, or replace.
Ignition electrode overload.	Replace.
Burner control ambient temperature too high.	Insulate for heat, Max. 60 °C.
Ignition spark too weak.	Check the transformer.
Poor combustion:	
Poor draught conditions.	Check the chimney.
Flue gas temperature too high.	Boiler overloaded Decrease the gas volume, sweep the chimney if necessary.
CO2 content too low.	Choke the air supply. Check the boiler for any leakages. Choke the draught if too high.
CO content too high:	
Surplus air when using natural gas and liquefied petroleum (propane, butane).	Choke the air supply.
Poor air supply.	Open the air supply. Check flue gas damper.
Holes in gas nozzle clogged.	Clean.
Poor fresh air intake.	Check and increase.
Flame at incorrect angle due to combustion head out of position.	Check the combustion head and readjust.
Condensation build up in boiler and chimney:	
Flue gas temperature too low or gas volume too low.	Raise the flue gas temperature by increasing gas volume Insulate the chimney.

15. Service- and inspection protocol

Installation		Boiler	
Name:		Type:	Efficiency kW:
Address:		Burner	
		Type:	Efficiency kW:
Installed by:		Date:	

Date		Governor		CO ₂	CO	Fluegas temp	Ionisation current	Pressure		Efficiency
	Nm ³ gas/h							Fire room	Chimney	
		Before	After	%	%	°C	µ A	mbar	mbar	%
	Small Flame									
	Large Flame									
	Measures									

Date		Governor		CO ₂	CO	Fluegas temp	Ionisation current	Pressure		Efficiency
	Nm ³ gas/h							Fire room	Chimney	
		Before	After	%	%	°C	µ A	mbar	mbar	%
	Small Flame									
	Large Flame									
	Measures									

Date		Governor		CO ₂	CO	Fluegas temp	Ionisation current	Pressure		Efficiency
	Nm ³ gas/h							Fire room	Chimney	
		Before	After	%	%	°C	µ A	mbar	mbar	%
	Small Flame									
	Large Flame									
	Measures									



EU Declaration of conformity

Bentone Gas Burners

Type:	Certificate No.	Type:	Certificate No.
BFG 1	CE-0123CT1269	BG 550	CE-0123CT1326
STG 120	CE-0123CT1270	BG 650	CE-0123CT1348
STG 146	CE-0123CT1281	BG 700	CE-0123CT1359
BG 300	CE-0123CT1292	BG 800	CE-0123CT1360
BG 400	CE-0123CT1304	BG 950	CE-0123CT1371
BG 450	CE-0123CT1315		

This declaration of conformity is issued under the sole responsibility of the manufacturer.
The object of the declaration described above is in conformity with:

- Gas Appliance Regulation 2016/426/EU
- Machinery Directive 2006/42/EC
- EMC 2014/30/EU
- The Restriction of the Use of Certain Hazardous Substances (RoHS) Directive 2011/65/EU

References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:

EN 676:2020 Excluding the requirements of Annex J/K.
Automatic forced draught burners for gaseous fuels.

Additional information can be downloaded at: www.bentone.com

Manufacturer: Enertech AB
Näsvägen 8
SE-341 34 LJUNGBY
Sweden

Notified Body: TUV SÜD Product Service GmbH
Ridlerstraße 65
D-80339 München, Germany
Notified Body Number: 0123

Ljungby, 2022-10-10

Joachim Hultqvist
Technical Manager
Enertech AB

Ola Karlsson
Quality Manager
Enertech AB

UK Declaration of conformity

Bentone Gas Burners

Type:

BFG 1	BG 300	BG 550	BG 800
STG 120	BG 400	BG 650	BG 950
STG 146	BG 450	BG 700	

This declaration of conformity is issued under the sole responsibility of the manufacturer.
The object of the declaration described above is in conformity with:

- Gas Appliances (Enforcement) and Miscellaneous Amendment Regulations 2018
- Supply of Machinery (Safety) Regulations 2008
- Electromagnetic Compatibility Regulations 2016
- The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared:


BS EN 676:2020 Excluding the requirements of Annex J/K.
Automatic forced draught burners for gaseous fuels.

Additional information can be downloaded at: www.bentone.com

Manufacturer: Enertech AB
Näsvägen 8
SE-341 34 LJUNGBY
Sweden

Approved Body: TUV SÜD BABT Unlimited
Octagon House,
Concorde Way, Segensworth North,
Fareham, Hampshire,
PO 15 5RL, United Kingdom
Approved Body Number: 0168

Ljungby, 2022-10-10

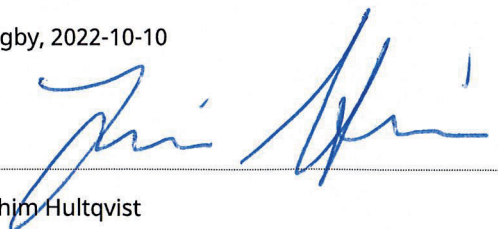

Joachim Hultqvist

Technical Manager
Enertech AB



Ola Karlsson

Quality Manager
Enertech AB

